



SeaLand® Bowl Seal Kit Installation Instructions

TO REMOVE OLD SEALS

1. Turn off water supply.
2. Press flush pedal and drain water from toilet bowl.
3. Remove pedestal cover (if applicable).
4. Loosen stainless steel band and remove plastic half clamps that hold ceramic bowl and plastic base together. CAUTION: Do not let ceramic bowl fall off base.
5. Tilt ceramic bowl forward, grasp vacuum breaker attached to back of toilet, and pull it out of toilet. Set toilet bowl aside.
6. Remove old seals. Inspect flush ball for nicks, scratches or mineral build-up. Clean or replace as necessary.

TO INSTALL NEW SEALS

1. Place thin seal on flush ball with THIS SIDE UP showing. Align notch on edge of seal with pin on edge of base (if applicable).
2. Place thick bowl seal on top of ball seal with notch on edge aligned with pin on base (if applicable). Align overflow holes on both seals only on toilets with overflow holes in toilet bowl.
3. Put ceramic bowl back on base, aligning notch with pin on base (if applicable), and centering the bowl outlet over the flush ball. Reattach vacuum breaker to back of toilet, pushing it all the way into the rubber gasket.
4. Reinstall plastic half clamps under loosened steel band, making sure tabs interlock on front of toilet. There will be a small gap at the rear of the toilet.
5. Tighten stainless steel band clamp to about 65 in.-lbs. of torque.
6. Turn on water supply.
7. Reinstall pedestal cover (if applicable).

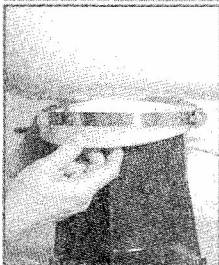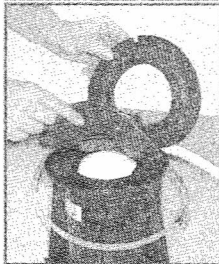

© Dometic Corporation

600344370 rev 8/08

 **Dometic®**

Dometic Corporation
13128 State Rt 226
PO Box 38
Big Prairie, OH 44611
1-800-321-9886