

**RV PRODUCTS**  
**8330\*3351 ZONE CONTROL THERMOSTAT**  
**PROGRAMMING INSTRUCTIONS**

1. Prior to thermostat programming, make sure all upper units, ceiling assemblies and control boxes are installed correctly and 12 volt power is on.
2. Place the thermostat slide switch in the "OFF" position.
3. Remove thermostat cover.
4. Pull fuse for 5 minutes. Reinstall fuse and wait another 5 minutes.  
**NOTE:** Do not touch any buttons during this time.
5. Put the thermostat in the programming mode by holding down simultaneously the UP and DOWN push buttons that are located to the right of the display window. Hold down the two push buttons until programming options start flashing (usually about 5 seconds).
6. Press the zone button until Zone 1 is displayed on the display window.
7. Press the mode button until the correct setup is shown for that zone. Be sure to toggle through one complete cycle until the desired options for that zone appear. Once the correct setup is selected for Zone 1, press the zone button and repeat the process for each additional zone that is connected to the thermostat.
8. After the correct settings are selected for each zone, move the slide switch momentarily to either heat or cool to save the selected options, then return the slide switch to the "OFF" position.
9. This will exit the programming mode and store the settings indefinitely.
10. Replace the thermostat cover.

