


**OSI Spare Tire Bike Rack
BT300**

Parts List

- 1) Bike Rack
- 2) Backing Plate
- 3) Security Bolt

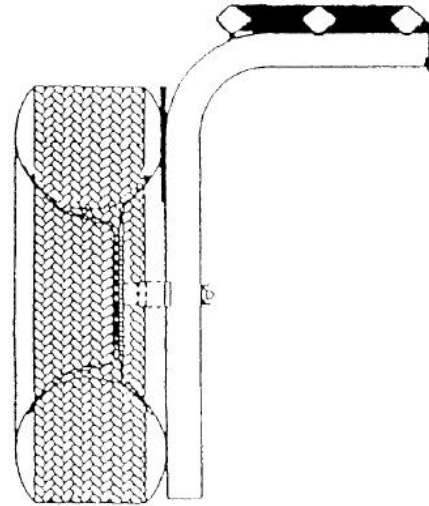

Installation

- 1) Remove spare tire from the vehicle.
- 2) Place the Backing Plate (A) on the spare tire mounting lugs (B).
- 3) Remount the spare tire and tighten all lugs nuts.
- 4) Slide the Bike Rack (C) onto the exposed portion of the Backing Plate.
- 5) Secure the Bike Rack with the provided Security Bolt. Make sure it is fully tightened.

WARNING: Failure to use a padlock to secure the Security Bolt will cause a void in the warranty. The Bolt may become loose or unthread itself due to vibration. Using a padlock will prevent the Bolt from unthreading.

Using the Bike Rack

- 1) Turn the knobs counter clockwise, and lift the top plate off the rack.
- 2) Place bike on the groove of the rack, making sure the bike is balanced.
- 3) When placing more than one bike alternate the direction of the bikes.
- 4) Place the top plate back on the rack, making sure the locking knob is towards the end of the rack.

NOTE: A cable may be run between the top plate, the rack, and both wheels to insure the quick release wheels cannot be removed.

CHECK OWNERS MANUAL FOR REAR DOOR & SPARE TIRE WEIGHTS LIMITATIONS

