 


Bob's

**CONTOURE<sup>®</sup>**  
SPACE SAVER APPLIANCES

# Compact Portable Ice Maker

## User Manual

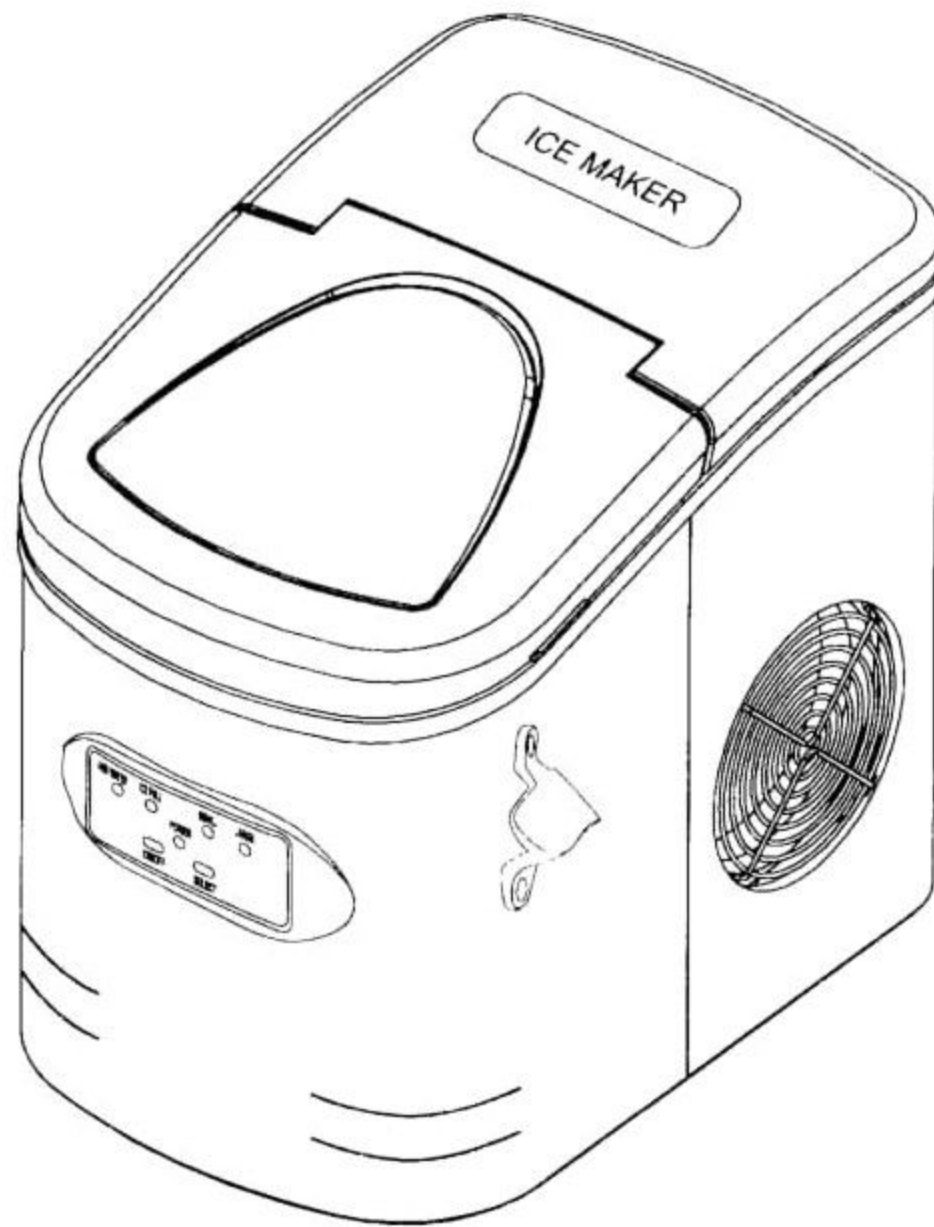

Model: RV-125B, RV-130R  
RV-135Z, RV-145BL



**SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY**

# IMPORTANT SAFEGUARDS

 **When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. **Read all instructions carefully.**
2. **DANGER!** To protect against risk of electric shock, do not immerse cord, plug or any parts of the unit in water or other liquids.
3. Close supervision is necessary when using this appliance near children. This appliance is not suitable for use by children.
4. Never leave an appliance unattended while in use.
5. Do not place an appliance on or near a hot gas or electric burner, or in a heated oven. Do not place on top of any other appliance.
6. Do not let the power cord of an appliance hang over the edge of a table or countertop or touch any hot surface.
7. Do not operate any electrical appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. If damage is suspected, contact the nearest authorized service center for examination, repair or electrical or mechanical adjustment.
8. Unplug from power outlet when not in use, before putting on or taking off attachments, and before cleaning.
9. The use of accessory attachments that are not recommended by the appliance manufacturer may cause fire, electric shock or injury.
10. Avoid contact with moving parts when the unit is in operation.
11. Never touch the cooling elements when the unit is in operation.
12. Do not use outdoors.
13. Do not use appliance for other than its intended use.

# UNPACKING YOUR ICE MAKER

1. Inspect and remove all packing materials. This includes the foam and any adhesive tape both inside and outside of the unit.
2. Inspect and remove any remains of packing, tape, or printed materials before powering on your appliance.

 **WARNING**

Please read this manual carefully before using.  
Retain it for your future reference.

## PRODUCT REGISTRATION

### Keep for your records to obtain Warranty Service

Thank you for using our product. This easy-to-use manual will guide you in getting the best use out of your appliance.

Remember to record the model and serial number. They are on a label in back of the appliance.

\_\_\_\_\_  
Model number

\_\_\_\_\_  
Icemaker serial number

\_\_\_\_\_  
Date of purchase

# SAFETY INSTRUCTIONS

## Electrical Requirements

 
### Wiring and Grounding Instructions

This appliance must be plugged into at least a 15 AMP 110-115 VOLT 60 Hz GROUNDED OUTLET. This appliance must be grounded. It is equipped with a 3-wire cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING!** Improper use of grounded wire can result in the risk of electric shock. Consult a physician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:

- A. Use only 3-wire extension cords with 3-blade grounding plug.
- B. The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
- C. It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.

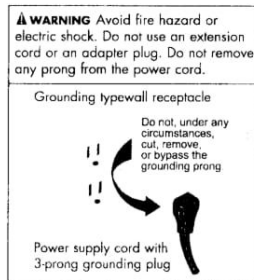

### Attempting any maintenance or cleaning:

To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

 
 
**NOTE:** Pressing the Power ON/OFF button to an off position does NOT disconnect the appliance from the power supply.

# TABLE OF CONTENTS

- Important Safeguards ..... 1-2
- Safety Instructions ..... 3
- Parts and Accessories ..... 5-6
- Operating Instructions ..... 7
  - Pre-Operating Instructions ..... 7
  - Operating Instructions ..... 8
  - Operating Process ..... 9
- Cleaning and Maintenance ..... 10
- Troubleshooting Guide ..... 11

Specifications	Model # RV-125B/RV-130R/RV-135Z/RV-140SS
Electrical Shock Protection	Class 1
Power	115V/60Hz
Ice Making Current	1.5 A
Ice Harvest Current	2.0A
Refrigerant	R134a/2.25 Oz
<b>Design Pressure</b>	
High Side	290 Psig
Low Side	88 Psig
Dimensions	9.5" x 14.1" x 12.9"
Weight	17.4 lbs.
Enclosure	ABS plastic


## PARTS, FUNCTIONS AND FEATURES

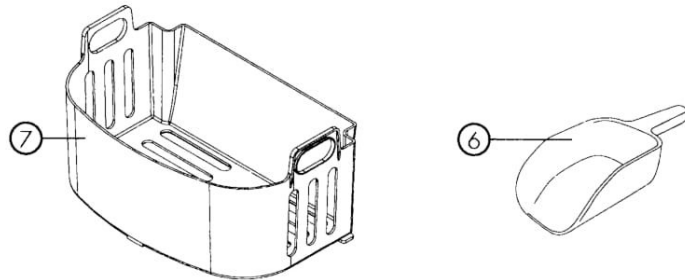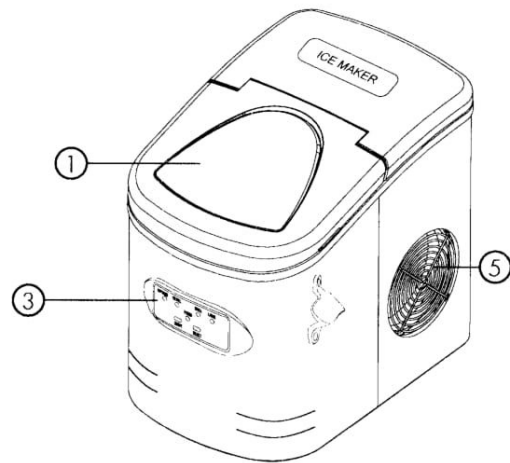

1. Cover with transparent window
2. Water reservoir (Not shown)
3. Control panel
4. Water Drain Cap (Not Shown - Front Bottom of Unit)
5. Compressor cooling fan (Do not block air flow)
6. Ice shovel
7. Ice basket

Control Panel: Easy to use, button function with LED indicators

 - A. Power ON LED indicator light
- B. Power ON/OFF button
- C. Ice cube SELECT SIZE button
- D. Selected ice size LED light indicator displaying: SMALL, and LARGE ice cubes to make
- E. "ADD WATER" (Alerts that there is no water in the water reservoir), must add water
- F. "ICE FULL" LED indicator

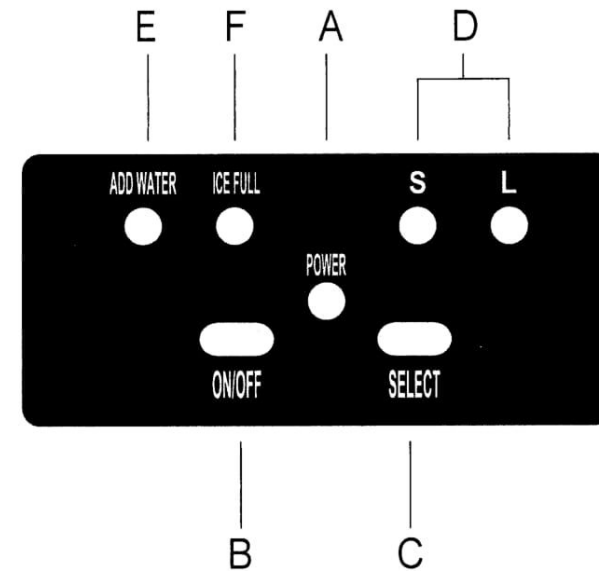


## OPERATING INSTRUCTIONS

This portable icemaker uses a fully automatic control system, with an advanced microcomputer for easy and convenient ice making. Making ice is simple and fast. Just add water, plug into an outlet, and press the ON button. You can select one of the two ice cube sizes with the touch of a button. When first turning on the unit or during icemaking cycles, the compressor will stay idle for 3 minutes, while energizing.

There are warning indicators that alert you to fill water when the reservoir is empty and to remove ice when the storage basket is full. The icemaker also has built-in safeguards that can limit accidental damage, automatically shutting down the system when necessary.

 
### Pre-Operating Instructions

Please read carefully.

1.  The incline angle of the icemaker cabinet should not exceed 45° during transportation or use. Do not turn the icemaker upside down.


Doing so could cause the compressor or refrigerating system to operate incorrectly. When the icemaker is moved or transported, please allow time for the fluids in the compressor to settle. Before using the icemaker for the first time, please wait 2 hours after the unit has been leveled and positioned in its proper place.

2. Please ensure the icemaker is level and on a stable table or platform to avoid malfunction.
3. The machine must be placed on a dry and level surface with sufficient ventilation, far from heat sources such as ovens, heaters and corrosive gases. Leave an 8-inch clearance on all sides of the icemaker for proper ventilation.
4. Do not fill the water reservoir with hot water. This may damage the icemaker. It is best to fill the water reservoir with water of room temperature or lower.

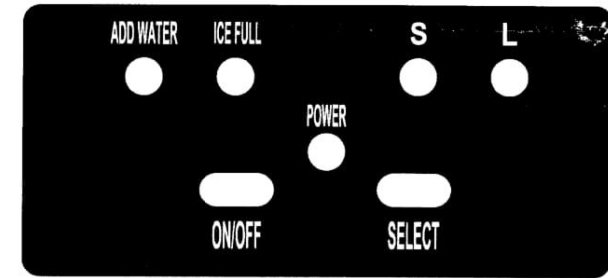

### Operating Instructions

 1. Open the top cover, take out the ice storage basket and fill the water reservoir with drinkable (tap, purified or bottled) 2.3 quarts water to the level mark and replace the ice storage basket.

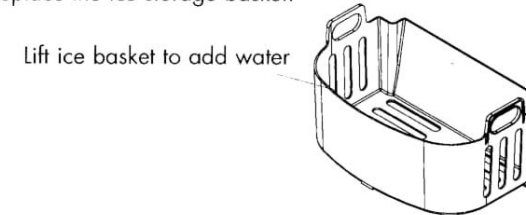

Make sure that the water level does not reach above the level mark or the bottom of the ice storage basket. Close the top cover.

**Note:** During the operation process, if the level of water in the water reservoir becomes too low, the machine will automatically stop operating and the "Add Water" indicator will display on the LED.

2. Plug the unit into a grounded outlet. Push the ON / OFF button on the control panel to turn on the machine.
3. Select the desired size of ice cube by pressing the S or L ice selector button.

S = Small ice cubes (Approx. 7 minutes)

L = Large ice cubes (Approx. 8 minutes)

The icemaker will start making ice soon after. The next cycle of 9 ice cubes is complete (based on water temperature, ambient room temperature and selected ice cube size).

**Note:** To stop the operation, press the ON/OFF button.

## Operating Process


1. Water is pumped from the water storage tank to the water box, which may take up to 1 minute.
2. The icemaking cycle begins when the evaporator rods are dipped into the water box. You will hear the compressor working.
3. It will take approximately 6-13 minutes for each icemaking cycle, depending on the size selected & room temperature. The larger the size or higher room temperature, the more time is needed to make the ice. After the cycle is finished, the water box will tilt forward and the remaining water will flow back into the water storage tank. The evaporator rods will then release the ice cubes.

**Note:** If the room ambient temperature is below 60° F, then small ice cube sizes are suggested to prevent ice cubes from fusing together.

4. Approximately 15 seconds later, the water box will tilt backwards and the ice pusher will push the ice into the ice storage basket. After the water box flips back to its original position, the next icemaking cycle will begin.
5. When the maximum capacity of ice cubes is collected and the ice obstructs the infrared sensor, the icemaker will automatically stop operating. The "ICE FULL" LED indicator will light up.

If more ice is needed, remove the ice from the ice storage basket; then replace the basket into the machine, making sure that the basket is placed back to its original position. Note: When replacing the basket, ensure that the infrared sensor is not obstructed by the basket so that the machine operates properly.

 
**WARNING!** Direct or reflected sunlight may cause the infrared sensor to malfunction. If the unit doesn't stop, even with ice cubes obstructing the sensor, move the unit out of the sunlight.


6. To continue making ice, check that there is water in the water storage tank. If there is no water in the water storage tank, then no water will be pumped into the water box, and the operation will stop. The "Add Water" LED display will light up. Press the "OFF" button. Fill the water storage tank with water, and then press the "ON" button for the icemaker to begin operating again. Allow the refrigerant inside the compressor at least 3 minutes to settle before restarting.
7. If the compressor stops for any reason such as water shortage, too much ice, power off, etc., do not restart the machine right away.  Wait at least 3 minutes before restarting the machine.

## CLEANING AND MAINTENANCE


Before using your icemaker, it is strongly recommended that you clean the icemaker thoroughly. Be sure to clean the icemaker regularly.

1. When cleaning, please make sure the power has been turned off and the plug is disconnected from the outlet. When plugging or unplugging the unit from the outlet, pull directly on the plug. Never pull on the power cord.
2. Remove the ice storage basket.
3. Drain remaining water from the unit by unplugging the drain plug on the front bottom side. When cleaning is completed, the plug must be properly inserted back onto the drain otherwise the icemaker will leak.
4. Use a mild detergent diluted in warm water and wipe with a soft towel or sponge.




 Solvents, detergents and abrasives must never be used for cleaning.

5. Wipe the inner parts, such as the ice storage basket, water reservoir, water box, ice pusher, and evaporator rods.
6. The outside of the icemaker should be cleaned regularly with a mild detergent solution, warm water, and a soft cloth.
7. Dry the interior and exterior with a soft cloth.
8. To begin making ice once the unit has been cleaned, pour clean water into the water reservoir and fill up to the level line follow operating instructions.
9. To ensure the cleanliness of the ice cubes, the water in the water storage tank should be replaced every 24 hours.

 Never tilt or place the icemaker on its side, otherwise you must wait 10 hours for compressor coolant to settle.

 10. When the machine is not in use or will not be used for an extended period of time, pull out the drain plug at front bottom of the machine to empty the remaining water in the water reservoir completely. (Follow the instructions in number 4 above.)

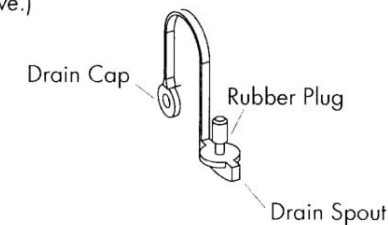

## TROUBLESHOOTING GUIDE

Problem	Possible Causes	Solution
"ADD WATER" indicator light turns on.	Low water level or lack of water.	Add water and the icemaker will operate automatically.
There is no indication on the control panel.	Disconnection of plug.	Check that the plug is plugged into the electrical outlet.
"Ice Full" and "Add Water" indicators light up simultaneously.	Electrical Power Surge or There may be air in the lines or the lines are blocked. The water tank cannot detect water level.	Turn off the icemaker, pull out the electric plug, fill it with water if needed, replace the plug and then restart the unit.  <b>or</b> Check if ice is blocking the ice pusher. Turn off the unit; let the ice melt and restart. Otherwise, call Haier America Customer Service.
The "Ice Full" indicator light is on.	The ice basket is full or the ice basket is not full or no ice in the basket.	Remove ice from the ice storage basket to make more  or hold down the "Select" button for 5 seconds, the ice maker will make ice for 10 cycles even though the "Ice Full" indicator is lit.
The unit does not operate.	Power is not being supplied to the unit. The ambient temperature or the water temperature is too high.	Plug the unit into a standard 110/120 Volt, 60 Hertz power source. Please run the icemaker in temperatures below 90°F and/or pour colder water into the water reservoir.
Ice blockage. No ice is being made.	Making ice takes too much time.	Turn off the machine. Start the machine after the ice block melts. Or change the size selector to small ice cubes.
The icemaking cycle seems normal but no ice is produced.	There is refrigerant leakage. A pipe in the cooling system is blocked.	Consult a qualified technician or call Haier America Customer Service.

**Note:** There is protective circuitry inside this icemaker to protect the circuitry from overheating and the icemaker will automatically shut down to prevent damage if activated. Please disconnect power cord and restart after 30 minutes of cooling down time.

### CONTOURE Limited Product Warranty

REGISTER ONLINE. IT'S QUICK AND EASY! [www.CONTOUREUSA.com](http://www.CONTOUREUSA.com) or 1-888-656-9317  
For any warranty related questions please send us an e-mail: [warranty@contoureusa.com](mailto:warranty@contoureusa.com)

Warranty registration is not mandatory, but doing so will help us to service you more quickly if you need to present a warranty claim. Please go online to complete and return this warranty registration to us.

NQP/Contoure USA warrants this CONTOURE product ("product") to be free of all defects in material and workmanship for the applicable period specified below commencing from the date of original purchase. This warranty extends to the original buyer only.

This product warranty does not cover any damage caused by shipping or mishandling.

**Ninety (90) Day Full Warranty:** Within ninety (90) days from the date of original purchase, NQP in its sole discretion, will either repair or replace, free of charge, any part proving defective in material or workmanship. All warranty repairs and service must be performed at a NQP location of service by an authorized NQP technician. All expenses related to replacing or repairing a defective part under this ninety (90) day warranty shall be assumed by NQP except the cost of transporting the product to and from NQP, which shall be assumed by the buyer. If the product is replaced, the replacement will be with a product that is identical or equivalent to the warranted product. If the product cannot be repaired or replaced, NQP will issue a refund to the buyer for the original purchase price less that amount directly attributable to use by the buyer.

**One (1) Year Limited Warranty:** After the expiration of the ninety (90) day warranty, and within one (1) year from the date of original purchase, NQP will replace any part proving defective in material or workmanship with a product that is identical or equivalent to the warranted part. The buyer shall assume the cost of transporting the defective product to and from NQP. If the product cannot be replaced, NQP will issue a refund to the buyer for the original purchase price less that amount directly attributable to use by the buyer.

**Warranty Exclusions:** This warranty does not apply to any costs, repairs or services for the following:

- Service calls to correct the installation of the warranty-covered products, to explain the usage of the product to the buyer, or to reset or replace home circuit breakers or fuses
- Repairs necessitated by use other than normal home use
- Damage resulting from misuse, abuse, accidents, alternations, improper installation, fire, flood acts of God or damage caused by the shipping of the product by the buyer to NQP
- Corrective work necessitate by repairs made by anyone other than a NQP authorized service technician
- Costs incurred for disposing the product at locations other than a NQP facility

**Hot to Obtain Warranty Service:** Upon discovery of any defect, malfunction, or nonconformity in the warranty-covered product, the buyer should visit [www.ContoureUSA.com](http://www.ContoureUSA.com) and complete the warranty service request form online.

**Notice to Buyer:** This warranty gives the buyer specific legal rights, and the buyer may also have other rights which vary from state to state. You have the right to bring any action at law or equity to resolve disputes concerning or to enforce the provisions of this warranty. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration and extent of this written warranty.

Inquiries: If you have any questions concerning CONTOURE's product warranty please visit: [www.ContoureUSA.com](http://www.ContoureUSA.com) or send us an e-mail at [warranty@contoureusa.com](mailto:warranty@contoureusa.com)

Thank you again for purchasing your CONTOURE product!