

Water Resistant Wireless Speaker

User's Guide for Model ISBW249 v2286-01



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Unless otherwise noted, do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING: Shock hazard - Do Not Open.**
- **CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.**
- **WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**
- **WARNING: Do not ingest battery, chemical burn hazard.**
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov This product meets and complies with all Federal regulations.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in

Overview

Features

- IPX4 water resistant
- Bluetooth 5.0 wireless - range 60 ft.
- Voice prompts announce speaker functions
- Speakerphone
- FM Radio
- Aux In (3.5mm audio input)
- MicroSD memory card port - supports MP3 files
- USB media port - supports MP3 files
- Built-in rechargeable battery
- Battery life: approx. 3 hrs. playtime at 100% volume, approx. 6 hrs. at 50%

Includes

- USB power cable for battery recharge
- User's Guide

1. Speakers

2. Speakerphone Mic

3. **Volume/Skip:** Press to adjust volume level. Press and hold to skip audio tracks (BLUETOOTH, USB, SD MODE).

4. **Power/Source:** Press and hold to turn the speaker on or off. Press to switch between Bluetooth and FM Modes (USB/SD Modes switch automatically when a drive is inserted).

5. **Bluetooth & Battery Charge Indicator LED:** LED will flash blue when pairing Bluetooth, and turn solid when successfully paired. LED will turn solid red when charging battery, and turn off when fully charged.

 
6. **Pair/Play/Pause:** Press and hold to connect to a Bluetooth device. Press to play or pause audio tracks.

7. **USB Media Port:** Connect a USB drive to play media on the drive.


8. **Aux In (3.5mm audio input):** Connect and listen to an audio device using 3.5mm audio cable (not included).

9. **DC Power Input:** Use the input to charge the internal battery and power the speaker.

10. **MicroSD Card Port:** Connect a MicroSD card to play media on the card.

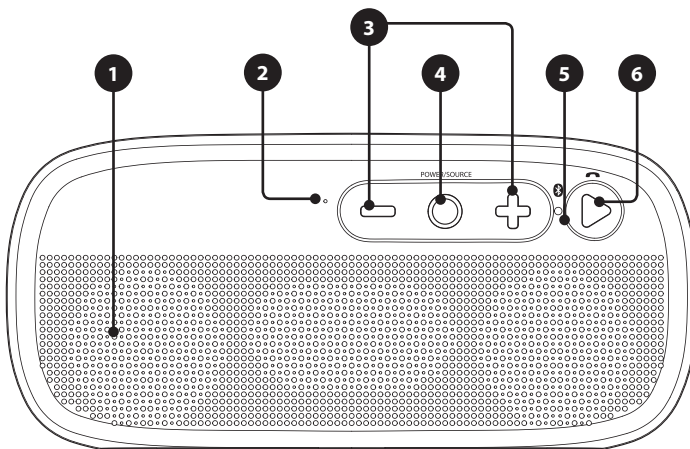

Front

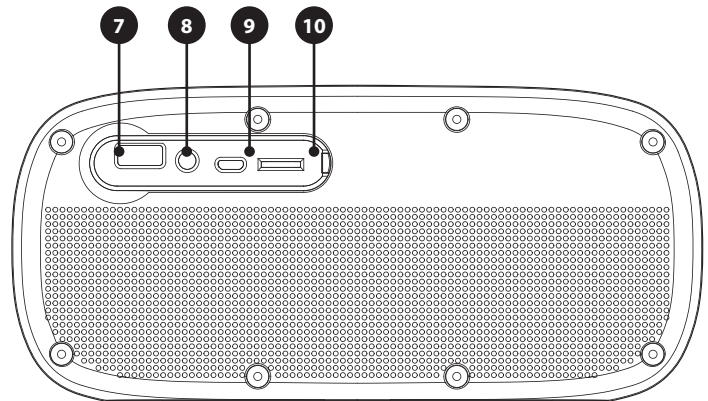 


Rear

Water Resistance Level IPX4


- Suitable for indoor and outdoor use in the presence of incidental or light exposure to splashing water, rain, or snow.
- It is not recommend to submerge this speaker in water for any amount of time.

 IMPORTANT: To ensure your speaker is prepared for use in a wet environment, disconnect and remove any power cables, and tightly close the charging port water cap. If the water cap is not properly closed, water resistance will be compromised and could result in damage to the speaker or personal injury to the user.

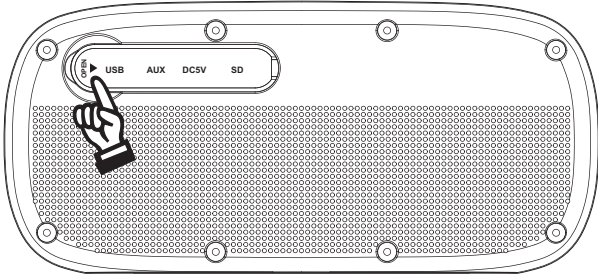

Charging the Battery

 To power the unit or charge the internal battery, plug the USB charging cable into the DC Power Input on the speaker and a powered on computer or USB power adapter (not included) and standard power outlet. **Play time with a fully charged battery is approximately 2.5 to 3 hours at full volume, or 6 hours with the volume at 50%.**

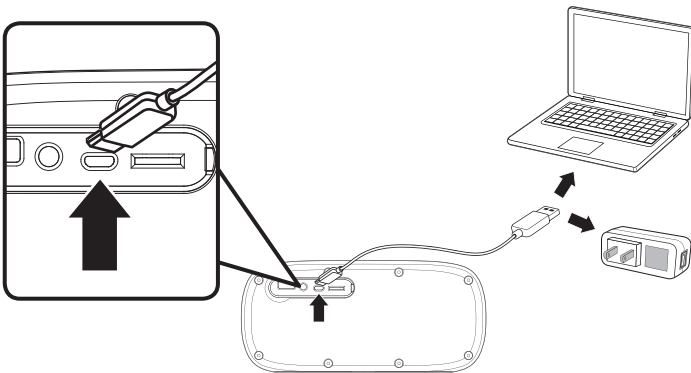

WARNING: DO NOT CHARGE THE SPEAKER OR A MOBILE DEVICE WHILE IT IS NEAR WATER OR IF IT MAY GET WET. ALLOW AMPLE TIME TO DRY AFTER BEING SPLASHED.

FM Radio

Radio Reception

An FM receiver is built into the speaker. Adjust the position of the speaker to improve FM radio reception.

NOTE: The USB cable (included) doubles as an FM antenna. Insert the cable in the DC In port for FM reception.

Radio Tuning and Saving Station Presets

1. Press **○** to select **FM Radio Mode**, this will be indicated by a voice prompt.
2. Press and hold **▶** to begin to scan and save radio stations automatically.
3. Press and hold **— +** to cycle through saved radio stations.

Customer Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: **1-888-999-4215** | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2019 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Bluetooth Wireless

 
Pairing & Playing Audio

When first powered on, the speaker defaults to Bluetooth Mode, indicated by a voice prompt. All other play modes will change automatically when connected to the different audio sources.

1. Power on the speaker by pressing and holding the **○** button. When first powering on, the unit will start in Bluetooth Mode, indicated by a voice prompt. When pairing, remain within 3 feet of the Bluetooth device.
2. Using the controls on your Bluetooth device, select **ISBW249** in the Bluetooth Settings to pair. If need be, refer to the user's manual for your specific device for more information.
3. When successfully paired, a voice will announce "Bluetooth is connected" and the LED indicator will turn solid blue. Audio from the connected Bluetooth device will now be heard through the speaker.
4. Use the controls on the connected Bluetooth device to select and play audio. Use the speaker controls or the connected Bluetooth device to play, pause, and adjust the volume level.
5. After initial pairing, press and hold **○** until the voice prompt says "Power on." The speaker will power ON and automatically connect to the last Bluetooth device used. **Note:** If your device should become unpaired or you find it is unable to connect, press & hold the **▶** button to enter to Pairing Mode. A voice will announce "Bluetooth is connecting" and you can connect to the speaker manually.

USB & MicroSD Memory Card

1. Load a USB drive or MicroSD Card into the corresponding port. The speaker will automatically detect the connection and start playing.
 - Press **▶** to pause or play media.
 - Press and hold **— +** to change tracks back or forward. Press to change the volume level.

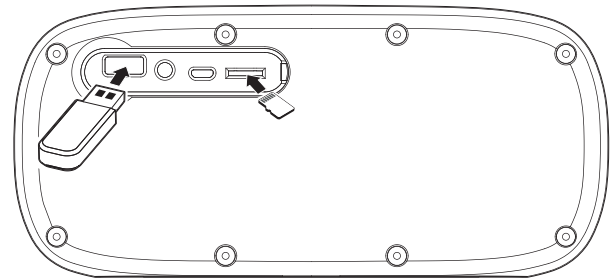

Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In** on the unit and the **audio output/headphone jack** on an audio device. The speaker will automatically detect the connection.
2. Use the controls on the connected device to select and play audio.

