

2004-2009 Dana Kirkstall IFS 84



Install Instructions for SS28557-LH SS28558-RH Draglink Ends SS28560-RH SS28561-LH Tie Rod Ends

1. Measure length of assembly prior to removal.
2. Use penetrating fluid as needed on threads.
3. Loosen sleeve clamp and remove cotter pin and tie rod nut end.
4. Pop taper loose UN thread rod end.
5. Check taper size on old and new to insure correct size and thread size.
6. Re assemble to measured length.
7. Tighten nut & clamp to proper specs.
8. Install cotter pin.
9. Have alignment checked.

Your comments are greatly appreciated.
Please feel free to contact SuperSteer® at 888-898-3281
Or e-mail at john@supersteerparts.com

