

Install Instructions for SS28559-8 lug Tie Rods & SS28723 6 Lug Tie Rods

- 1. Measure the length of the tie rod assembly before removal-Note measurement
- 2. Loosen nut on out tie rod end, pop taper loose.
- 3. UN Thread inner ball socket from center link and remove tie rod.
- 4. Adjust length to match original measurement.
- 5. Apply blue lock tite to ball socket threads and tighten to proper torque.
- 6. Install outer end in taper and tighten nut to proper torque.
- 7. RE Check length and tighten adjustment lock nut.
- 8. Grease both ends.
- 9. Have an alignment done.

Your comments are greatly appreciated. Please feel free to contact SuperSteer® at 888-898-3281 or e-mail at <a href="mailto:john@supersteerparts.com">john@supersteerparts.com</a>

