

# DINOSAUR ELECTRONICS

(541) 994-4344


## Instructions for the UIB 24VAC Rev. 3.0

**This board should be installed by trained service technicians**

This board comes from the factory configured as:

- Delayed, 3-try
- 17 sec. delay, 7 sec. fire, 10 sec. between fire cycles
- local and remote flame sense
- 1.5 microamp flame sensitivity

To change to single-try,  
remove this jumper.

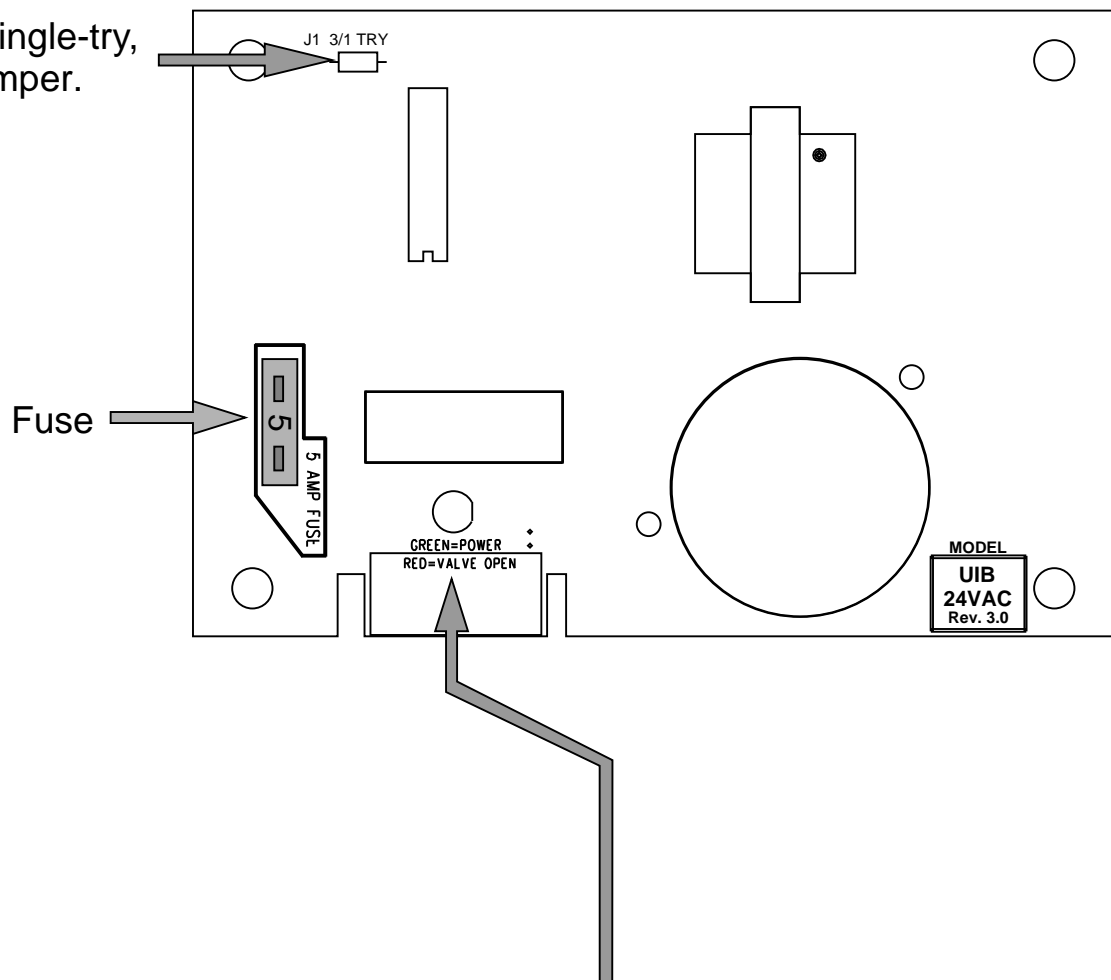

If this LED does not light up green, then check:  
LIMIT SWITCH  
SAIL SWITCH  
5 AMP FUSE (on circuit board)