

Installation Instructions

Congratulations on joining the SnapPad family!



Quick Instructions

SnapPads are designed to stabilize your RV on any terrain while eliminating the hassle of placing, retrieving & storing dirty jack pads.

Have questions or need assistance?
Contact us anytime!

1.855.762.7723
info@rvsnappad.com

1

MANUAL OPERATION

You'll need to manually operate your jacks.
Refer to your manual.

2

2 IS BETTER THAN 1

Grab a helper. One operate the controls & one to line up your SnapPad.

3

CONFIRMATION

After completion visually confirm the lip is fully engaged.



1. Line 'em up.

Raise your jacks and line up your SnapPads.



2. Lower jacks.

Lower your jacks, stop and readjust to make sure they line up.



3. 'Snap'

Continue applying pressure until the lip snaps into place.

5th Wheel Detailed Instructions

Installation time: 3 - 6 minutes per pad.

Video instructions can be found on our website www.rvsnappad.com or on YouTube - Search 'SnapPad XTRA install vid'.

Important Notes

1. Snap Pad installation should be performed on a level or near level surface -- preferably a hard surface (concrete or asphalt). Wheel chocks should be placed in front of and behind the RV wheels for additional safety.

2. *****SnapPads MUST FIRST BE INSTALLED ON THE FRONT JACKS (landing gear) before continuing to the rear 2 or 4 leveling jacks. Front jack installation must be done while the RV is hitched up to the truck. For safety, also connect the RV's break-away cable to the truck before installation.*****

3. As front jacks generally extend one-at-a-time, it is recommended that SnapPad be installed on the landing jack pad that will touch the ground first.

4. *****Spread a small bead of concentrated dish soap or grease around the lip of the SnapPad and metal landing foot to aid in installation.***** (Wipe excess away once installation is complete)

5. In most systems, once the first landing jack pad develops enough pressure against the SnapPad, the other landing jack will extend. Keep a watchful eye on the second landing jack pad as it extends. Stop extending it when the pad is about 3 to 4 inches from the ground. *****KEEP YOUR FINGERS AND ANY FOREIGN OBJECTS CLEAR WHEN LOWERING THE JACK INTO PLACE.*****

6. Carefully place and center the second SnapPad under the landing jack pad. Begin to extend the front landing jacks until the second pad touches the SnapPad. If you feel that either landing pad is not centered on the SnapPads, retract the landing gear enough to re-center the SnapPads and proceed with extending the landing gear to complete the SnapPad installation.

7. *****Once SnapPad installation is complete on the front landing jacks, the TRUCK MUST BE DISCONNECTED AND PULLED AWAYED from the RV before installing SnapPads on the rear 2 or 4 leveling jack pads.*****

8. Wipe off any excess soap or grease and repeat installation process, in sequence, on the remaining jacks.

Motorhome Detailed Instructions

Installation time: 3 - 6 minutes per pad.

Video instructions can be found on our website www.rvsnappad.com or on YouTube - Search 'SnapPad Xtra install vid'.

Important Notes

1. Snap Pad installation is best performed on a level or near level surface - preferably a hard surface (concrete or asphalt). Wheel chocks can be placed in front of and behind the RV wheels for additional safety.

2. *****Most motorhomes will release their airbags prior to engaging the jacks. This will lower the entire RV at the beginning of the leveling process. You may place your first SnapPad prior to this however be careful to not get caught underneath your RV during the lowering process!*****

3. *****Spread a small bead of concentrated dish soap or grease around the lip of the SnapPad and metal landing foot to aid in installation.*****

4. Generally one side will level first, take note which side that is and start there. Install one SnapPad at a time.

5. Most jacks are 18" - 24" under your RV. Use a tool such as a broomstick to align your SnapPad may be necessary.

6. Keep a watchful eye on the landing foot as it extends. Stop extending when the foot is about 3 to 4 inches from the your SnapPad. Double check to make sure it is centered. Re-align if necessary and then continue extending the landing gear to complete installation.
*****KEEP YOUR FINGERS AND ANY FOREIGN OBJECTS CLEAR WHEN LOWERING THE JACK INTO PLACE.*****

7. You should hear a distinctive 'Snap' as the lip engages. *****Visually confirm the lip is fully engaged around the perimeter of the landing foot.*****

8. **If your lip hasn't fully engaged raise your jack and place a shim (small piece of wood) under the side that hasn't engaged. Lower your jack again until that side snaps into place.**


6. Wipe off any excess soap or grease and repeat installation process, in sequence, on the remaining jacks.

Helpful Hints

- It's best (and easiest) to install your SnapPads one at a time on a level, hard surface.
- Each leveling system will have it's own manual operation function. Please refer to your owners manual for specific directions.
- Grab a helper! It's safer, faster, and more efficient with two people.
- Install each SnapPad individually and visually confirm the reinforced lip has engaged on the complete diameter. It is critical your SnapPad has been installed fully and correctly.


SnapPad Info & Statistics

- Dimensions 11" Wide x 11" Long x 1.83" Thick
- Once installed they add an extra 1.125" to your jack thickness
- 4.8 Lbs. per Pad
- You're helping our environment! SnapPads are made from American recycled tires. That means SnapPads are not only durable and versatile but environmentally friendly too.
- Will work on any type of surface, level or uneven, including: Asphalt - Concrete - Grass - Gravel - Mud Sand - Resin - Ice - Snow.
- Scientifically tested to maintain integrity at over 120° F down to -40° F.
- It takes 1,300 lbs. of vertical pressure to install your SnapPads. This ensures no matter how far off the beaten path you venture, your SnapPads will be there with you.
- Proudly made in the U.S.A

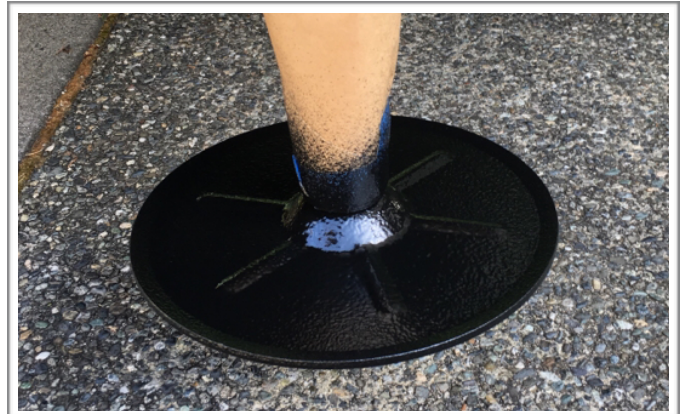

TIPS & TRICKS

We recommend covering your jacks landing feet with a rubberized protectant such as FlexSeal (yes the sealant from the television ads) to complete the look and double protect your jacks! Make sure to cover your jack cylinders prior to applying and coat the bottom of your landing feet as well.

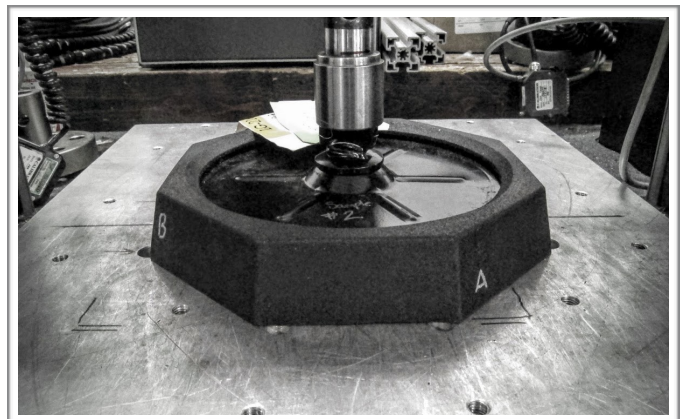

SAFETY

Your SnapPad's have been tested to withstand over 50x the force of gravity. Which means you could hit the biggest pothole of your life at 60 MPH and your SnapPads will remain firmly fasten to your jacks.

Warranty Info

Congratulations on your purchase of the first and only permanent jack pads!

What is covered and for how long?

Origen RV Accessories LTD offers a 2 year extended warranty on both performance and defects in material and workmanship. Should your product fail within a 2 year time frame, Origen RV Accessories LTD will replace your pad free of charge.

Conditions

- Origen RV Accessories LTD will replace any defective products within the acceptable 2 year window, starting from the purchase date.
- Provide an emailed picture of product defect.
- Should you have accidentally ordered the wrong version, ship them back for a full refund.
- Product must be shipped back to Origen RV Accessories LTD manufacturing facility at owners cost, meaning **you pay the shipping charges**. See address below.

Attn: Don Zimmerman - 605 S Laurel St, Mishawaka, IN 46544, USA

- Confirmation that defect is not from repeated installation or misuse in any way.

Disclaimers

- **SnapPads are designed to be installed once. Do not remove and re-install as this will void your warranty.**
- **Use extreme caution when installing and using SnapPad. Origen RV Accessories LTD is not responsible or liable in any way for any indirect or direct injury sustained during installation or future use of the product.**
- **Origen RV Accessories LTD shall not be liable for any special, incidental, indirect or consequential damages whatsoever (including but not limited to, labor, installation charges, damages to associated equipment, RV, trailer, towing or following vehicle) arising from the use or inability to use or install the product.**

HAVE QUESTIONS OR NEED ASSISTANCE?

Feel free to contact us anytime.

Phone: **1.855.762.7723**

Email: **info@rvsnappad.com**

Website: **RVSnapPad.com**

ON SOCIAL MEDIA?



@ RVSnapPad



@ SnapPad



@ rv_snappad