

SLIDEOUTS


Fig. 1



A


B

Fig. 2

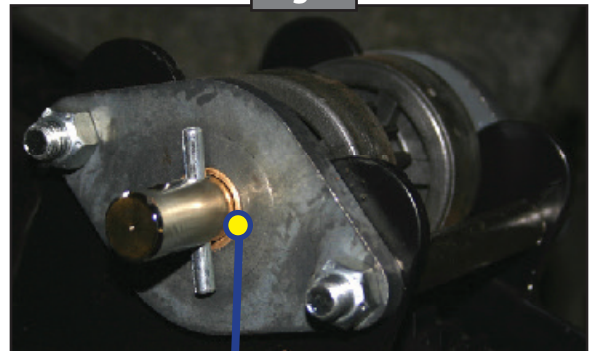


A

Fig. 3

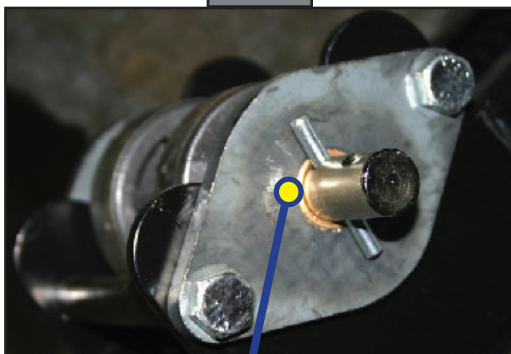

A

Fig. 4

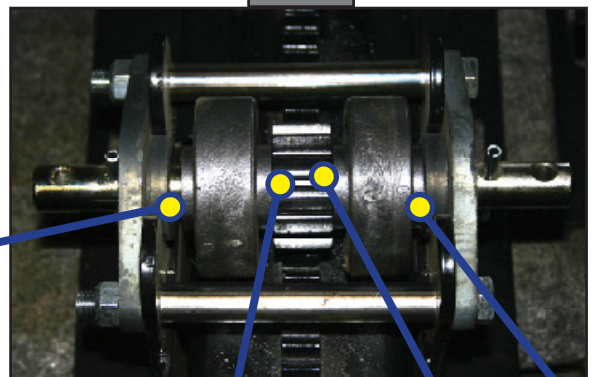

A

B

C

D

STEP 1. Loosen both gear packs bolts (Fig. 1A and Fig. 1B) until tension is off of the gear pack.

STEP 2. Using a manual pump oil can, pump 2-3 squirts of synthetic motor oil onto gear pack drive shaft in lubrication points (Fig. 2A), (Fig. 3A), (Fig. 4 A through D).

NOTE: Do not lubricate rack or pinion gear teeth, lubricate drive shaft only.

NOTE: LCI recommends Mobile One Fully Synthetic 10W-30 Motor Oil to lubricate gear pack.

STEP 3. Extend and retract slideout arms several times to work lubricant through gear pack.