





CHANGING THE PARKER PUMP MOTOR



1. Disconnect 12VDC lead from battery (not shown).
2. Disconnect both leads from Trombetta.

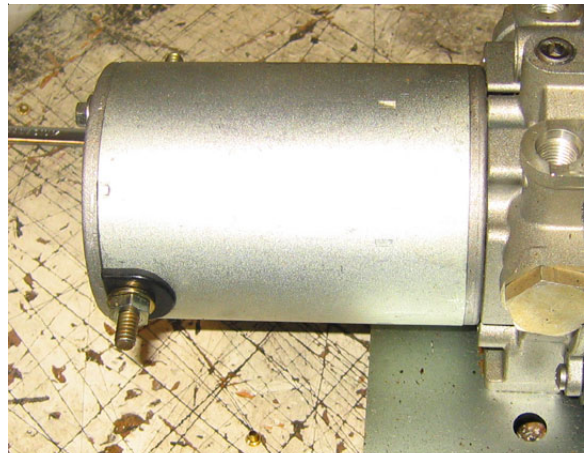

View of disconnected motor

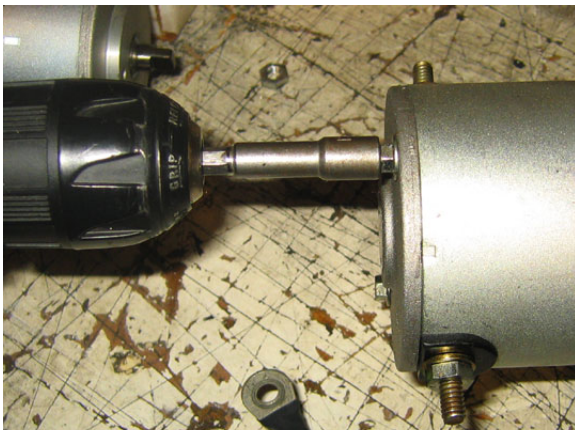


3. Remove mounting screws.



4. Carefully remove entire motor. Leave the coupler inside the center section.




5. Remove retaining nuts from new motor.

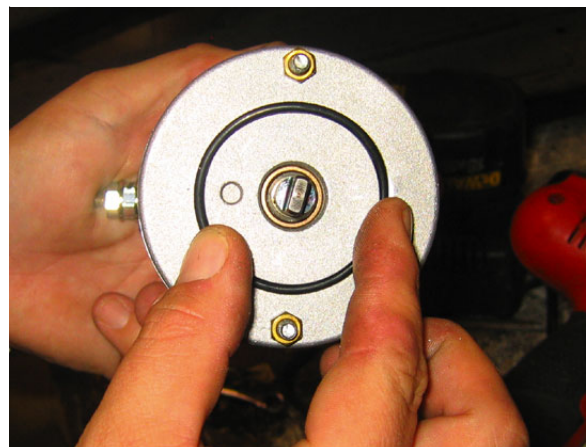

6. Apply O-ring to new motor.



CHANGING THE PARKER PUMP MOTOR

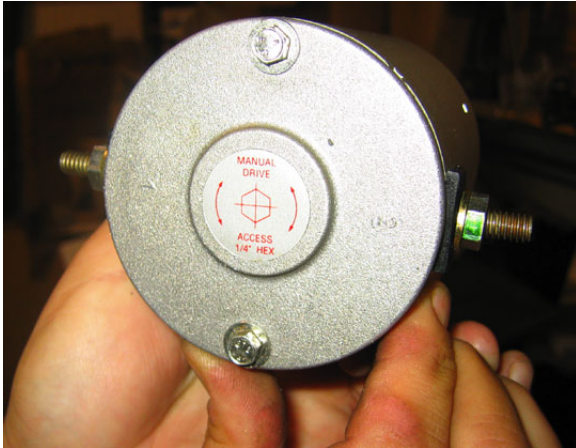

View of Manual Override



7. Carefully mount new motor. Match up male motor tang to the female of the coupler in the center section and turn to align mounting screws in the 12 and 6 o'clock positions.



8. Secure new motor to center section.



9. Reconnect motor leads from the Trombetta.