



MANUAL OVERRIDE FOR LCI UNIDIRECTIONAL HYDRAULIC LEVELING & SLIDEOUTS

To Manually Override Leveling Jacks and/or Slideouts:

- A. Locate all Valves that operate the Leveling Jacks and the Slideout. There will be four (4) Leveling Jack Valves and one (1) Slideout Valve. The Slideout Valve will have two (2) Black Hoses entering the port whereas the Leveling Jacks will only have one (1) Black Hose each. Fig. 9.
- B. Locate the hex head receptacle at the end of the Valve. This is the Manual Override for the Valve. It should normally be in the fully counterclockwise position. Fig. 1. By turning the Manual Override clockwise with a 1/8" Allen wrench, the Valve is Manually Overridden. Fig. 2.
- C. Isolator Valve - Blue Knurled Knob in NORMAL Operation Position, Fig. 3.
- D. Push Blue Knurled Knob in towards manifold, Fig. 4.
- E. Turn knob to the left until it stops; approximately 1/4 turn, Fig. 5.
- F. Release knob. Blue Knurled Knob should now be extended for manual override operation, Fig. 6
- G. Remove plastic cap. See Fig 7a.
- H. Disconnect power cables on the motor. See Fig. 7b
- I. Using a 1/2" socket, insert into auxiliary drive device, i.e. cordless or power drill.
- J. Insert 1/2" socket onto coupler found under plastic cap, Fig. 8.
- K. Run drill in reverse or counterclockwise to retract jacks.
- L. Once the Leveling Jacks and Slideout have completed their operation, turn all Manual Overrides to the Normal or counterclockwise position to close the valves. Fig. 1.



Fig. 1



Fig. 2

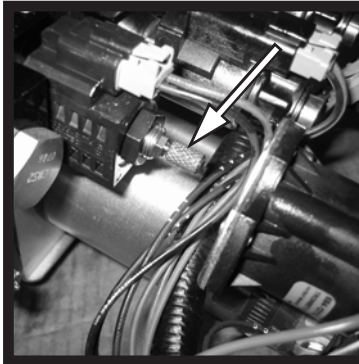


Fig. 3

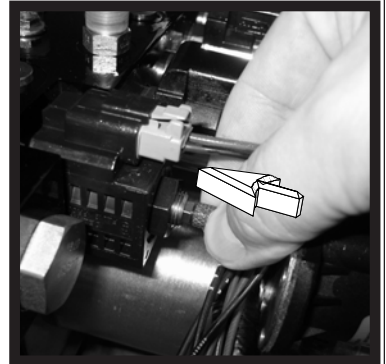


Fig. 4

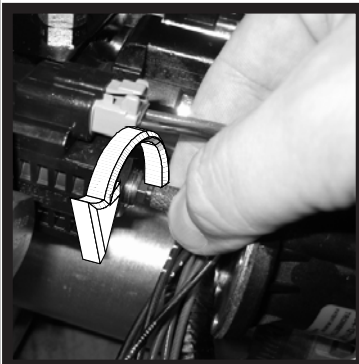


Fig. 5

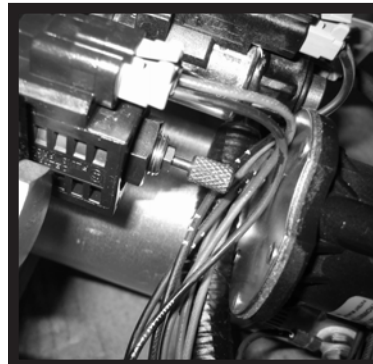


Fig. 6

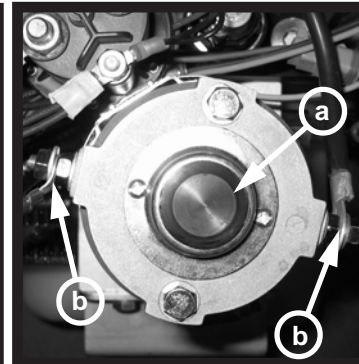


Fig. 7



Fig. 8



3-POINT LEVELING

3-Point Leveling is available with:
 1 slideout
 2 slideouts or
 2 slideouts PLUS
 1 generator slide

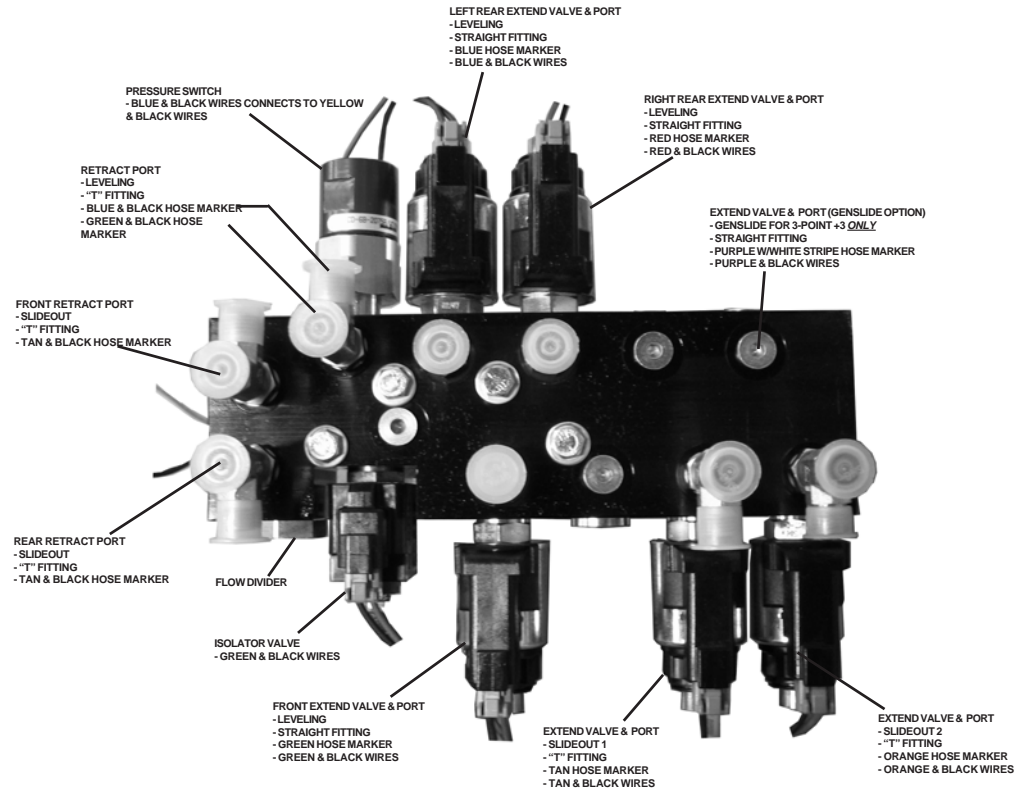


Fig. 9

4-POINT LEVELING

4-Point Leveling is available with:
 1 slideout
 2 slideouts or

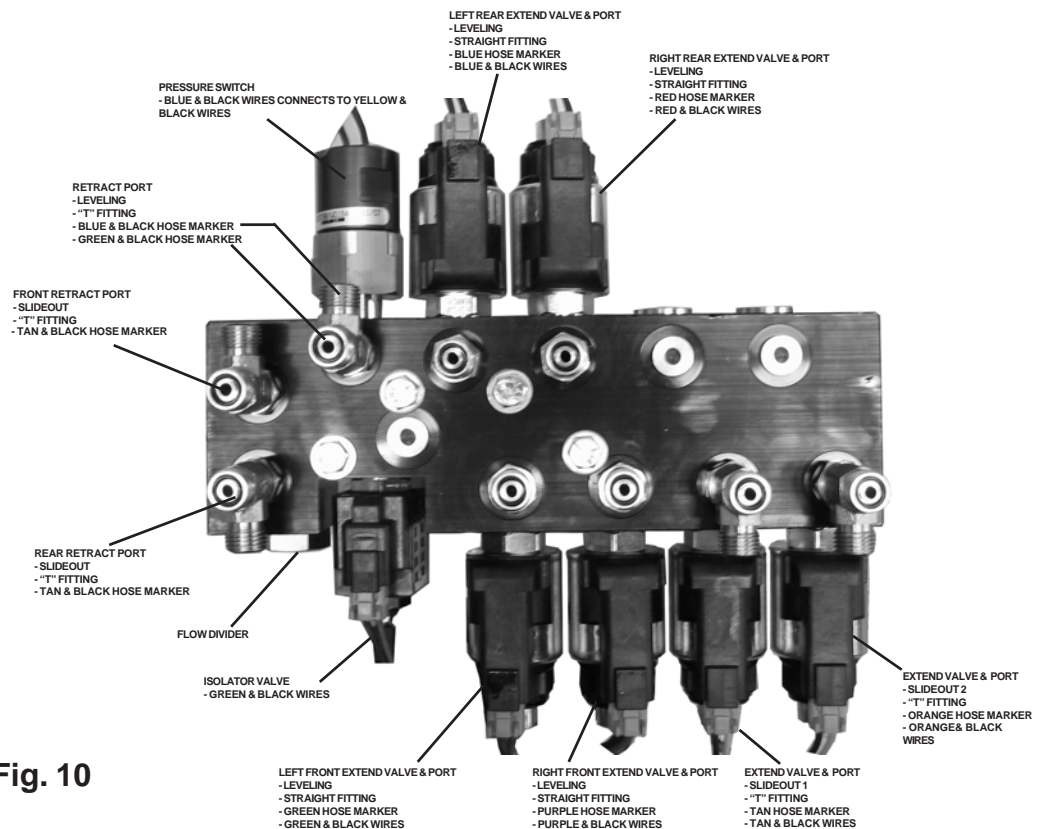


Fig. 10