

# 12 VOLT LCD BATTERY MONITOR




## Battery Monitor Results:

Low battery voltage (yellow or red LED) is not always due to a dead battery. It could be an indication of several things, including, but not limited to:

- Possible problem with the alternator
- Dirty battery terminals
- Extreme outside temperature
- Undercharged battery

## BATTERY STATE OF CHARGE

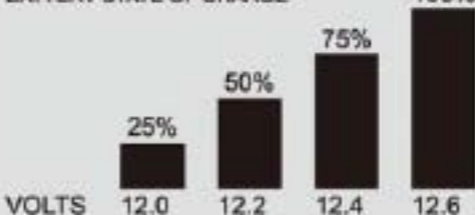

Operating voltages and amperage rating 9-16 V | 1 A

NOTE: WHILE ENGINE IS RUNNING VOLTAGE METER WILL MEASURE ALTERNATOR VOLTAGE. NORMAL READINGS FOR STANDARD ALTERNATORS RANGE FROM 13.5 - 14.5 V.