

INSTRUCTIONS



1 Remove cotter pin and ball mount lock pins.



2 Remove ball retaining pin.



3 Insert stainless steel combo ball.



4 Replace ball retaining pin. Do not operate without ball pin in place.



5 Slide ball mount to desired height on drawbar. (may use rise position).



6 Replace ball mount lock pins and cotter pins. Do not operate without making sure cotter pins are in place.

Ensure safety chains are attached between vehicle and trailer. DO NOT attach chains directly to hitch. Never exceed the LOWER rating between: A) Towing vehicle manufacturer's load OR B) 180 Hitch GTW hitch ratings: 7,500 lbs (1-7/8" ball), 8,000 lbs (2" ball), 10,000 lbs (2-5/16" ball & 2" shank), 14,500 lbs (2-5/16" ball & 2.5" shank), 21,000 lbs (2-5/16" ball and 3" shank). Tongue weight should be between 10-15 percent of gross trailer weight. 180 Hitch max GTW is 1500 lbs (2" shank) and 2200 lbs (2.5" & 3" shanks). Secure your 180 Hitch to standard 2", 2.5" or 3" receiver with locking pin.