

• NEVER exceed the manufacturer's PERSONAL INJURY CAN OCCUR. INFLATING. BODILY HARM OR ANY PURPOSE OTHER THAN AND OTHER INFLATABLES. DO NOT USE FOR equipment, air mattresses, beach toys tires, bike tires, ATV tires, sports tires. This inflator is designed to inflate car receptacles.

• For use with any 12V DC power outlet rated 15 Amps or higher. Do NOT use with older 8 Amp cigarette lighter receptacles.

• NEVER use in traffic or other unsafe areas.

• DO NOT carry the inflator by the air hose or power cord as damage may occur.

• Disconnect power when not in use.

• Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes.

• Do not operate or store your inflator in a damp or wet locations.

WARNING Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

WARNING Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

CAUTION Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

CAUTION Notice indicates important information, that if not followed, may cause damage to equipment.

IMPORTANT SAFETY INFORMATION

• USE 12 VOLT DC power only. Make sure that your vehicle's 12 Volt power outlet is free of any ash residue or debris. A dirty 12 Volt power outlet can cause the inflator and power cord to overheat. Overheating can cause damage to your inflator/vehicle and could cause bodily harm or injury.

• For use with any 12V DC power outlet rated 15 Amps or higher. Do NOT use with older 8 Amp cigarette lighter receptacles.

• NEVER leave the inflator running unattended.

• DO NOT carry the inflator by the air hose or power cord as damage may occur.

• Disconnect power when not in use.

• Do not operate inflator near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes.

• Do not operate or store your inflator in a damp or wet locations.

SAFETY GUIDELINES / DEFINITIONS

WARNING Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

WARNING Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.

CAUTION Caution indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

CAUTION Notice indicates important information, that if not followed, may cause damage to equipment.

OPERATOR'S MANUAL

airTIGHT
12V Compact Tire Inflator

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



WARNING
Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.

2. To use the inflation accessories, snap either piece into the universal adapter and push the lever to lock into place. The inflation accessory will fit securely.

3. Plug power cord into 12V DC power outlet.

WARNING For use with any 12V DC power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.

4. Insert the appropriate inflation accessory into the inflatable object (tire, football, raft, etc.).

5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.

6. When the object is firm, turn power switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.

7. Unplug the power cord from 12V DC power outlet.

OPERATING INSTRUCTIONS - TIRES

• Easy to read pressure gauge

• On/Off Switch

• High output 250 PSI motor

• Air Accessories include: Sports Ball Needle, Raft & Toy Inflator Nozzles, 15A fuse

• 18 in. Air Hose

• 10 Ft. 12V Power Cord - Plugs into any 12V vehicle power outlet: Input 12V with

FEATURES

• Keep inflator dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or attachments that are included.

• Operate the inflator only with the recommended accessories. Also use face or dust mask if operation is dusty.

• Your vehicle's 12 Volt battery must be fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.

• USE SAFETY GLASSES. Also use face or dust mask if operation is dusty.

• Your vehicle's 12 Volt battery must be fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.

• THIS INFLATOR IS NOT DESIGNED TO FILL AIR TANKS OR AIR SHOCKS.

• For best results, it is recommended that you operate your inflator with your vehicle's engine running.

WARNING: DO NOT RUN VEHICLE ENGINE INSIDE A CONFINED AREA SUCH AS A GARAGE as bodily injury or asphyxiation resulting in death can occur. ALWAYS ALLOW FOR PROPER VENTILATION.

• Most vehicle 12 Volt power outlets will operate with vehicle ignition off; however, some vehicles require that the ignition be turned on.

TROUBLE SHOOTING

INFLATOR DOES NOT WORK WHEN SWITCHED TO "ON"

- Power cord may not be plugged in completely. Check the connection.
- Check vehicle power outlet and power plug terminals for dirt. Use a non-conductive probe, not fingers or metal, to clean.
- Check vehicle power outlet fuse, which should be a minimum of 15 Amps.
- Fuse may have blown. Check fuse in power plug adaptor and replace if necessary with one of the same amperage. NEVER replace a blown fuse with a fuse having a higher rating.

UNIT IS RUNNING BUT TIRE IS NOT INFLATING

- Check that the air hose connector is attached properly to the tire valve stem.
- Check for tire leaks or damage, and check air hose for breaks and leaks at fittings.

INFLATOR FEELS HOT OR RUNS SLOWLY

- Unit may have overheated. Shut the unit off and allow to cool for 20-25 minutes.
- NEVER use this inflator for more than 10 minutes continuously.
- Voltage may be too low. Check condition of vehicle battery.

