

WDC7100XC MULTIFAMILY QUICK OPERATION GUIDE

Before setting the controls, make sure

- the drum is loaded correctly (see 'Load Sizes' on this page) and the door is CLOSED,
- laundry aids have been added to the dispenser drawer (see 'Laundry Aids' on this page),
- the ON/OFF button has been pressed, so power is ON,
- and the DOOR LOCK LED is FLASHING - if it isn't press and HOLD the Start button to reset the controls.

LOAD SIZES

Use the chart below to help you load the drum. **Never load the drum more than 1/2 to 2/3 to dry.**

Full to WASH

2/3 Full to DRY

	Fabric Type	Load lbs.
WASHING	Cottons	2 to 15
	Synthetics	2 to 9
	Delicates	2 to 8
	Wools	2 to 3
DRYING	Fabric Type	Max lbs.
	ALL TYPES	8 to 11

LAUNDRY AIDS

Pull open the dispenser drawer and add laundry aids to the correct compartments. When finished, close the drawer.


'Max Line' Bleach (with bin)
1 to 2 Tablespoon(s) PreWash Detergent (without bin)

1 to 2 Tablespoon(s) Powder Detergent (or liquid equivalent)

1 to 2 Tablespoon(s) Liquid Fabric Softener

IMPORTANT:

NEVER exceed the recommended laundry aid amounts (shown above). NEVER use fabric softener sheets. If using liquid detergent, use NO MORE than 1/2 to 1 TBSP per load.

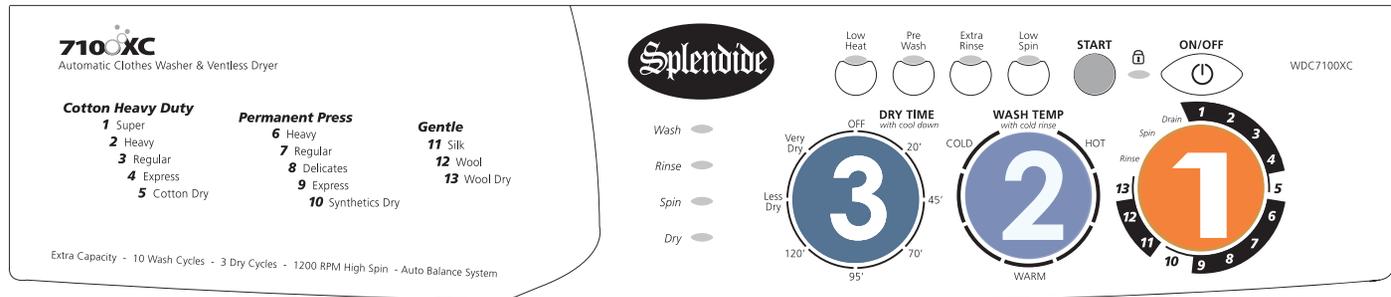

Select a wash cycle using the Cycle Selector (1).

To DRY ONLY, select one of the three dry cycles: Number 5, 10 or 13.

NOTE: Refer to the Cycle Key printed on the dispenser drawer to help choose a cycle. Pick a cycle that best describes both the type of fabric (Cotton, Permanent Press, or Wool) and degree of soil for the load.

IMPORTANT: Select Wool Dry ONLY when drying 100% wool fabrics.



Select a wash water temperature using the WASH TEMP knob (2).

To further customize the cycle, press one or more of the option buttons (Low Heat, Pre Wash, Extra Rinse or Low Spin).

NOTE: Rinse temperatures are always COLD.

NOTE: Not all options or combinations of options available in all cycles. If an incompatible button is pressed, it's LED will flash quickly, then go black to indicate the option is not available.



Select the length of drying time using the DRY TIME knob (3). If a wash cycle is selected, after washing, Splendide will automatically start drying using the appropriate dry cycle.

To WASH ONLY, leave the DRY TIME knob (3) in the 'OFF' position. After washing, Splendide will not dry.

NOTE: The DRY LED will flash when the DRY TIME knob is in any position other than 'OFF'.



Press the START button. The Door Lock will engage and the selected cycle will begin.

NOTE: During the cycle, the knobs WILL NOT move. The 'Status LED's' will let you know the progress of your cycle.

IMPORTANT:

The door will stay locked for the duration of the wash and dry cycles. To open the door during a cycle, see 'Add-an-item' and 'Cancel a Cycle' on next page.

Wash Cycles		Time (Minutes)	Options (Buttons)	High Spin	Dry Cycles			
COTTON HEAVY DUTY	1	Super	96	Low Heat Extra Rinse	1200 rpm	High Heat Timed or Auto drying with Spin Cycle	5	COTTON DRY
	2	Heavy	77	Low Heat Pre Wash Extra Rinse				
	3	Regular	77					
	4	Express	63					
PERMANENT PRESS	6	Heavy	66	Low Heat Pre Wash Extra Rinse	800 rpm	Medium Heat Timed or Auto drying	10	SYNTHETICS DRY
	7	Regular	59	Low Heat Pre Wash Extra Rinse Low Spin				
	8	Delicates	53	Low Spin				
	9	Express	33					
GENTLE	11	Silk	30	Pre Wash Extra Rinse	NO SPIN	NO DRY		
	12	Wool	65	Low Heat Extra Rinse Low Spin	800 rpm	Very High Heat Timed or Auto drying	13	WOOL DRY

MORE COMBO TIPS

- **Always use fabric softener.** Using softener assures that the laundry falls easily from the drum after high spin and tumbles freely during the dry cycle.
- **ONLY** use 'Cotton Heavy Duty' cycles for HEAVY cottons (towels, jeans, etc.)
- For items that may wrinkle, use 'LOW SPIN' in wash and/or 'LOW HEAT' with 'Synthetics Dry.'
- For mixed loads, remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Then, continue drying the rest of the load (underwear, towels, etc.)
- After washing, shake out LARGE ITEMS (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then start a Dry cycle. This will improve drying times and reduce fabric wrinkling.

FOR BEST DRYING

Your washer-dryer operates on 110V and has a 1300W dryer. It will take longer to dry than a traditional dryer (which operates on 220V). For best drying results, follow these tips:

- Keep the **door closed** during the dry cycle. This conserves energy by trapping heat,
- Use a **LOW SUDSING (HE)** detergent,
- Use **FABRIC SOFTENER** or a detergent with built-in softeners,
- **DO NOT OVERLOAD** the drum,
- **DO NOT OVER DRY** your laundry. Moisture is what makes fabrics soft and fluffy.

Why is a combination washer-dryer installed in my apartment?

Your apartment managers wanted to enhance your lifestyle by offering in unit laundry. However, because of limitations to space, energy, or dryer venting, a full-size washer and dryer couldn't be used. With Splendide, they've provided you the option to wash and dry laundry in the privacy of your own apartment.

Is doing laundry different in a Combo washer-dryer?

Yes, load sizes are smaller, but a Splendide washer-dryer is designed to care for your laundry and to deliver outstanding wash results. Unlike other laundry appliances, a Splendide can go from wash to dry automatically. To make the most of your Splendide don't let laundry pile up. Keep up with laundry by doing a load every day or two. Make it part of your routine to throw a load in after your workout or before you go to bed and let Splendide do the rest!

Why does it take longer?

Because Splendide is front-loading and operates on 110V instead of 220V, cycle times are longer: 33 to 96 minutes to wash. 70 to 110 minutes to dry.

Any tips for loading the drum?

Remember, in separate w/d's, dryer drums are twice the size of washer drums. In Splendide, you wash and dry in the SAME drum. If doing an automatic Wash-to-Dry load, load the drum 1/2-2/3 full, or wash a full load and remove 1/3 to 1/2 the laundry before starting a dry cycle.

Sample Wash-to-Dry Load: 2-3 bath towels, 1 hand towel, and 1-2 wash cloth(s). Dry Time*: 70-120 min.

*Sample Load dry times based on Cotton Heavy Duty wash/dry and vary according to fabric type and size.

Where's the load size selector?

Splendide washer-dryers have a built-in Automatic Consumption Control feature. It automatically adjusts the water used for the size and fabric type of your load. No guesswork, perfect every time.

Why can't I see the water inside the washer drum?

Splendide's are extremely efficient and use very little water. You may not be able to see water during the wash cycle. **This is NORMAL.**

Where's the lint filter?

Splendide's are so gentle, they produce very little lint. There's no lint filter for you to clean because a specially designed self-cleaning pump does the work for you.

Where's the dryer vent?

Unlike vented dryers, the Splendide 7100XC uses a condenser drying process. Moisture is removed from the laundry in the form of steam which is condensed back into water and pumped out the drain. No vent required.

My clothes feel damp after drying.

When you remove items after drying, they may feel slightly damp to the touch even though they are dry. **THIS IS NORMAL.** It's a result of your machine's self-condensing drying process. Simply shake the items out to allow any humidity to dissipate (a few seconds) before folding or hanging them as you usually would.

ADD-AN-ITEM*



To open the door without cancelling the current cycle, press the ON-OFF button once. Press ON-OFF again to resume the cycle. *Not always available.

CANCEL A CYCLE



Press and HOLD the **START** button to cancel the cycle and clear the controls.

Splendide
Laundry Centers
www.splendide.com