

USB Audio Alert Module (AAM) Instruction Quick Guide.


iOS version



Pic 27a



Pic 28a

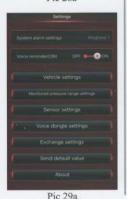

Android version



Pic 27b



Pic 28b



Voice Dongle Set Up:

NOTE: Recommended for 5V/2A car USB power adapter.

NOTE: If kit is purchased with the dongle it will already be paired to the sensors.

- 1. To pair dongle to sensors, press the red voice dongle button for 1.5 seconds. When you hear "beep," unit is in the Bluetooth pairing mode (LED flashes Red and Blue light).
- 2. Enter "Voice dongle settings" function. (Pic 27a/b)

Click "TPMS Dongle sn" (random serial number) (Pic 28a/b).

3. The App will automatically download the settings when you hear "Setup completed". (Pic 9a/b)

When writing data, do not remove the voice dongle.

Mute/ Un-Mute: Press the red button to mute. Press the red button again or wait 10 minutes for the mute function to cancel automatically.

Double click: Tire Status Report.