



LIPPERT COMPONENTS

**EMBEDDED RACK SLIDEOUT SYSTEM
OPERATION AND SERVICE MANUAL**

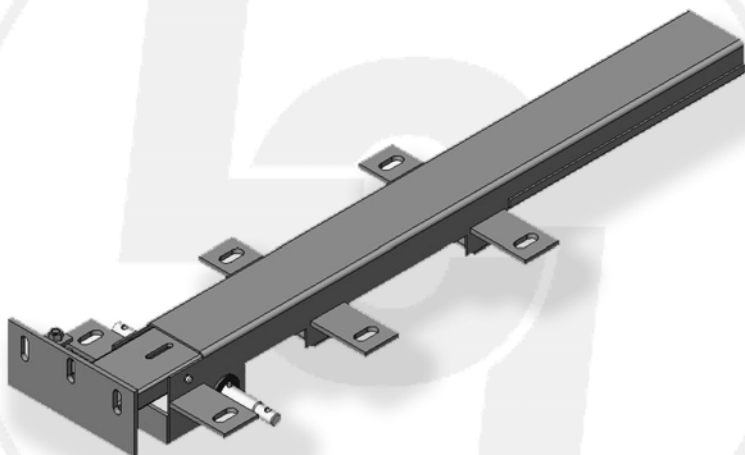




TABLE OF CONTENTS

SYSTEM.....	3
Warning.....	3
Description.....	3
Prior to Operation.....	4
OPERATION.....	5
Main Components.....	5
Mechanical.....	5
Electrical.....	6
Operating System.....	7
Extending Slideout.....	7
Retracting Slideout.....	7
Manual Operation.....	8
Preventative Maintenance.....	9
SERVICE.....	10
Troubleshooting.....	10
Chart.....	11
Power Unit.....	12
Wiring Diagram.....	13
Slideout Adjustment Chart.....	14
Adjustment Instructions.....	15
Ordering Parts.....	16

SYSTEM

WARNING

FAILURE TO ACT IN ACCORDANCE WITH THE FOLLOWING MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

The *Lippert Embedded Rack Slideout System* is intended for the sole purpose of extending and retracting the slideout room. Its function should not be used for any other purpose or reason than to actuate the slideout room. To use the system for any reason other than what it is designed for may result in damage to the coach and/or cause serious injury or even death.

Before actuating the system, please keep these things in mind:

- 1. Parking locations should be clear of obstructions that may cause damage when the slideout room is actuated.**
- 2. Be sure all persons are clear of the coach prior to the slideout room actuation.**
- 3. Keep hands and other body parts away from slideout mechanisms during actuation. Severe injury or death may result.**
- 4. To optimize slideout actuation, park coach on solid and level ground.**

DESCRIPTION

The *Lippert Embedded Rack Slideout System* is a rack and pinion style slide system. Utilizing a bi-directional electric motor to actuate the drive shaft, the slideout room is extended and retracted from the same source. The actuator has a built-in automatic clutching feature. The *Lippert Embedded Rack Slideout System* is designed as a negative or positive ground system.

There are no serviceable parts within the electric motor. If the motor fails, it must be replaced.

Disassembly of the motor voids the warranty.

Mechanical portions of the slideout system are replaceable. Contact Lippert Components, Inc. to obtain replacement parts.


PRIOR TO OPERATION

Prior to operating the *Lippert Embedded Rack Slideout System*, follow these four (4) guidelines:

1. Coach should be parked on the most level surface available.
2. The **PARKING BRAKE** must be engaged.
3. The coach's transmission must be in **NEUTRAL** or **PARK**.
4. The coach's ignition must be in the **RUN** position or the coach's engine must be running.

MAIN COMPONENTS

MECHANICAL

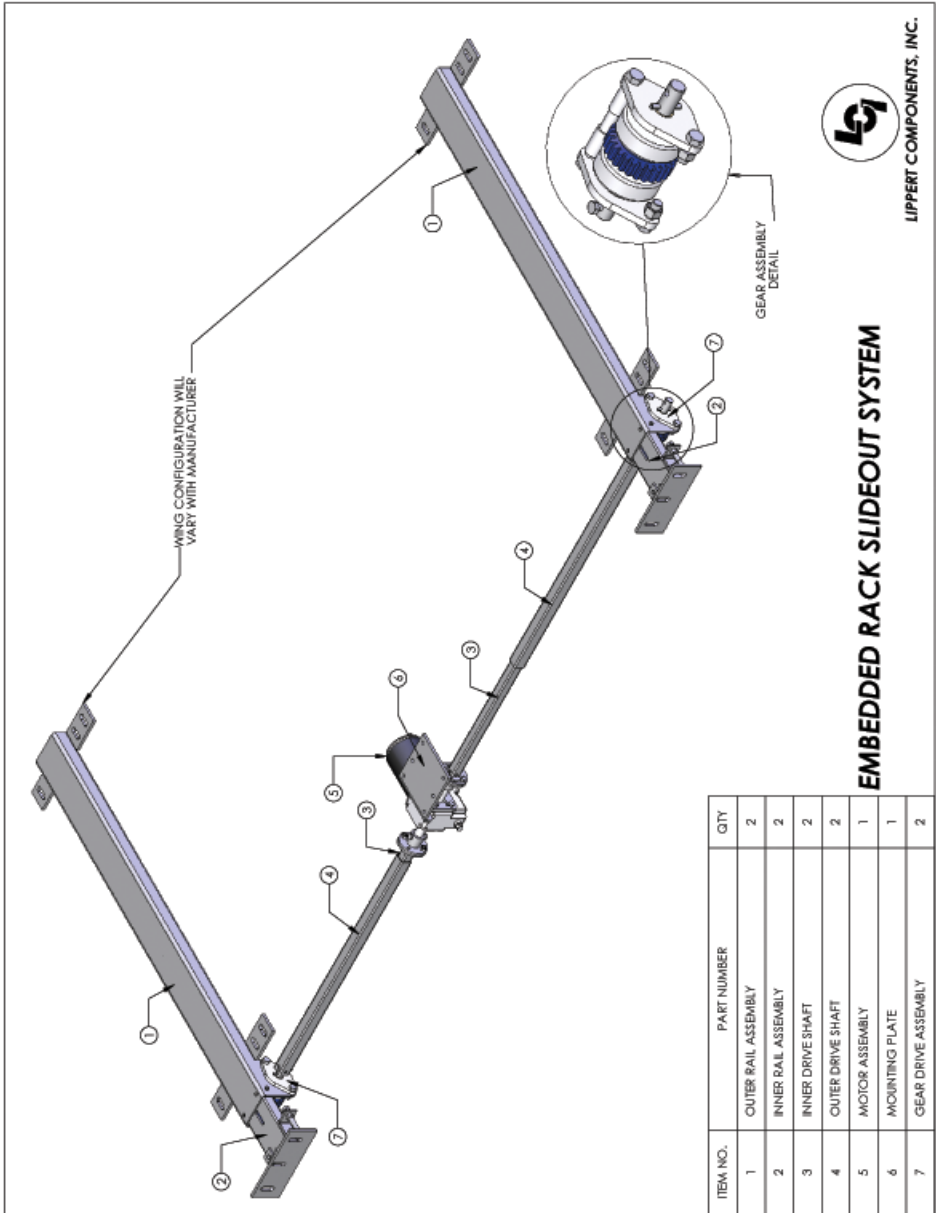

LIPPERT COMPONENTS, INC.

Fig. 1

ELECTRICAL

Motor - 12V DC Worm gear drive 1/2" hex coupler for manual operation

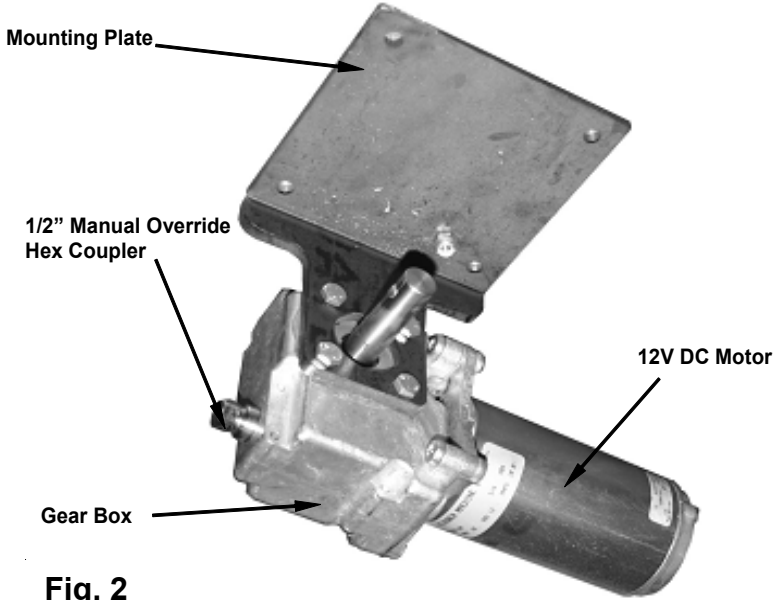


Fig. 2

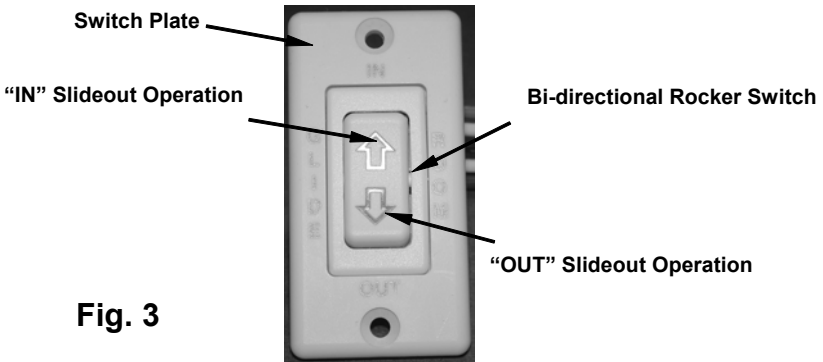


Fig. 3

Circuit Breaker – Supplied by OE

WARNING

FAILURE TO ACT IN ACCORDANCE WITH THE FOLLOWING MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

ALWAYS MAKE SURE THAT THE SLIDEOUT ROOM PATH IS CLEAR OF PEOPLE AND OBJECTS BEFORE AND DURING OPERATION OF THE SLIDEOUT ROOM.

ALWAYS KEEP AWAY FROM THE SLIDE RAILS WHEN THE ROOM IS BEING OPERATED. THE GEAR ASSEMBLY MAY PINCH OR CATCH ON LOOSE CLOTHING CAUSING PERSONAL INJURY.

INSTALL TRANSIT BARS (IF SO EQUIPPED) ON THE SLIDEOUT ROOM DURING STORAGE AND TRANSPORTATION.

EXTENDING SLIDEOUT ROOM

1. Level the unit.
2. Verify the battery is fully charged and hooked-up to the electrical system.
3. Remove the transit bars (if so equipped).
4. Press and hold the IN/OUT switch (Fig. 4B) in the OUT position until the room is fully extended and stops moving.
5. Release the switch, which will lock the room into position.

NOTE: If the slideout switch is held after the room is fully extended, the control will sense that the room has stopped and will shut off the motor after a few seconds.

RETRACTING SLIDEOUT ROOM

1. Verify the battery is fully charged and hooked-up to the electrical system.
2. Press and hold the IN/OUT switch (Fig. 4C) in the IN position until the room is fully retracted and stops moving.
3. Release the switch, which will lock the room into position. **NOTE:** If the slideout switch is held after the room is fully retracted, the control will sense that the room has stopped and will shut off the motor after a few seconds.
4. Install the transit bars (if so equipped).

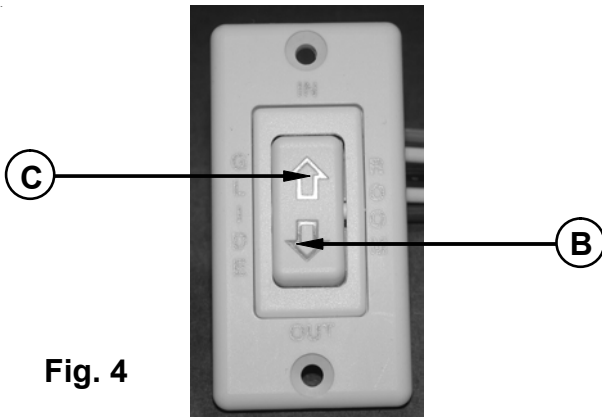


Fig. 4

MANUAL OPERATION

WARNING!

The gears can be stripped out if the room is manually retracted/extended to it's fullest extent and the operator continues to rotate manual override. Any damage due to misuse of the Manual Override feature will disqualify any and all claims to the Limited Warranty.

9/16" Manual Override Hex Coupler

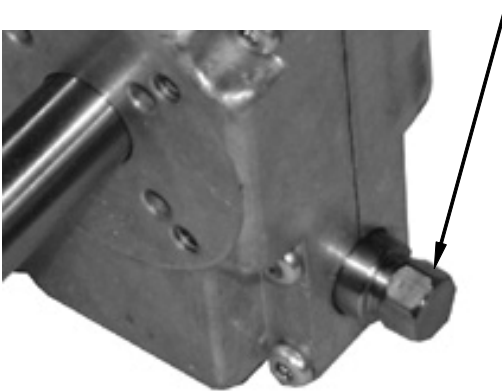


Fig. 5

1. Prior to Manual Operation, be sure to clear any obstruction from the slideout area that may impede the extension or retraction of the slideout room, including any transit bars.
2. Locate Slideout Motor under coach.
3. Fit a 9/16" socket and ratchet, 9/16" open end wrench or a 9/16" nut driver and power drill, on the manual drive coupler.
4. By rotating coupler in a clockwise direction, the slideout room can be retracted. By rotating the coupler in a counter-clockwise direction, the slideout room can be extended.

Note: Remember to replace transit bars(if equipped) before moving the coach.

PREVENTATIVE MAINTENANCE

The *Lippert Embedded Rack Slideout System* has been designed to require very little maintenance. To ensure the long life of your slideout system, read and follow these few simple procedures.

WARNING!

**DO NOT WORK ON YOUR SLIDEOUT SYSTEM UNLESS
THE BATTERY IS DISCONNECTED.**

**FAILURE TO ACT IN ACCORDANCE WITH THE FOLLOWING MAY
RESULT IN SERIOUS PERSONAL INJURY OR DEATH.**

- When the room is out, visually inspect the Inner and Outer Rail Assemblies. Refer to Fig. 1 for location of inner rail assemblies. Check for excess build-up of dirt or other foreign material; remove any debris that may be present.
- If the system squeaks or makes any noises it is permissible to apply a coat of lightweight oil to the drive shaft and roller areas but remove any excess oil so dirt and debris do not build-up. **DO NOT** use grease.

**IF YOU HAVE ANY PROBLEMS OR QUESTIONS CONSULT YOUR
LOCAL AUTHORIZED DEALER OR CALL LIPPERT AT:
(866) 524-7821.**

SERVICE

TROUBLESHOOTING

The *Lippert Embedded Rack Slideout System* is only one of four inter-related slideout room system components. These four components are as follows: chassis, slideout room, coach and *Lippert Embedded Rack Slideout System*. Each one needs to function correctly with the others or misalignment problems will occur.

Every coach has it's own personality and what may work to fix one coach may not work on another even if the symptoms appear to be the same.

When something restricts room travel, system performances will be unpredictable. It is very important that slide rails, inner and outer, be free of contamination and allowed to travel freely the full distance. Ice or mud build-up during travel is an example of some types of contamination that may occur.

When beginning to troubleshoot the system, make sure the battery is fully charged, there are no visible signs of external damage to the actuator, motor or rails and that the motor is wired properly and all connections are secure.

IF YOU HAVE ANY PROBLEMS OR QUESTIONS CONSULT YOUR LOCAL
AUTHORIZED DEALER OR CALL LIPPERT AT:
(866) 524-7821.

TROUBLESHOOTING CHART

The following troubleshooting chart outlines some common problems, their causes and possible corrective actions. When reference is made to a "Power Unit," the term includes the motor and the actuator as a complete unit. All Power Units are shipped from the factory with a serial number and date code, which should be given to the service technician when asking for assistance.

ROOM DOESN'T MOVE WHEN SWITCH IS PRESSED

PROBABLE CAUSE

Restriction or obstruction inside or outside of unit

Low battery voltage, blown fuse, defective wiring

Excessive room drag

CORRECTIVE ACTION

Check for and clear obstruction

Check battery voltage and charge if needed

Find and check fuse, replace if blown. Check battery terminals and wiring. Look for loose disconnected or corroded connectors.

Check that transit bars are removed

POWER UNIT RUNS, ROOM DOES NOT MOVE

Motor turns, room does not move

Broken gear on drive shaft

Broken gear in gearbox

Bad motor or gearbox

Gear key is broken or lost, replace gear drive assembly

Replace gear drive assembly

Replace motor/gearbox assembly

Replace motor/gearbox assembly

POWER UNIT RUNS, ROOM MOVES SLOWLY

Low battery, poor ground, extremely low temperature

Room in bind

Incorrect height adjustment

Charge battery, check ground wire

Adjust to proper room setting

Check for proper room height

ROOM STARTS TO MOVE AND STOPS

Low battery voltage, blown fuse, defective wiring

Obstruction of room inside or outside

Dirts or corrosion build up on mechanism

Check battery voltage and charge if needed

Find and check fuse, replace if blown. Check battery terminals and wiring. Look for loose disconnected or corroded connectors.

Check for and remove any obstruction

Clean dirt or corrosion and coat LIGHTLY with oil

ROOM CHATTERS DURING OPERATION

Teeth on gear drive broken or worn

Teeth on inner rail broken or worn

Replace gear drive assembly

Replace inner rail assembly

NOTE: If the slideout room will not retract there is a manual override that is located on the motor. Once you have the room in the closed position take your unit to the closest dealer. See page 8 for Manual Override Instructions

Switch related problems:

- If room moves opposite from what the switch plate indicates, reverse the motor wires on the back of the switch (refer to the wiring diagram page 14).
Wire size must be 10ga. Min.

WARNING! – HIGH VOLTAGE

- If a gear is stripped, the entire gearbox must be replaced.
- If the room does not seal fully, refer to page 10.

TROUBLESHOOTING – POWER UNIT

Before attempting to troubleshoot the Power Unit, make sure an adequate power source is available. The unit batteries should be fully charged or the unit should be plugged into to A/C service with batteries installed. Do not attempt to troubleshoot the Power Unit without assuring a full 12V DC charge

The following tests require only a DC voltmeter (or DC test light) and a jumper lead.

Step 1 - Attach voltmeter (or test light) leads to the negative and positive switch terminals on back of wall switch (See Fig. 7). Does the meter indicate 12V DC? If **YES**, see **Step 2**; if **NO** see **Step 3**.

Step 2 - If **YES**, at the motor, check the incoming leads to 12V DC (if necessary, disconnect leads at wire splices). Does meter indicate 12V DC? If **YES**, Power Unit needs to be replaced. The motor is not field serviceable. **DO NOT ATTEMPT TO REPAIR**. If **NO**, Inspect all wires and connections between the wall switch and the motor. Repair connections as necessary. Recheck as in **Step 1**.


Step 3 - If **NO**, Inspect all connections between battery and switch. Inspect 30A Auto-reset Circuit Breaker (See Fig. 7 for location). Recheck as above in **Step 1**.

Since there are no field serviceable parts in the motor of the Power Unit, electrical troubleshooting and service is limited to replacing only those components as previously outlined.

Thorough inspection of wiring and connections is the only other electrical service that can be performed.


WIRING DIAGRAM

Fig. 6

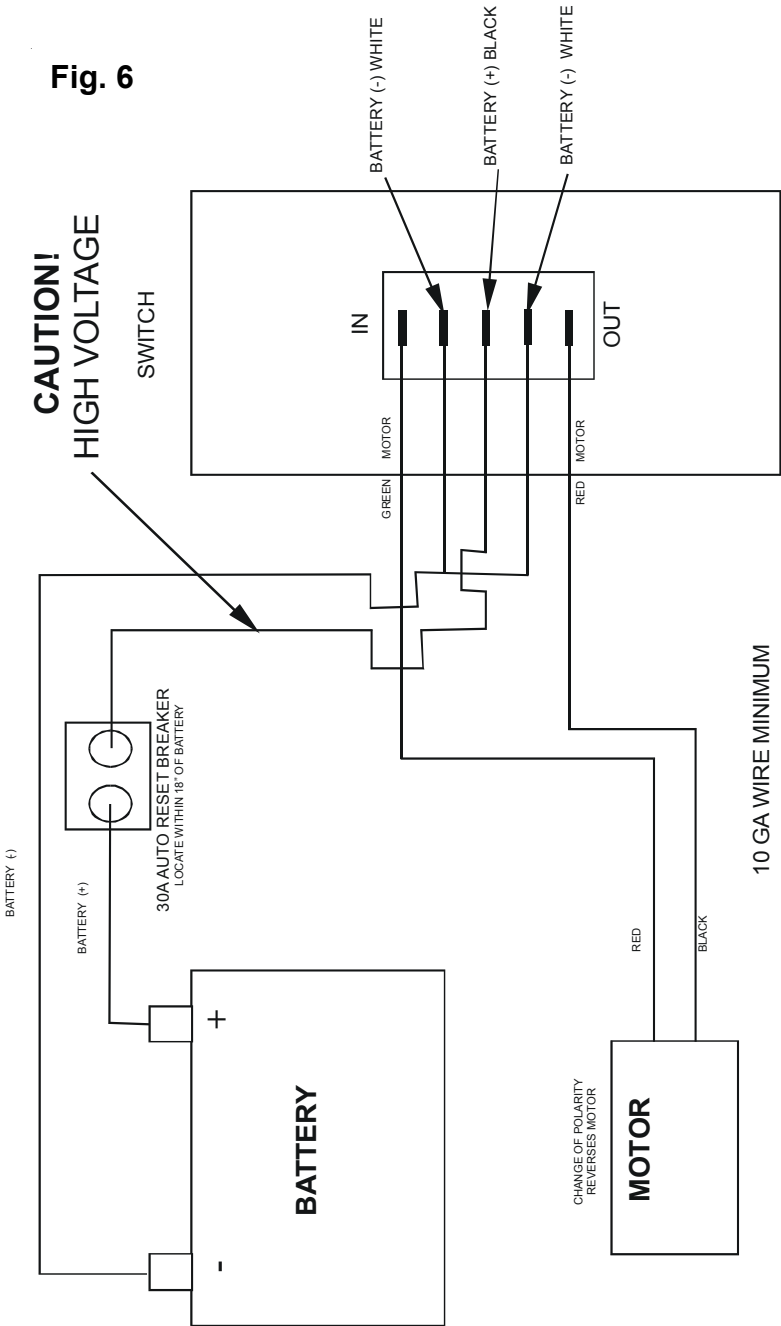

SLIDEOUT ADJUSTMENT DIAGRAM

Fig. 7

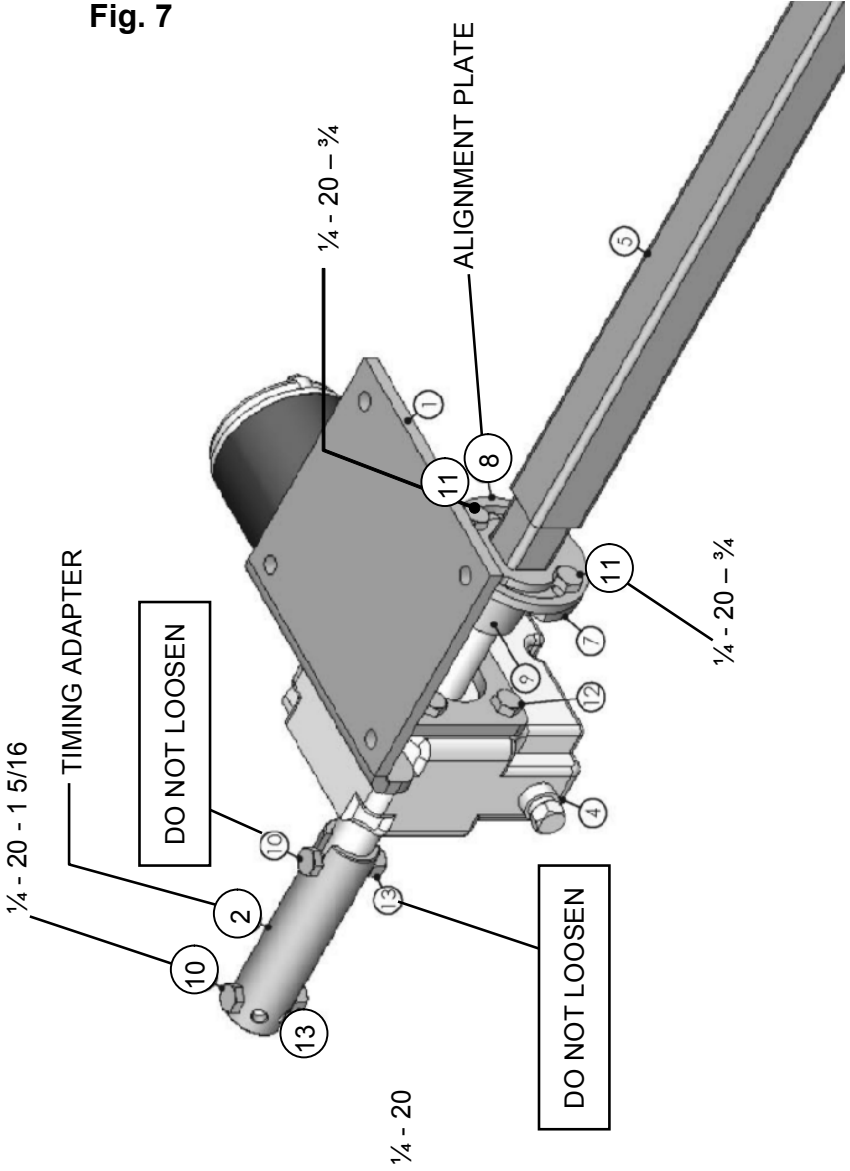

INSTRUCTIONS FOR ADJUSTMENT OF ROOM.

The *Lippert Embedded Rack Slideout System* can be timed and fine-tuned for optimum performance. In the event the travel of either side of this two-rail system should be out of time, follow this process for re-timing the slide-out room.

Note: When addressing issues regarding your slide-out room, remember to relay the information from the OUTSIDE of the coach. This note will help to standardize the information needed to be relayed to a service station or technical service at LCI.

Timing Adapter- (Fig. 6, #2)

1. Turn off engine. (Class A and C motorhomes)
2. Disconnect battery or slide-out motor wire leads. (Only one of the motor leads need be disconnected.)
3. Remove nut (Fig. 6, #13) from bolt (Fig. 6, #10).
4. Remove bolt from Timing Adapter. This frees the Timing Adapter from the gear assembly drive shaft.
5. Rotate drive shaft towards outside of coach until the next set of holes on the Timing Adapter line-up.
6. Return bolt to Timing Adapter assembly in new location.
7. Return nut to bolt and snug firmly.
8. Reconnect motor wire or battery
9. Draw room into coach.
10. Repeat process as needed.

Alignment Plate – (Fig. 6 #8)

1. Turn off engine. (Class A and C motorhomes)
2. Disconnect battery or slide-out motor wire leads. (Only one of the motor leads need be disconnected.)
3. Loosen both nuts (Fig. 6, #13, not shown) from both bolts (Fig. 6, #11) on Alignment Plate.
4. This allows for a free rotation of Alignment plate.
5. Rotate drive shaft towards inside of coach until room is in alignment from right to left.
6. Tighten nuts on bolts on Alignment Plate assembly in new location.
7. Reconnect motor wire or battery
8. Draw room into coach.
9. Repeat process as needed.

During troubleshooting, remember, by changing, altering or adjusting one thing, it may affect something else. Be sure any changes do not create a new problem.

ORDERING PARTS

To assist the customer service when ordering parts, please provide the following information:

1. Your Name
2. Company Name
3. Phone Number
4. Shipping Address
5. Billing Address
6. Purchase Order Number
7. Coach
 - A. Serial # and/or VIN #
 - B. Make
 - C. Model
8. Part Number
9. Description
10. Quantity

Please take your coach to an authorized service center for repairs. Systems that have been modified, adjusted, repaired or augmented by a party other than an authorized service center may void any warranty claim with Lippert Components, Inc.