

Cartridge Change Instructions

QL3B Head With Shut-Off Valve

CARTRIDGE REMOVAL

- Shut off water and relieve line pressure. Fully lift built-in shutoff valve handle until it stops.
- Hold head firmly. Turn cartridge to left 1/4 turn until rotation stops.



3. Pull cartridge down and out of head.

 


 


CARTRIDGE REPLACEMENT

 Align new cartridge lug with head label. Hold head firmly. Insert new cartridge into head.







- 3. Turn on water supply by lowering shut-off valve handle.
- NOW FLUSH CARTRIDGE! Run water through filter to drain for several minutes. Refer to cartridge label for specific flushing time.