



Happijac Division
(801)544-2585

TREAD LITE POWER STEP WIRING DIAGRAM

Operating Currents


(Averages based on operational testing)

2.5 – 3.0 Amps Extending


2.8 – 3.5 Amps Retracting

6-8 Amp spike current on start up.

11-12 Amp spike current on shut off.

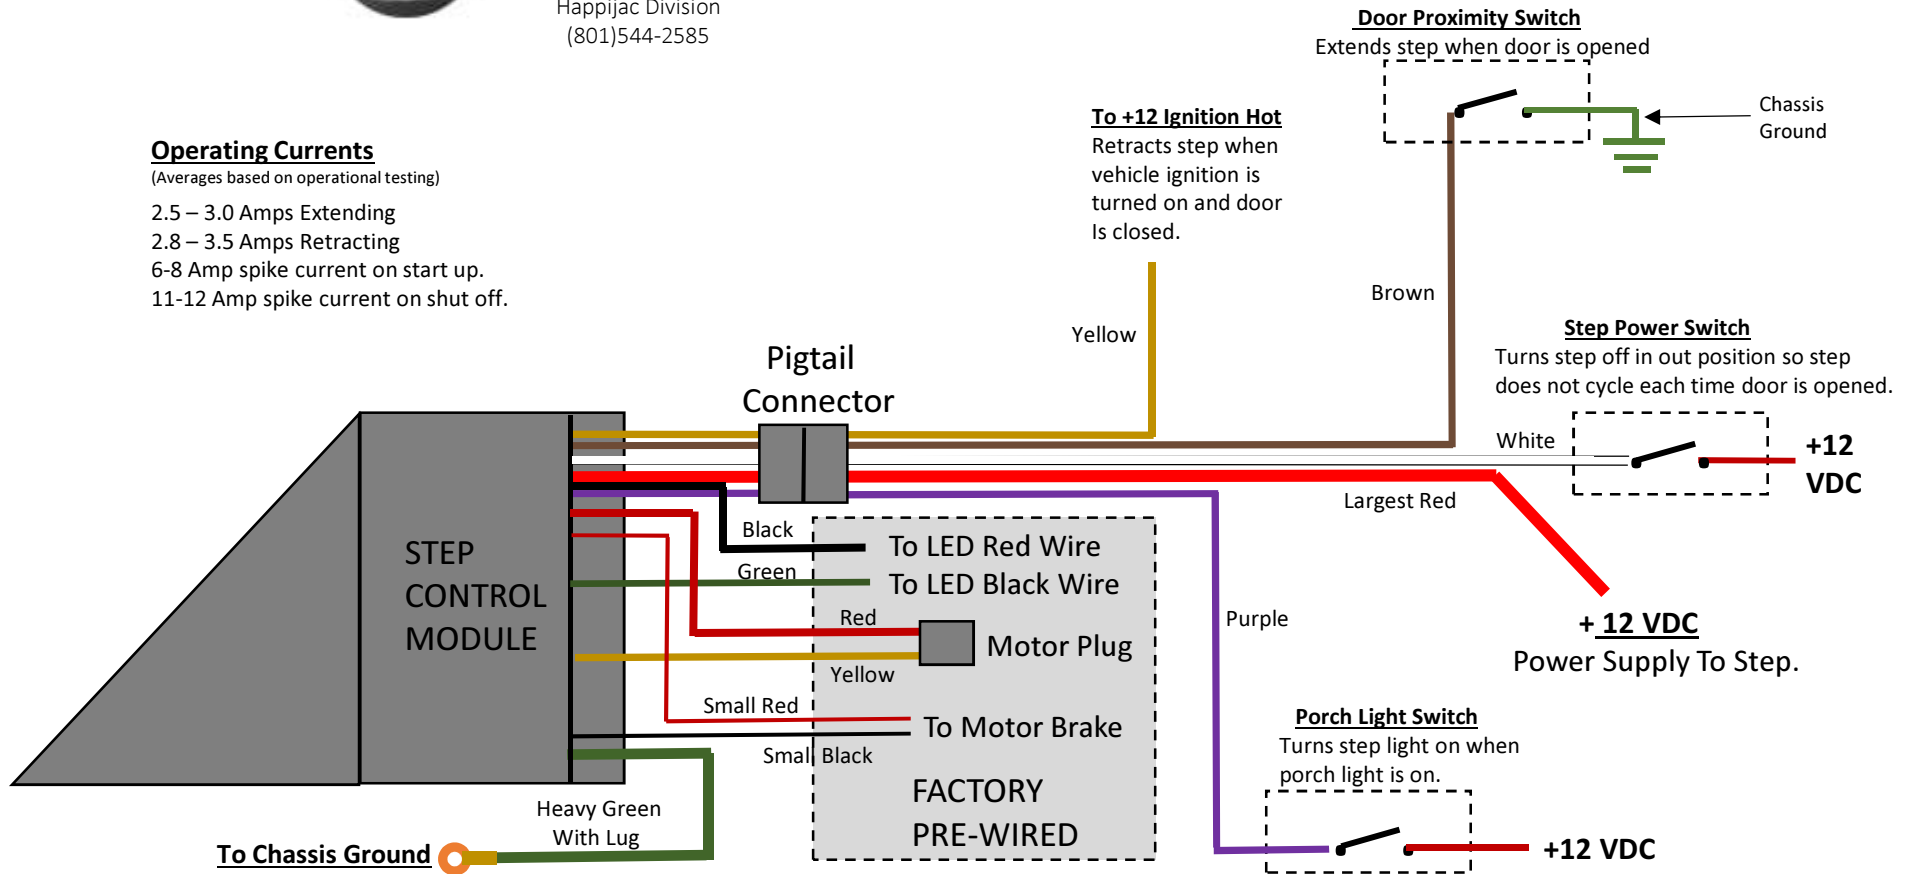

STEP BASE MOUNTING HOLE LOCATIONS

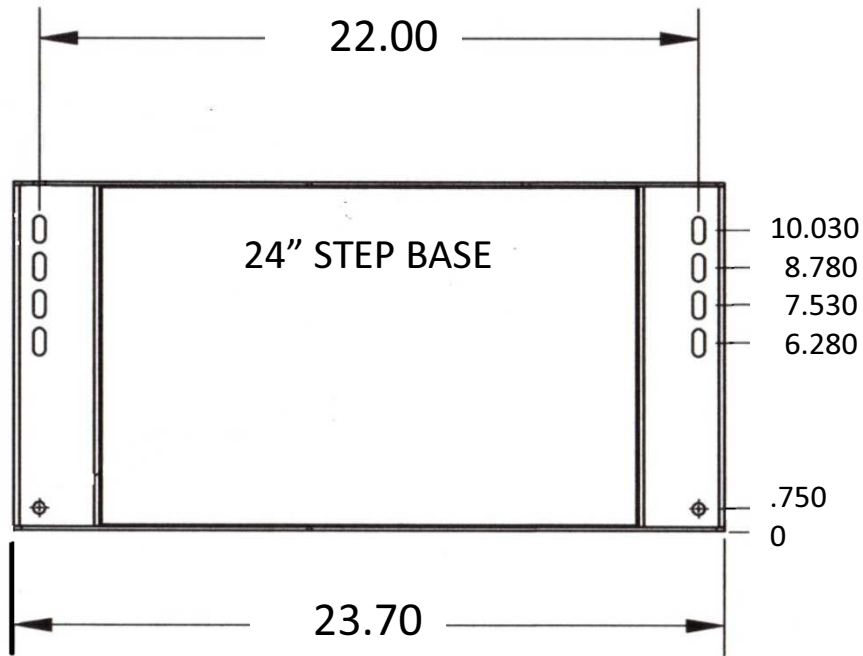

NOTES:

Distance to center of slotted holes measured from front edge of step base.

Use 3/8" diameter hardware for mounting

