

## WiFi on Steroids



Anytime - Anyplace

**Congratulations**, You have just purchased the finest wifi extender/booster on the market today. Please read all instructions before setting it up. If you need further assistance please call **(844) 333-9434 for FREE Technical Support**. We want to help you obtain a faster and stronger internet connection and we can help walk you through the process.

To connect to the FREE hotspots you can use your laptop, notebook, I-pad, smart phone or any other device that is wifi enabled.

### **\*BEFORE CONNECTING, YOU MUST COMPLETE THE FOLLOWING THREE STEPS\***

- (1) Reboot the personal device that you are using to connect our device (turn off & on)
- (2) Connect your device (laptop, I-pad, or smartphone) to the existing FREE wifi connection in the campground. Agree to their terms if there is a login page. This should eliminate having to agree to their terms of use later in the process as your device will remember.
- (3) Plug in our device then reset the device by putting a toothpick or the end of a paper clip, into the small hole on the lower right side. Push in and count to 5 and then let go. The device will reset itself.

### **FREE WIFI INSTRUCTIONS ARE BELOW**

After you have completed the three previous step above you must locate **Wireless N** on your computer, laptop or smart phone in the settings menu.

- (1) Connect to **Wireless N**. The option to “connect without setting up” or “connect automatically” might appear, if so please click there and connect. If not just choose connect.
- (2) Once you are connected to wireless N open a browser window, such as Internet Explorer, Safari, or Chrome, etc. Highlight and remove any existing IP address from the browser window and type in **192.168.1.254** then press ENTER.
- (3) A green page will appear. Your password is **admin** (all lower case) if not already in place.

A new screen will appear and you will choose **WIZARD**, then choose **WISP** to find available hotspots. If the scan has problems finding hotspots and continues spinning, (just **X** out search, choose **APPLY**, then **BACK** then **NEXT** until you see your campground connection.)

A variety of hotspots will appear. Choose the connection, usually the name of the campground. If they gave you a **password** when entering the campground a key box will open and you will enter **that password**. If the campground has **no password**, just select that hotspot and apply.

Your new connection will show up in the Wifi Menu on your computer with a **\_EXT** behind the **name of the campground** (example: **Jellystone\_ext**). Connect to your new wifi hotspot with full bars and a much stronger signal.

### PASSWORD PROTECTION

While you are connected to the free wifi hotspot at the campground, you can also create a secure connection with a password. This way no one can connect to your new wifi connection, or enter your private space while you are using the internet with your new connection.

1. On the same page choose **WIRELESS BOX**. **(Use back arrow if necessary to make page active again. You may have to unplug and replug device to obtain the 192.168.1.254 ADMIN PAGE then choose WIRELESS BOX)**. Remove existing SSID and enter your private SSID. The new SSID can be your initials or any name you choose. Then change **OPEN** to **WPA/WPA2PSK** and enter an **8 digit password with a combination of letters and numbers**. **(APPLY)**.
2. **After 100% please find and connect to your new hotspot you just created with your initials.**
3. **LASTLY - UNPLUG THE DEVICE AND PLUG IT BACK IN. LOOK FOR YOUR INITIALS OR NAME IN THE COMPUTER WIFI MENU AND CONNECT TO YOUR NEW SECURE HOTSPOT. You can now connect all other wifi enabled devices to your new private and secure connection using your private password.**

**ATTENTION: IF YOU EVER GET DISCONNECTED FOR ANY REASON, JUST UNPLUG THE DEVICE AND PLUG IT BACK IN. THE DEVICE WILL REMEMBER YOUR SETTINGS.**

For a complete list of **FREE WIFI LOCATIONS** in your area, please visit [www.wifionsteroids.com](http://www.wifionsteroids.com) and click on **FREE HOTSPOTS**. Truck stops, public library, Walmart, McDonald's, Campgrounds, etc.

### HOME ROUTER CONNECTION INSTRUCTIONS BELOW

**CONFIRM THAT YOUR LAPTOP OR OTHER WIFI ENABLED DEVICE IS CONNECTED TO YOUR CURRENT HOME WIFI ROUTER.** (Be sure you have followed steps 1-3 in the beginning of these instructions)

1. **AUTO CONNECT** - Press the **WIFI CONNECT** button on your home router until it starts blinking then let go. Then press the **WPS** button at the lower right side of the device until the green light begins to blink, then let go. The device and the router are now communicating with each other. Once the blinking stops, go to your wifi settings and connect to **WIRELESS N**. Check to see if you got connected to the internet. Try unplugging and plug in. **If still not connected do the following:**

Complete the steps for connecting to the **FREE WIFI CONNECTIONS on the front page**. Make sure you choose the **WISP function**. Find your home router in the available connections and choose select. **ENTER YOUR HOME ROUTER PASSWORD IN THE KEY BOX**. (Sometimes found on the bottom of your home router). You will see your new connection with **\_EXT** after your home router name. **DISREGARD ANY MESSAGE THAT SAYS YOU ARE NOT CONNECTED**. Connect to your **HOME Wifi** with **\_EXT** after it. Choose **Security Key option** (enter your home password) and **NOT PIN** option. **(un-plug and re-plug device if necessary.)** Now you are connected to your home router that is already password protected.