

LEVELING AND STABILIZATION

Zero Point Calibration

1. Set a carpenter's level on the floor inside the unit and use the manual controls to manually level the unit according to the carpenter's level. Do this for front to back and side to side level.
2. Once the unit is level, press the "ON/OFF" button to turn off the interface (Fig. 1A).
3. With the interface turned off, press and release the "FRONT" button 10 times and then press and release the "REAR" button 10 times (Fig. 1B-C). The interface will flash and beep, and the display should read "ZERO POINT CALIBRATE" (Fig 1). To set this position in the memory, press "ENTER" (Fig. 1D).

4. The display should read "ZERO POINT STABILITY SUCCESSFULLY SET" (Fig. 2).



5. The Level Up system is now calibrated and ready to use.



As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.