



Make sure pin is locked in receiver on vehicle.



If hitch is in the storage position, use hand to support hitch, pull pins and rotate.



Raise or lower hitch to the desired height and insert pins in holes.



Lock pins with cotter pins.



Pull the pin that unlocks the double ball, rotate to the desired size ball, insert pin in hole.



Lock pins with cotter pins.



To stow, use hand to support hitch, rotate ball to storage position, then pull pin on hitch and rotate underneath.



Before towing, make sure pins and balls are tight and locked with cotter pins.

<u>Caution!</u> Like any tool, the **TOW & STOW**[™] ball mount requires respect. Always use standard towing procedures and follow safety checklist (ball tight, safety chains, etc.). *Never* hook up safety chains to ball mount. *Never* overload your towing system. Always use caution when handling the **TOW & STOW**[™] ball mount. To avoid pinching fingers, *never* remove from receiver or carry this hitch without the locking pins in place.

7

For part numbers: TS10033B, TS10035B, TS10037B, TS10038B, TS10040B, TS10047B, TS10048B, TS10049B B&W Tow & Stow 09-14-2005



B&W Trailer Hitches 1216 Hwy 224 Humboldt, KS 66748 800.248.6564 www.turnoverball.com