
TDELLEC		
Thank you for choosi follow basic safety po appliances. Read all ir	recautions when	Jump Plus! Always n using electrical fully, Please keep
A. PRODUCT LAY	,	nce
Jump start s ocket	- Cibia	Indicator 12V 1 0 A output port
USBSV1 A output port LED Flash Light		19V3.5Ao utput port 19V3 1.5Ao utput port 14V1 A input port Switch
Home adaptor Car adaptor Large Car adaptor	1973.5Aoutpatport 000000000000000000000000000000000000	72 A o stiput port B For 129 v whick p reducts

B. OPERATION GUIDANCE

Press the switch to check the storage level of mPower Jump Plus All indicator lights go off when the charging is paused or completed.


- mPower Jump Plus Charging Instruction :
 1. Plug the home adaptor into the wall outlet.
- 2. Connect 14V 1A input port of mPower Jump Plus to the other
- Plug the car adaptor into the socket of cigarette lighter.
 Connect 14V 1A input port of mPower Jump Plus to the other end of car adaptor.

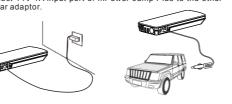

Jump start 12V vehicle Instruction:

- 1. Make sure that the number of indicators is not less than 3. 2. Plug the cord or jumper cable into the jump start socket. (See #1)
- and connect the BLACK clamp to the vehicle's battery negative (-) terminal. (See #2)
- 4. Check the Jumper Cable Indicator:
- a. If the indicator light is on (See #2), go to Step 5.
- b. If the indicator doesn't light up, check the clamp connection to the terminals. (See #3) If properly connected and indicator light is still not on (See #4), press the "TEST" switch and go on to Step 5.

6. When the vehicle is started, remove the Jump Starter and the Jump Clamps

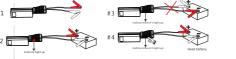

Charging Cell Phone or Tablet Instruction:

- . Plug the switch cable B to USB 5V 2A output port. Select appropriate connector and connect it to your mobile phones or tablet.
 3. Press the switch button to charge.
- 4.If doesn't work, please try another USB Output port.



Only for charging/power supply to 19V Notebook
1. Plug the switch cable A to USB 19V 3.5A output port. 2. Select appropriate connector for your Notebook and connect



it to the switch cable A and your Notebook.

3. Press the switch button to charge/power supply.



D. TECHNICAL SPECIFICATIONS: Size: 9.05" x 3.42" x 1.06" Weight: 1.35 lb Battery Capacity: 66.6Wh Output: 5V/1A, 5V/2A, 12V/10A, 19V/3.5A Full charging time: 8 hour Starting current: 300A Peak current: 600A Operating temperature: -20°C-60°/-4°F-140°F E. FAQ:

For power supply to 12V vehicle products or 12V

Plug the optional switch cable to 12V 10A output port.
 Connect the optional switch cable and 12V vehicle product

3. Press the switch button to power supply.

SOS, off) if you press slightly.

C. PARTS LIST:

- Q. How to turn off this appliance?
 A. This appliance will power off automatically when there is no load.

- H. Warning: A. It depends on the battery capacity of your cell phone. (Ex: iPhone4 will fully Always make sure the blue plug of the jumper cable is connected to the jump start socket tightly on the mPower Jump Plus before jump
- Q. How long will this appliance take to fully charge my cell phone?
- Q. How long will this appliance take to fully charge my notebook? A. 4-6 hours
- LED flash light
 Press the switch 3 seconds to start the LED flash light
 The 4 modes of LED light appear in order (normal, strobe, Q. If the Jump Plus is fully charged, how many times can I jump start a vehicle? A. Approx. 40 times.
 - Q. What's the lifetime of mPower Jump Plus?
 A. Usually 3-5 years under normal operating conditions.

 - Q. How long does the battery last after fully charged?
 A. 6-12 months, however, we suggest to recharge it every 3 months.
 - Q. If the Jump Plus is fully charged, how long will the battery last to jump start a vehicle?

 A. 6-12 months

F. TROUBLE SHOOTING:

O : Indicate all homogeneous materials' hazardous s in the Standard 2002/95/EC(RoHs).

Finding	Cause	Remedies
No response when pressing the switch button.	Low voltage protection of mPower Jump Plus is started.	Plug the adaptor into the 14V 1A input port to activate.
mPower Jump Plus is a bit hot when charging a Notebook.	The charging current is a bit high (3.5A)	Remove the battery of you Notebook and use thi appliance to supply powe directly, or disconnect mPowe Jump Plus from your Notebook and connect them again when it cools down

G. TOXIC AND HARMFUL SUBSTANCES:

Composition and amount of toxic and harmful substances in mPower Jump Plus

0 0 0 0 0

On not expose the appliance to heat

Charge only at ambient temperatures between -4°F and 1	
Charge only at ambient temperatures between 4 1 and 1	40° F
Charge only using the charger provided with the appliance	e

presence of flammable liquids, gases or dust Do not modify or disassemble mPower Jump Plus. Only a repair

Always take care when using the appliance

Do not allow the appliance to become wet

Do not immerse the appliance in water

technician may repair this unit

supervision

Do not use as a toy

Under extreme conditions, battery leakage may occur. Carefully wipe the the batteries. In case of skin or eye contact, rinse immediately with clean

environment and in accordance with government regulations

starting the vehicle. Otherwise, it will affect the results, even

Otherwise, it will damage the host and void the warranty.

3. DO NOT connect the two clamps. Otherwise, it may be

causing the blue plug to melt.

2. Always check if the jumper clamps are well connected, check if

the vehicle battery connector is rusted or dirty, clean it before jump starting the vehicle. DO NOT jump start again after 3 attempts.

dangerous!
4. DO NOT disassemble the host. Otherwise, it may be dangerous!

The mPower Jump Plus can be damaged and void the warranty.

Do not operate the appliance in explosive atmospheres, such as in the

his appliance is not intended for use by young or infirm persons without

Pb Hg Cd Cr(Vi) PBB PBDE water and seek medical attention At the end of their useful life, discard the appliance with due care for our



2. The warranty is only valid upon presentation of the original receipt (from dealer/retailer) by the original purchaser with the product to be repaired or

3. The warranty is void if the serial number, date of purchase and label has

4. The warranty does not cover damage or product failure resulting from normal wear and tear, physical abuse, improper installation, misuse, modification or repairs by unauthorized third parties

 $5.\mbox{We}$ do not assume responsibility for any loss or damage incurred during shipment or as a result of a force majeure

6.We are not liable for any incidental or consequential damages arising from the use or misuse of this product

7.All warranty claims are limited to repair or replacement of the defective product and at the sole discretion of us

8.If we repair or replace the product, the product will be covered for the remaining time of the original warranty period. Repair or replacement may involve the use of reconditioned units which are equivalent in function. Replaced part or product becomes the property of us

9. Consumable components such as batteries are not covered by the warranty

mPower Technologies, Inc. 587 Connecticut Ave.

Norwalk, CT 06854

1-877-674-2738



The product is insured by Everest