



SEAT ADAPTOR KIT #88138 INSTALLATION INSTRUCTIONS




3765-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

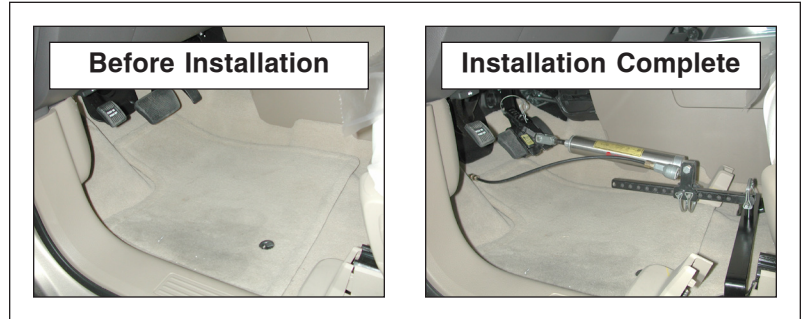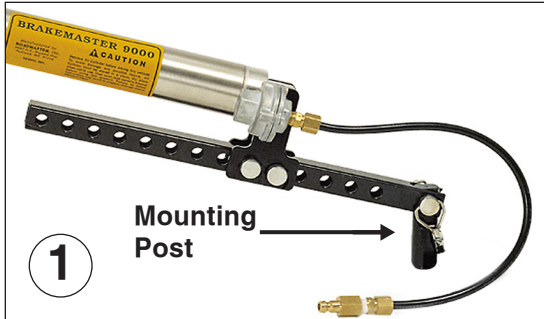

- ## Parts List
- (1) 3/8" lock washer
 - (1) 3/8" x 3/4" bolt

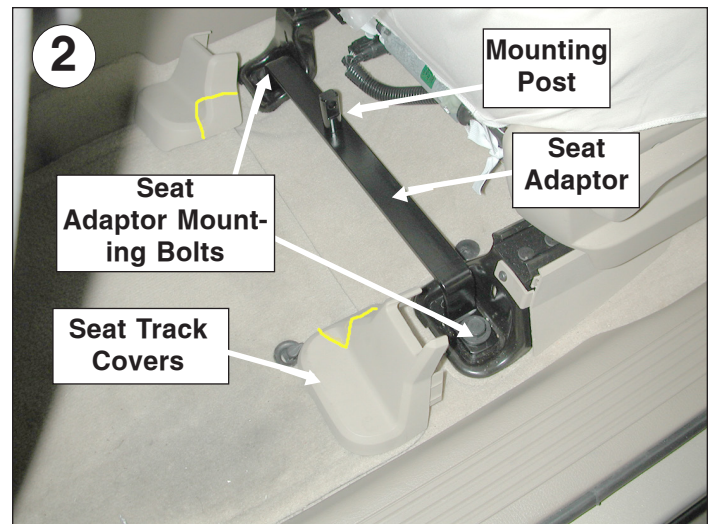

Instructions

1. Secure the mounting post (Fig.1) to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adaptor has a countersunk hole, you must use the Allen head bolt and lock washer included with this kit.
2. Remove the seat track covers and the two 18mm factory seat track mounting bolts. Place the seat adaptor over the holes you removed the 18mm factory seat track mounting bolts from. Bolt the adaptor into place using the 18mm factory seat track mounting bolts. The seat track covers need to be trimmed to accommodate the seat adaptor. Use the yellow lines as a guide for correct trimming or you can leave them off.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.