



SEAT ADAPTOR KIT #88196 INSTALLATION INSTRUCTIONS




3636-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

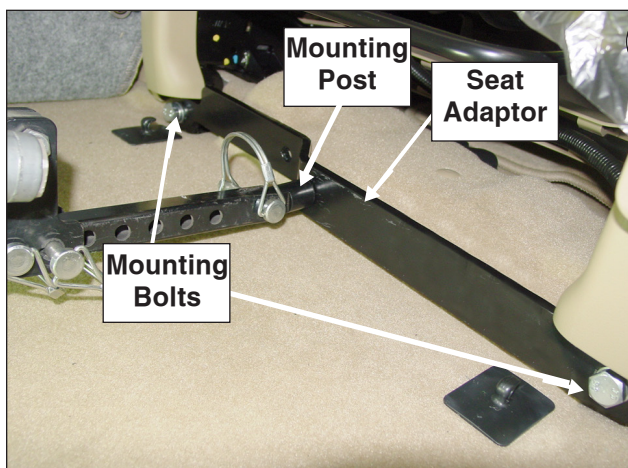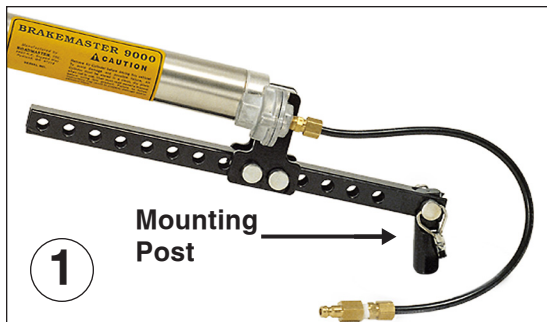

2

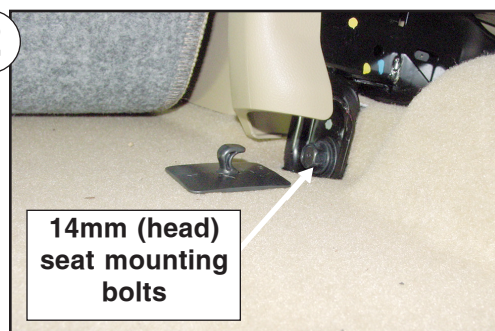

Instructions

1. Secure the mounting post (Fig.1) to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adaptor has a counter-sunk hole, you must use the Allen head bolt and lock washer included with this kit.

2. Start by removing the two 14mm (head) seat mounting bolts, located behind the plastic covers. Now, place the 1" x .188 wall x 2" spacers over the holes you removed the 14mm (head) bolts from. Set the seat adaptor over the spacers and bolt into place using the supplied 10mm x 1.25 x 80mm bolts, flat washers and lock washers.

Parts List

- (2) 10mm x 1.25 x 80mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1" x .188 wall x 2" pipe spacers
- (1) 3/8" x 3/4" bolt
- (2) 3/8" lock washer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.