


SEAT ADAPTOR KIT #88280 INSTALLATION INSTRUCTIONS



4371-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

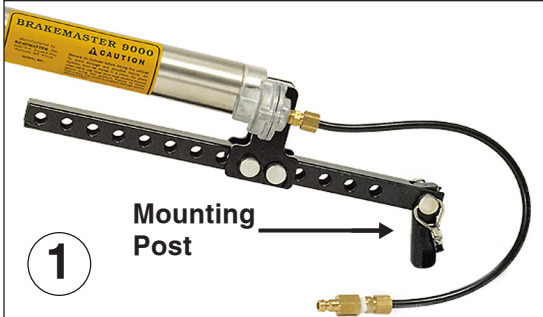

Instructions

1. Secure the mounting post (Fig.1) to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adaptor has a counter-sunk hole, you must use the Allen head bolt and lock washer included with this kit.
2. Push the driver's seat back all the way and pull out the seat track cover. Mark the cover for trimming, as shown by the blue line in Figure 2. Figure 3 shows the completed trimming. Now, push the seat track cover back in.
3. Place the seat adaptor under the ends of the seat track. *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
Using the supplied 5/16" x 1" socket head bolts and lock washers, bolt through the existing holes in the seat track and into the adaptor (Fig.4). *Note:* if holes do not exist, use the holes in the seat adaptor as a template and drill a 3/8" hole straight down through the seat track.
4. Attach the air cylinder to the seat adaptor.

Parts List

- | | |
|----------------------|----------------------------------|
| (1) 3/8" lock washer | (2) 5/16" x 1" socket head bolts |
| (1) 3/8" x 3/4" bolt | (2) 5/16" lock washers |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.