



# **TORKLIFT**

## **I N T E R N A T I O N A L**

**OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.**



### **TRUE FRAME MOUNTED CAMPER TIE DOWNS**

**IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS**

**F2000**



**REVISED vers7 BY: CW 9/30/15**

**TECH SUPPORT (800) 246-8132**

**AFTER INSTALL, PLEASE GIVE  
THIS BOOKLET TO YOUR CUSTOMER**

# Warnings

## Truck Bed and Camper Protection

Torklift **does not** recommend installing your camper on top of a plastic bed liner (or other compressible material such as foam). These materials can act as a spring, causing increased vertical truck camper movement independent of the vehicle. Plastic bed liners can slide on the truck bed surface, and the truck camper can slide on top of the bed liner. Using a plastic bed liner or similar compressible material will void your warranty and may additionally cause truck bed and/or camper damage.

Minor movement or settling can occur in some incidental harsh driving conditions (on or off-road). A rubber bed mat is recommended to protect the truck bed and camper, but is not a requirement to maintain the Torklift legendary lifetime warranty.

## Suspension

To significantly reduce body roll, sag and sway Torklift strongly recommends the StableLoad. Torklift International StableLoads improve safety, handling, and to help level your truck. More information can be found at ([www.Torklift.com/stableload](http://www.Torklift.com/stableload)).

If your truck is additionally equipped with suspension air bags Torklift cautions against over pressurization as this may lead to unsafe vehicle handling characteristics. We have found that airbags used in conjunction with StableLoads have allowed operators to lower air bag pressure by 50% or more. Only pressurize suspension air bags enough to level the truck.

# F2000 PARTS INVENTORY

2 - TIEDOWN RECEIVERS	4 - 1/2" BEVEL WASHER
2 - STANDARD BENT INSERTS	12 - 1/2" FLAT WASHER
6 - 1/2" LOCK WASHER	6 - 1/2" GRADE 8 NUT
2 -1/4" SNAPPER PINS	2 - TORKLIFT INSERT STICKERS
6 - 1/2" X 3"(7.5cm long) GRADE 8 BOLT	1- 1/2" BOLT FISHER
8 - 1/2" STAR WASHERS	2- 5/8" HOOK BRACKETS
4 - 1"(2cm)X2" (5cm) PLATE WASHERS	8 - 1/2"X2.25" HD FENDER WASHER

## **STEP 1)**

INSTALLING THE PASSENGER SIDE FIRST: LOOK AT THE FRAME UNDER THE FRONT PORTION OF THE BED, NOTICE THE CROSS MEMBER. USING ONE SUPPLIED 5/8" HOOK BRACKET, INSTALL ONE 1/2" X 3" BOLT THROUGH THE PIPE THAT IS WELDED TO THE UNIT. (SEE PHOTO A) NEXT, USING THE SUPPLIED HOOK BRACKET, PLACE IT ON TOP OF THE FRAME JUST BEHIND THE FIRST BED CROSS MEMBER. (SEE PHOTOS B AND C)

## **STEP 2)**

TAKE THE PASSENGER SIDE TIE DOWN AND PLACE IT ON THE FRAME UNDER THE BED CROSS MEMBER. PLACE THE HOOK BRACKET (PREVIOUSLY INSTALLED) THROUGH THE TOP OF THE TIEDOWN (SEE PHOTO D) PLACE A 1/2" HEX NUT ON THE END FOR RIGHT NOW TO KEEP THE RECEIVER FROM FALLING.

## **STEP 3)**

NEXT HOLD THE TIE DOWN RECEIVER STRAIGHT ALONG THE FRAME AND MAKE THE TOP OF THE RECEIVER LEVEL WITH THE BOTTOM OF THE BED. (SEE PHOTO E) MARK THE FRAME THROUGH THE SECOND HOLE ON THE LEFT SIDE OF THE UNIT WITH A MARKER. ON THE RIGHT SIDE OF THE TIE DOWN, MARK THE FRAME THROUGH THE BOTTOM HOLE NEXT TO THE BEND IN THE PLATE. (SEE PHOTO F)

## **STEP4)**

AFTER MARKING THE HOLES, REMOVE THE TIE DOWN AND DRILL THE PREVIOUSLY MARKED HOLES USING A 1/2" DRILL BIT. THEN ASSEMBLE THE FOLLOWING FASTENERS: TWO 1/2" X 3 (7.4cm) GRADE 8 BOLT, ONE 1/2" STARWASHER, ONE 1"(2cm)X 2"(5cm) PLATE WASHER, AND ONE MORE 1/2" STAR WASHER. (SEE PHOTO G) PLACE THE ASSEMBLED FASTENERS FROM THE INSIDE OF THE FRAME OUT, THROUGH THE PREVIOUSLY DRILLED HOLES. (SEE PHOTO H) NEXT TAKE THE FOUR SUPPLIED 1/2" X 2.25" HD FENDER WASHERS AND PLACE THEM ON THE BOLTS JUST INSTALLED, ALONG WITH THE TWO 1/2" BEVEL WEDGE WASHERS, THICK EDGE TOWARDS BOTTOM. (SEE PHOTO I)

## **STEP 5)**

NEXT PUT THE TIE DOWN BACK ONTO THE FRAME BE SURE THAT THE BOLTS ALLIGN WITH THE CORRECT HOLES, AND ASSEMBLE THE FOLLOWING ONTO EACH BOLT. TWO 1/2" FLATWASHERS, ONE 1/2" LOCK WASHER, AND FINALLY ONE 1/2" NUT ONTO EACH BOLT. (SEE PHOTO J) NOTE- THE TIE DOWN WILL BE PUSHED AWAY FROM THE FRAME FOR CLEARANCE.

**STEP 6)**

DRIVER SIDE: YOU WILL FOLLOW THE EXACT STEP 1-5, KEEP IN MIOND THEY ARE EXACT OPPOSITE AND YOU MAY NEED TO TAP THE TWO FACTORY PLASTIC FASTENERS THAT HOLD THE FUEL LINE. (YOU WILL NEED TO SLIDE THE TIE DOWN RECEIVER UNDER THE E-BRAKE CABLE.) (SEE PHOTOS L AND M.)

**STEP 7)**

TIGHTEN ALL FASTENERS TO **60 FT.LBS (81nm)**

**\*NOTE:** THE INCLUDED TIEDOWN INSERTS COME WITH 2 PREDRILLED HOLES. WHEN HOOKING UP YOUR CAMPER, EITHER HOLE MAY BE USED PROVIDING THERE IS A MINIMUM OF 2" CLEARANCE BETWEEN THE CHAIN/TURNBUCKLE ATTACHING ASSEMBLY AND THE TRUCK BED WALL. THERE ARE ALSO 2 PRE-PUNCHED HOLES LOCATED ON THE TRIANGULAR BULLET PLATE ON THE END OF EACH TIEDOWN INSERT. WHILE EITHER OF THE TWO HOLES CAN BE USED, THE HOLE THAT PROVIDES THE GREATEST ANGLE IS PREFERRED.

DO NOT INSTALL YOUR TRUCK CAMPER ON TOP OF A DROP IN PLASTIC BEDLINER, AS YOUR CAMPER CAN SLIDE RESULTING IN SEVERE BED DAMAGE! USING A RUBBER BEDMAT WILL MINIMIZE MOVEMENT AND WILL ENSURE THE WARRANTY ON YOUR TIEDOWN SYSTEM.

PHOTO A



PHOTO B (PASSENGER SIDE)



PHOTO C (PASSENGER SIDE)



PHOTO D (PASSENGER SIDE)



PHOTO E (PASSENGER SIDE)



PHOTO F



PHOTO G



PHOTO H



PHOTO I

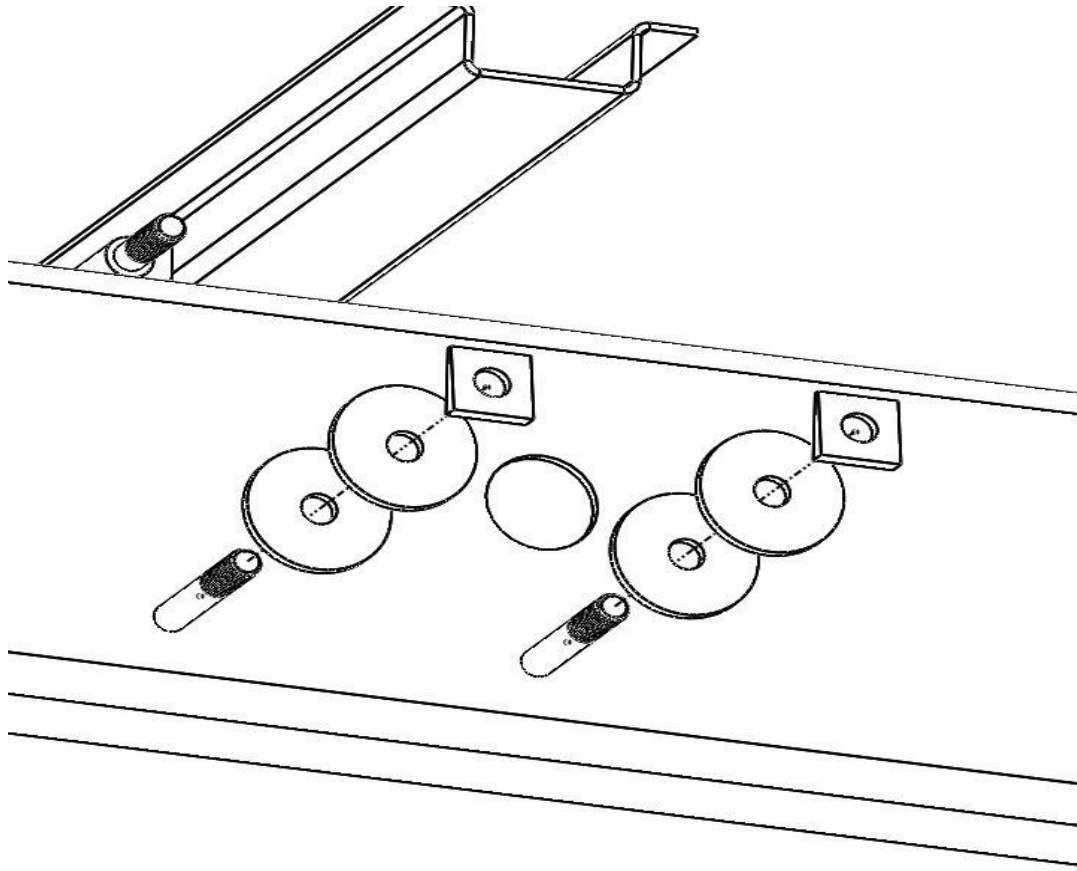


PHOTO J

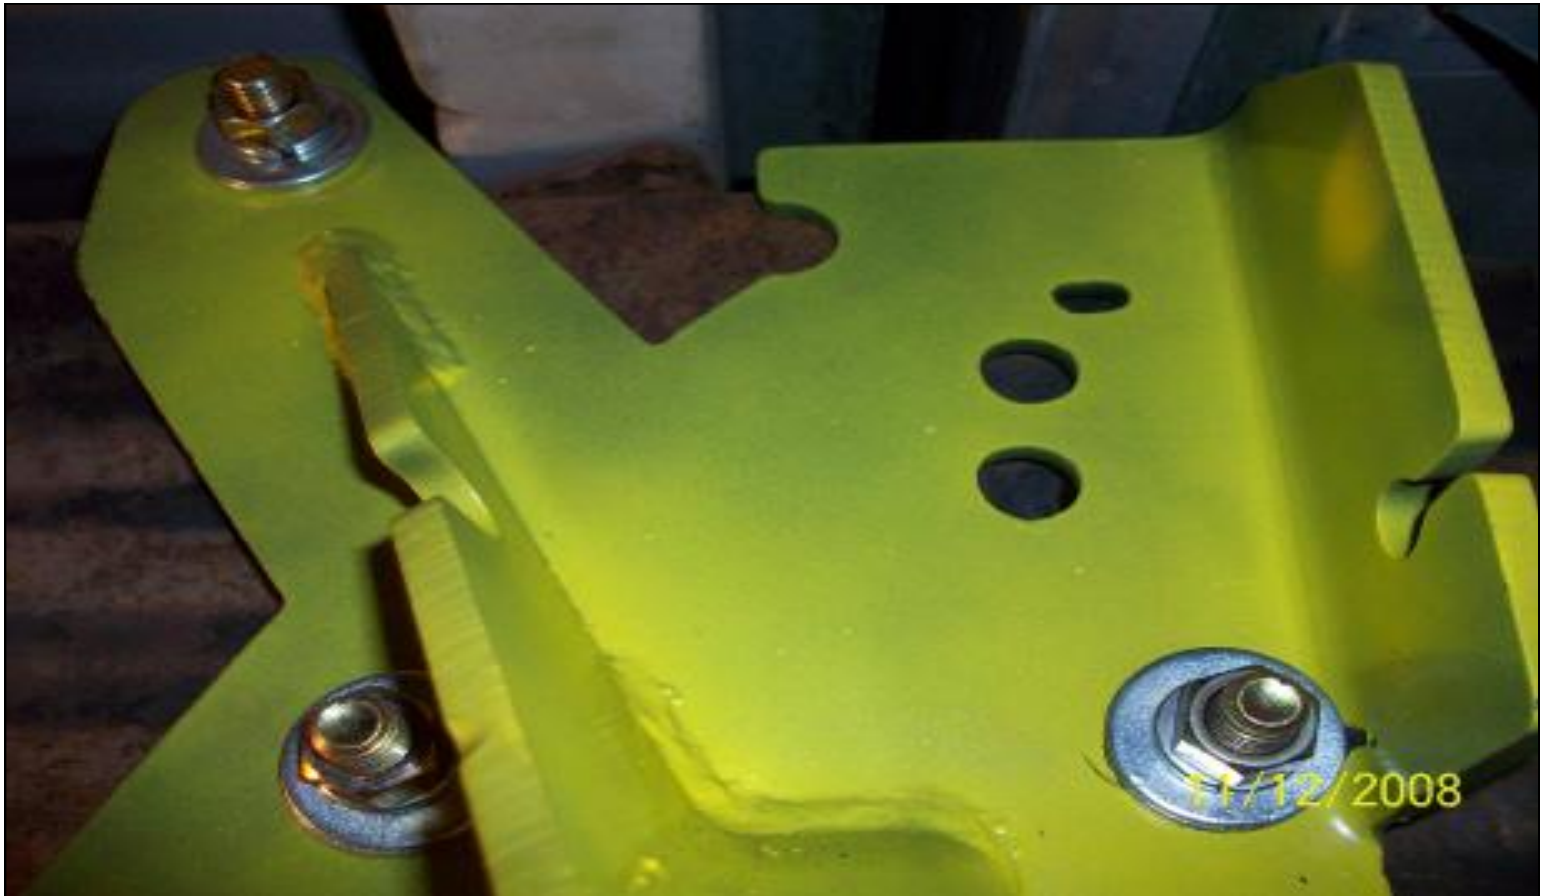




PHOTO L (DRIVERS SIDE)



PHOTO M (DRIVERS SIDE)



# **INSTRUCTIONS FOR MAINTENANCE OF POLISHED STAINLESS STEEL PRODUCTS**




**Torklift utilizes quality grade 304 stainless steel in this product.**

**304 stainless steel is well known for its anti corrosive properties, however in some environments such as coastal regions or when in contact with some road chemicals, corrosion may occur.**


**We recommend occasional polishing of our product to maintain its attractive finish. Use an approved stainless steel cleaning/polishing product, which can be purchased from any automotive supplier.**

# TORKLIFT'S BOLT FISHING GUIDE

Your guide to understanding the installation of our frame mounted tie downs.

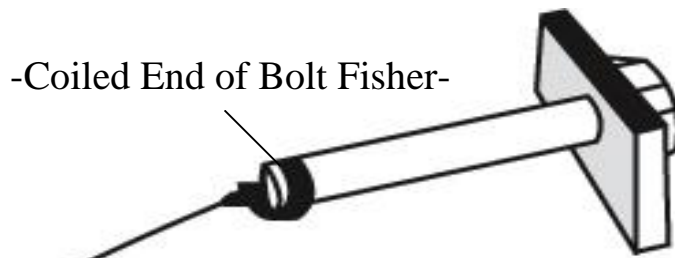


Note: The hardware may vary as to what is being fished along with the bolt. In this instance a 1" X 2" plate washer is being fished along with the hex bolt. Different applications may require fishing through various star washers and flat washers for example.

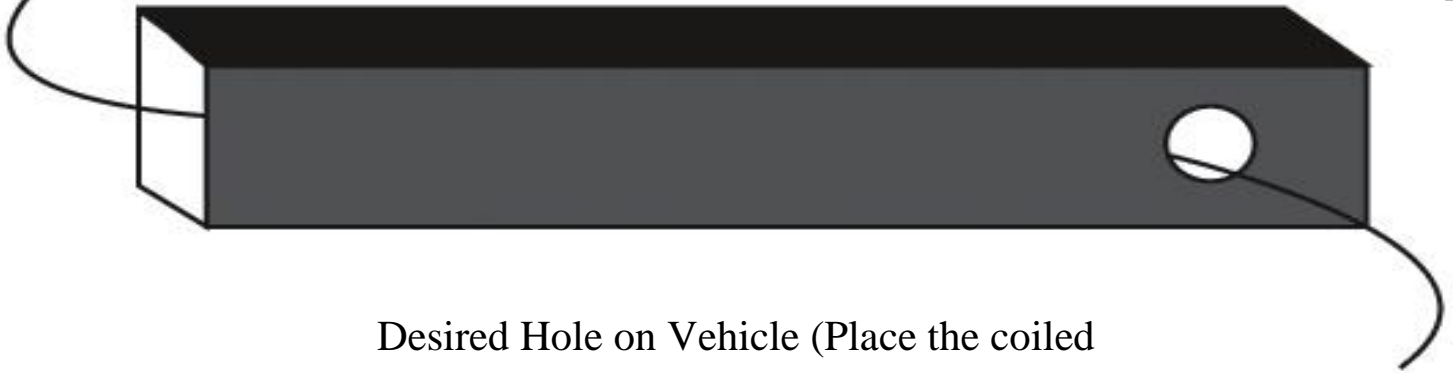

Desired Hole on Vehicle (Place the coiled end of the bolt fisher through this hole).

This side of the Bolt Fisher should come out of a hole where the required hardware (for example 1" X 2" plate washer) can pass through.

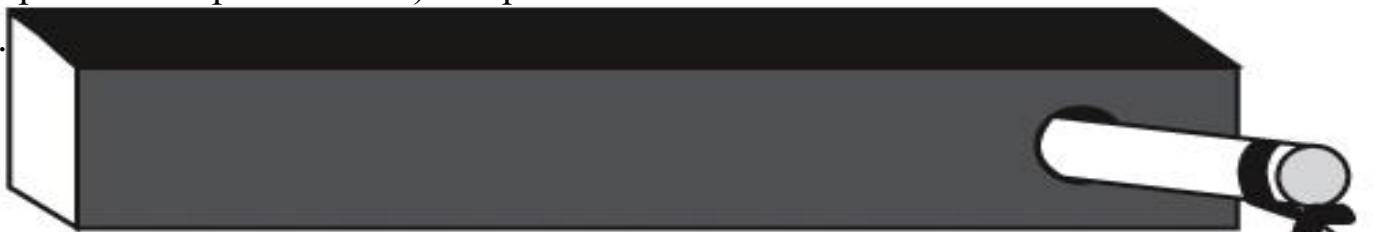

This bottom example shows the bolt when it's completely fished through the vehicle. You may find it easier to keep the bolt fisher attached until you get the tie down receiver in place so that the bolt doesn't fall into the vehicle frame.

**WARNING: PULLING TOO HARD ON THE BOLT FISHER CAN RESULT IN LOST FASTENERS, OR BROKEN BOLT FISHER.**

# ***TIEDOWN INSERT INSTALLATION INSTRUCTIONS***

*On one end of each of your tie down inserts is a triangular plate referred to by Torklift as a bullet plate. Your tie down inserts should be installed with the shorter side of the bullet plate facing away from each other, i.e.. The shorter side of the front insert should point to the front of the truck and the shorter side of the rear insert should point towards the rear of the truck.*

*Once installed, attach the TorkLift directional stickers to the face of the bullet plate on the insert as a reminder.*

## ***DRIVERS SIDE FRONT***



## ***DRIVERS SIDE REAR***



***IMPORTANT NOTE:*** *Your tie down inserts are designed to have clearance inside of the receiver. This is to account for road debris, as well as aid in installation and removal. Some rattle may be expected if the inserts are left installed while not under load from the camper.*

# **RECOMMENDED TRUCK CAMPER**

## **INSTALLATION INSTRUCTIONS**

When securing any heavy load (especially a camper) in your truck bed, your front tie down points should pull the load forward as much as possible. Some camper anchor points may differ with different manufacturers, as well as the camper jack mounting locations. Your Torklift tie down inserts has offset triangular brackets to increase the angle of pull. These are designed to be used in the front facing forward, and the rear facing rearward but can be used in either front or rear. These recommendations are to be considered and followed as a basic rule of thumb. Obviously there will be some applications where this may not be possible. At a minimum, if opposite pull of both front and rear tie downs cannot be achieved for whatever reason, you should have at least a forward pull at the front or rear location.

If your camper does not come with Rubber Bumpers on the front lower portion of the camper, installing Rubber Bumpers (Torklift has Rubber Bumpers available Part A7001) or using a block of wood such as a 2 x 4 in the bed, will prevent the camper from damaging the front bulk head of the truck bed.

Minor movement (or settling) can occur in some incidental harsh driving conditions (on or off road). A rubber bed mat is not a requirement to maintain the lifetime warranty on a Torklift system, but a strong recommendation simply as a safety precaution to protect the truck bed, the bottom of the camper and to give the camper additional support.

**TORKLIFT DOES NOT RECOMMEND:** Installing your truck camper in your truck on top of a drop in plastic bed liner!!! The drop in plastic bed liners can slide on top of the truck bed surface, and the camper can slide on top of the slick surface of the bed liner. The liner can also act as a spring causing a trampoline effect increasing vertical truck camper movement, independent of the vehicle, possibly resulting in truck bed, and camper damage!

## **INSTRUCTIONS FOR FINISH MAINTENANCE**

### **OF TORKLIFT PRODUCTS**

#### **POWDER COATED STEEL:**

To keep your Torklift products looking good follow these guidelines. All steel powder coated Torklift products are sandblasted for maximum adhesion and use a high quality industrial urethane based powder coat. Due to the extreme, harsh, undercar environment that your Torklift products live in, (consistently sprayed with corrosive road chemicals such as salt, and road debris), Torklift does not warranty the power coated finish.

To minimize corrosion from these factors on powder coated steel products, Torklift recommends regularly cleaning and inspecting the powder-coated surface and touching up any affected areas with enamel or urethane based aerosol paint product. If there are any areas of surface rust, there are also aerosol spray rust converters available on the market that can be used as a preparation to touch-up paint application. These finish maintenance products are available at any automotive parts supplier.

#### **POLISHED STAINLESS STEEL:**

Torklift utilizes quality grade 304 stainless steel in our stainless steel polished products. 304 stainless steel is well known for its anti-corrosive properties. However, in some environments such as coastal regions or when coming in contact with some road chemicals, corrosion may occur.

For a quick clean simply use WD40 and a cloth rag. We also recommend occasional polishing of our polished stainless products to maintain their attractive finish. Use an approved stainless steel chrome or aluminum mag wheel polish cleaning product, which can be purchased from any automotive parts supplier.

# **Torklift International Limited Lifetime Warranty Information**

**322 Railroad Ave North, Kent, WA 98032**

Torklift will require proof of purchase to register, with pictures of any defective product before issuing a replacement. Torklift will not register any product without proof of purchase, which can be faxed, scanned, emailed, or mailed to the information provided below. Torklift warrants its hitches, custom hitch receivers, frame mounted tie downs, turnbuckles, and accessories (excluding wire harnesses which carry a 90 day warranty) from date of purchase against defects in material and workmanship under normal use and service for the ownership life of the original consumer purchaser. **ALL COMMERCIAL APPLICATIONS ARE WARRANTED FOR A PERIOD OF 90 DAYS FROM THE DATE OF INSTALLATION/SERVICE.** Torklift will replace **FREE OF CHARGE** any part, which proves defective in material or workmanship when presented to Torklift, **TRANSPORTATION CHARGES PREPAID** by purchaser, at the address above. **THIS WARRANTY IS LIMITED TO DEFECTIVE PARTS REPLACEMENT ONLY. LABOR CHARGES AND/OR DAMAGE INCURRED IN INSTALLATION OR REPLACEMENT, AS WELL AS INCIDENTAL AND CONSEQUENTIAL DAMAGES CONNECTED THEREWITH ARE EXCLUDED.** This warranty does not include the finish or paint on our products. Rusting, cracking or peeling of the finish is also excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to Torklift products as a result of misuse, abuse, neglect, accident, improper installation or any use violation of instructions furnished by Torklift or **WHEN USED IN ANY COMMERCIAL APPLICATION WILL VOID THE WARRANTY.** This warranty gives you specific legal rights, and you may also have rights, which vary from state to state. With warranty service, you may be able to go to a small claims court, a state court or a federal district court.



**OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.**

**322 Railroad Ave North, Kent, WA 98032**

**Phone (800) 246-8132 Fax (253) 854-8003**

or visit our website: [www.TorkLift.com](http://www.TorkLift.com)

Dear Valued Customer,

Thank you for making TorkLift your choice for truck, camper packages and accessories for your vehicle. By choosing TorkLift products, you have chosen a company that has been serving the RV industry for nearly 40 years and whose name has become synonymous with strength, quality and advanced design and installation.

Please take a few moments of your time to complete the Product Registration Warranty Card on the next page. When registering your newly purchased TorkLift products, you can be assured that your contact information is secure and that you and your product are getting the attention and respect that you deserve.

Thank you again for choosing TorkLift quality products.

**Register for your lifetime warranty and receive a free Torklift  
International gift.**

To Fax: Send copies of the questionnaire, warranty card and receipt to  
253-854-8003

To E-mail: Send copies of the questionnaire, warranty card and receipt to  
warranty@torklift.com

To Mail: Send to Torklift International 322 Railroad Ave North, Kent, WA 98032

## Frame Mounted Tie Downs

Leading the camper tie down industry in strength, quality, advanced design and installation. TorkLift TRUE frame mounted tie downs are far superior to all tie down systems available.



The TorkLift system is unique in its design and is patented. Four independent tie down points (with no belly or crossbar) working much like your receiver type trailer hitch as the inserts are removable allowing the system to be virtually undetectable when not in use.

They are designed for each make and model to fit tight to the frame so as not to compromise ground clearance. TorkLift tie downs are not universal ‘one size fits all’ therefore all the problems with correct fit for each particular application have been eliminated.

## Original SuperHitch & SuperHitch Magnum

High strength extended hitch system engineered for safely towing all types of trailers behind your truck and camper. With a max towing capacity of 14,000 lbs.(6350kg) with an extension\*, (17,000 lbs.(7711kg) to 20,000 lbs.(9071kg) without\*) the Original SuperHitch and SuperHitch Magnum are rated the strongest in the industry.



**CONTACT YOUR LOCAL DEALER FOR MORE DETAILS**

\*Weight capacity varies depending on the SuperHitch and SuperTruss extension setup.





# **TORKLIFT**

# **INTERNATIONAL**

**OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.**

## **OFFICIAL WARRANTY REGISTRATION CARD**

PLEASE FILL OUT THIS FORM COMPLETELY AND RETURN TO TORKLIFT WITHIN  
30 DAYS OF PURCHASE ACCOMPANIED BY A COPY OF YOUR ORIGINAL RECEIPT

**TODAY'S DATE:** \_\_\_\_\_

### **1. PART(S) PURCHASED**

PART#: \_\_\_\_\_ PART#: \_\_\_\_\_  
PART#: \_\_\_\_\_ PART#: \_\_\_\_\_

### **2. PURCHASER INFORMATION**

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP / POSTAL CODE: \_\_\_\_\_

PHONE: (     )     -     EMAIL: \_\_\_\_\_

### **3. TRUCK INFORMATION**

YEAR: \_\_\_\_\_ MAKE: \_\_\_\_\_

MODEL: \_\_\_\_\_ BED LENGTH: \_\_\_\_\_

### **4. CAMPER INFORMATION**

YEAR: \_\_\_\_\_ MAKE: \_\_\_\_\_ MODEL: \_\_\_\_\_

### **5. DEALER INFORMATION**

PURCHASED FROM: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP / POSTAL: \_\_\_\_\_

INSTALLED BY:    OWNER    ABOVE DEALER    ANOTHER DEALER

IF ANOTHER DEALER, WHO: \_\_\_\_\_