


# Spa35 Template

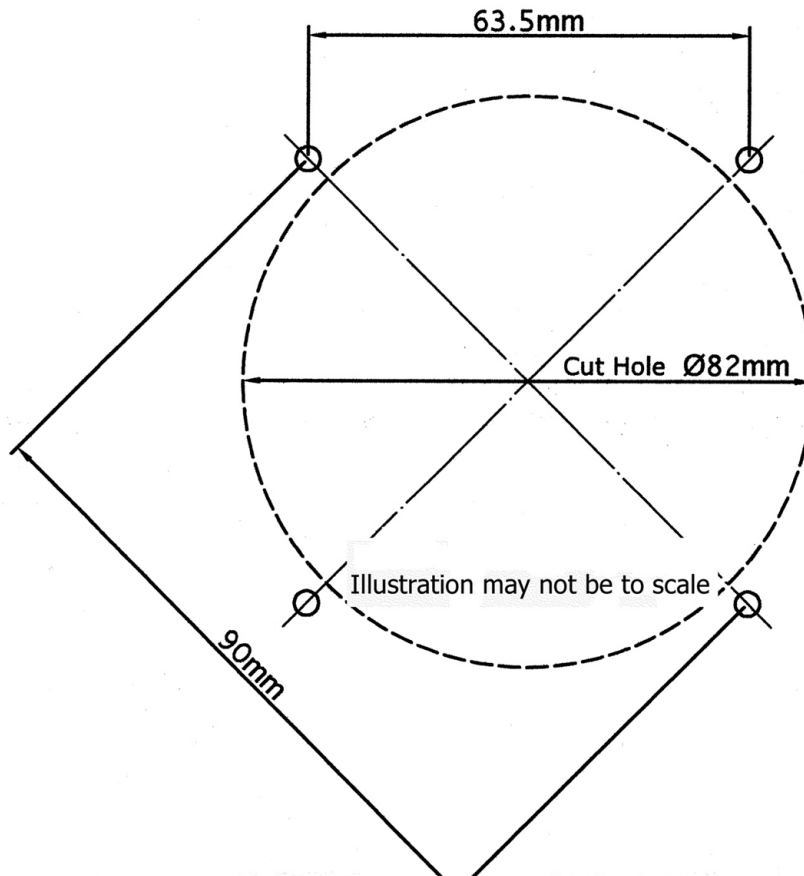

## Installation

- 1) Find a location which allows speaker to lay flat
- 2) Use template for appropriate spacing
- 3) Mark and cut a 64.5mm (2.5" >) hole
- 4) Position speaker in mounting hole and mark screw holes
- 5) Use drill for 1/8" screw holes
- 6) Connect (+) speaker wire to large tab, (-) speaker wire to small tab
- 7) Apply non-caustic RTV silicone sealant to rear of speaker (optional)
- 8) Position U-Clips over screw holes as illustrated
- 9) Secure speaker with provided screws

**Note: Do Not Allow Silicone to Squeeze and Contact Rear of Speaker Cone**



### WARRANTY POLICY

PQN Enterprises, Inc. audio products are warranted to be free of manufactured defects in materials and workmanship for a period of 1 (one) year from date of original purchase.