

by UnderCover

## **MODEL SPECIFIC GUIDE**

**Hidden Hinge Version** 

# Model 2138 Ford F150 Std/Ext/Crew Cab 6.5' Short Bed 2009-Current




Note: This Cover will work with or without a tailgate step.



### **Program Your Key**




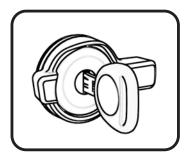

STEP ONE
REMOVE LABEL,
FULLY INSERT KEY



ROTATE CLOCKWISE 180 DEGREES

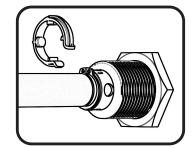

STEP THREE

REMOVE PLASTIC CLIP
BY PUSHING ON TABS.
DISCARD CLIP.


Form # AS2138II Created April 2014 For Warranty Issues, Contact UnderCover Directly (866) 900-8800 www.undercoverinfo.com



#### MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2138 Ford F-150 6.5' Short Bed 2009-Current

#### RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 51 3/8" from the back side of the bulkhead to the front edge of the bracket.

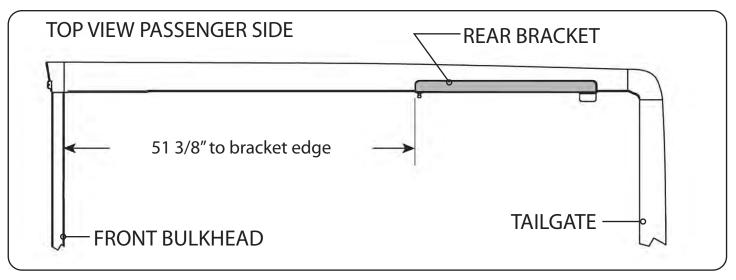


#### **RE: Step 3 on the Quick Start Guide**

Measurement for the front mounting bracket is 17 1/8" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.



Warning! Use only the rear two holes for clamps on the front bracket.

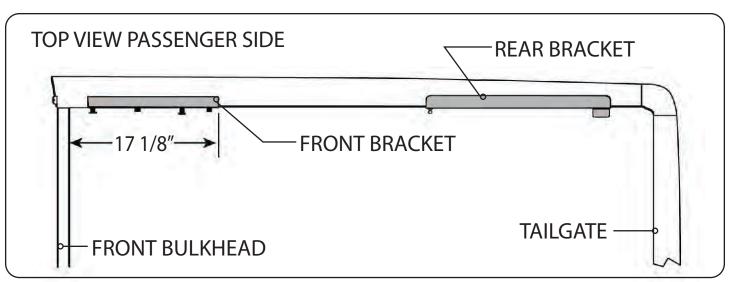

UnderCover, Inc. P.O. Box 620 Rogersville, MO 65742 (417) 753-8000 (866) 900-8800

www.undercoverinfo.com sales@undercoverinfo.com

© 2010 UnderCover, Inc. All rights reserved.