Ford Edge



Centers: 24"

### **BOLT TORQUE SPECIFICATIONS**

STA	NDARD	BOLTS:	METRI	C BOLTS:
Size	Grade	Torque	Size	Torque
5/16"	5	20 ft/lbs.	8mm	22 ft/lbs.
3/8"	5	35 ft/lbs.	10mm	42 ft/lbs.
7/16"	5	56 ft/lbs.	12mm	70 ft/lbs.

85 ft/lbs.

12mm

14mm

70 ft/lbs.

95 ft/lbs.


### 9518210 PARTS LIST

Pin Height: 18-3/4"



1/2"

REF. PART					
NO. NO.		QTY	TY. DESCRIPTION		
1.	00057	2	1/4" Lock Washer		
2.	00059	2	3/8" Flat Washer		
3.	00060	6	3/8" Lock Washer		
4.	00061	6	3/8"-NC Hex Nut		
5.	00062	2	1/4"-NC Hex Nut		
6.	00078	4	7/16" Lock Washer		
7.	00205	4	7/16" Flat Washer		
8.	00523	2	3/8"-NC x 1-1/4" Hex Bolt Gr.5		
9.	00684	2	1/4"-NC x 1-1/2" Hex Bolt Gr.5		
10.	00914	4	3/8"-NC x 1-1/2" Hex Bolt Gr.5		
11.	01898	4	7/16"-NC x 1-1/4" Hex Bolt Gr.5		
12.	07594	2	3/8"-NC x 1" Hex Self-Tapping Bolt Gr.5		
13.	10584-95	2	Spacer Bushing		
14.	12979	1	Pull Ear Cover "A"		
15.	12980	1	Pull Ear Cover "B"		
16.	13132-35	1	Baseplate Crossmember		
17.	14572-30	1	Rear Brace Drivers Side		
18.	14573-30	1	Rear Brace Passenger Side		
19.	14574-30	2	Short Nutstrip		
20.	14575-30	2	Long Nutstrip		
21.	5937	1	Plug Mount Kit		
22.		2	Loctite (not shown)		
23.	14571-30	2	1/2" Spacer (not shown)		

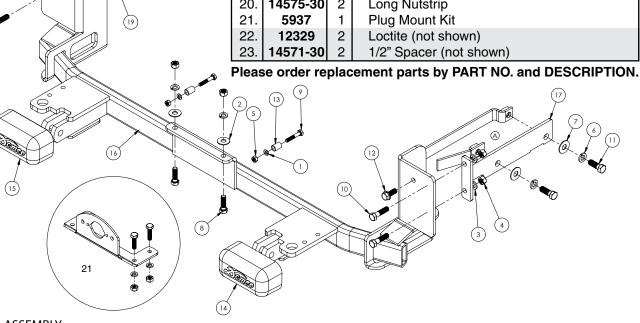

**ASSEMBLY OPERATION** REPLACEMENT PARTS

**READ** complete manual CAREFULLY BEFORE attempting operation.

### **A** CAUTION

Safety is of utmost importance at all times. There are several items that must be checked each time <u>before</u> using and <u>while</u> using a tow bar. Before allowing anyone to hook up or operate a tow bar, be sure they have

Before allowing anyone to hook up or operate a tow bar, be sure they have read and understand the proper operating procedure.

DO NOT use worn or damaged cables and/or pins.

Be sure the **SAFETY CABLES** are hooked, chassis to chassis, to both the towing and towed vehicles using the crisscross method.

Check clearance between vehicles in a turning situation.

Check base plate mounting bolts for tightness and frame for metal fatigue.

Do not load the towed vehicle with anything as you may exceed the towing capacity of the tow bar.

Keep fingers away from pivot points to prevent personal injury.

Be sure the steering components of the towed vehicle are properly aligned.

**NOTE:** This unit can be backed up in moderate increments. Any severe backwards cornering could result in damage to the Tow Bar and/or towed vehicle chassis.

**For automatic transmissions:** Consult your vehicle owners manual for towing suitability with the drive shaft connected. Otherwise, the towed vehicle will have to be equipped with a transmission pump or drive shaft disconnect.

Check to make sure that all lights are in proper working order.

The information on towability of vehicles is reprinted with permission of MotorHome® Magazine, and is believed to be reliable. However, Demco does not warrant the information to be correct. Always consult your towed vehicle owner's manual and follow towing instructions. Each year, MotorHome® Magazine, compiles a list of vehicles that can be towed four-down behind a motorhome with no modifications required. This guide contains only those vehicles that have been approved by their manufacturers for towing.

Caution: MotorHome® Magazine left out any vehicles that have towing speed limits slower than 55 m.p.h., or distance limits of less than 200 miles. At a minimum, these vehicles require significant modification, such as the use of an aftermarket product, to make them towable. The availability of a Demco Tow Bar Base Plate does not imply that these vehicles can be modified or that there is an aftermarket product available. Refer to your vehicle owner's manual or consult your dealer to determine whether your vehicle can be modified to make it towable. Failure to observe this precaution could result in property damage or personal injury.

#### IMPORTANT INSTALLATION ITEMS

DEMCO products and accessories are intended to be installed by professional installers with experience, proper equipment and the ability to do modification work. Installers with these qualifications can be found in RV and Automotive Service Centers.

If the car to be towed has been in an accident, the chassis may be damaged in an area where the Base Plate attaches. It may no longer be suitable for towing. Extreme caution and careful examination are required in such a situation. It is also likely, even from a minor accident, that the hole alignment will be more difficult due to hole alignment problems.

Many DEMCO Base Plates are designed to use existing holes and hardware to mount the Base Plate to the towed vehicle. Even though the bolt is there, however, do not assume it is adequate for mounting the Base Plate. Manufacturers make many changes in hardware both within and between model years. Be sure the bolt is long enough to protrude past the nut a distance no less than 1/2 the diameter of the bolt, after the Base Plate is mounted. The threads should be in good condition. We require that "LOCTITE® Blue" be used on all bolts. If a new bolt is required, be sure it is SAE Grade 5 or Metric 8.8.

NOTE: The dimensional variations between otherwise identical vehicles can be considerable. Some minor modifications may have to be made to ensure a proper fit.



1. Open hood and remove four plastic fasteners and two bolts from top of facia.




Remove three screws from wheel well to fender on each side.



Remove three plastic push fasteners and four screws from bottom of facia.




Unhook fog lights, if equipped, side marker lights and remove facia by pulling straight out by fender, then pull off.

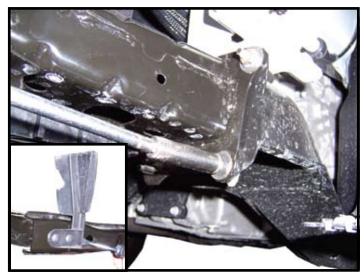

5. IF EQUIPPED Remove two nuts that hold cooler line to lower tin support. Remove lower tin support, three nuts and washers on each side. Remove both filler panels from tin support. (These will not be reused)



6. Remove five bolts on each side of bumper and remove bumper. For late model Edge's with ECO remove two nuts from outer edge of shutter system, unplug wires, and release mount on bottom center of shutters. Then remove three bolts and one stud from bumper and remove bumper.

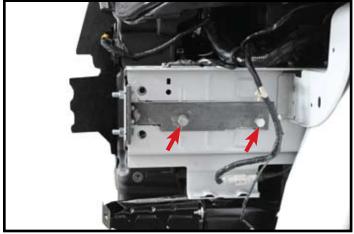

7. Install driver side bracket with 7/16" x 1-1/2" bolt, lock washer, and flat washer with nutstrips using hole in from of frame exposed when bumper was removed. NOTE: Use LOCTITE. Blue on all bolts during installation



8. Remove two screws from washer tank and pull out of way so bracket and bolts can be installed on passenger side. NOTE: Four push fasteners from inner wheel well may be removed to make installation easier or remove tank completely.


- Install bracket and bolts the same as in step 7 on drivers side. Reinstall washer tank using 1/2" spacers between frame and tank tabs to keep washer tank from rubbing bolts of bracket.
- 10. If not ECO skip to step 15.




 Trim shutter system on lines as shown in picture looking from top. NOTE: Trim flush with motor as shown in picture on next page.




**12.** Trim as shown in picture on both sides for clearance of baseplate crossmember.

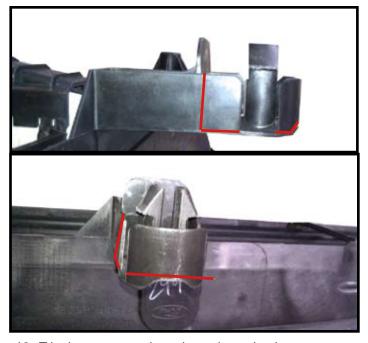


13. Trim bottom mounting tab as shown in pictures.

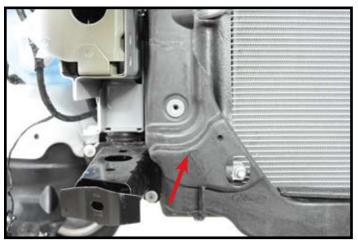

**14.** Remove the plastic push fastener from the bottom of passenger side air deflector and drill hole 2" to the left of factory hole and reinstall air deflector fastener. Be careful to not drill into hoses behind plastic.

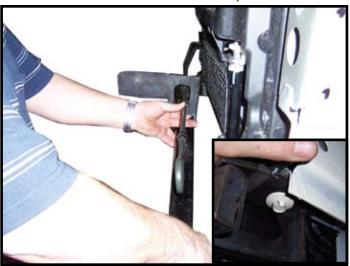

15. With an assistant, slide cooler line carefully thru side hole of baseplate on passenger side. Lift baseplate up into place and clamp to bumper mount. Install previously removed bottom bumper bolts and tighten. If ECO have shutter system behind baseplate when installing and put bottom mount in. NOTE: Use LOCTITE. Blue on all bolts during installation

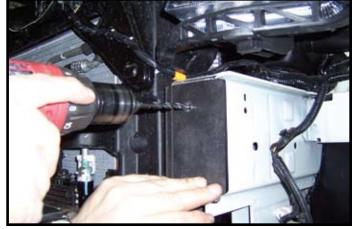

**16.** Using base plate as template, drill a 5/16" hole into end of frame, install 3/8" self-tapping bolt on each side and tighten. Remove Clamps.



**17.** Before installing bumper, first bend down lower mounting tabs flat or remove completely. Grind bumper as shown, approximately 1/4".



18. Reinstall bumper with the remaining bumper bolts. Note: Top bumper mounting tab must lay flat on frame. If not, bottom tab was not bent flat enough or cut off far enough. If ECO use stud factory stud to fasten shutters and bumper. Plug in shutters.



19. Mark out front of bumper for drilling 1" from the top and 2-5/8" centers and 1/2" from outside edge. Drill two 3/8" holes thru bumper, baseplate, and frame on both sides. Fasten with 3/8" x 1-1/2" bolts, 3/8" lock washers, and 3/8" hex nuts. **Note:** Some models are equipped with a hardened steel bumper and can not be drilled easily so grind a 3/8" slot where the holes are and mark and drill holes on the baseplate accordingly. Holes should match up to previously installed brackets.



remove cooler line studs in a vise, then drill out holes to 1/4". Fasten tin support with one washer and nut previously removed on top to one side and leave it loose. Install cooler lines by using plated spacer bushings, 1/4" x 1-1/2" bolts, lockwashers, and nuts. Finish installing lower tin support and tighten. Adjust lines for clearance thru oval hole in baseplate, lines cannot rub on baseplate. Rubber hose may be needed for protection (not included).



21. Drill 3/8" holes into bottom of bumper using baseplate center support bracket as template. Install 3/8" x 1-1/2" bolts, 3/8" lock washers and 3/8" nuts on inside of bumper and tighten.



07-10 Models Remove



11-13 Models Cut

- **22.** Remove plastic filler panel from backside on facia, this can be saved for vehicle trade-in or cut and trim plastic filler panel. Reinstall facia in reversed order of removal.
- 23. Plug mount (item #21) may be installed if desired in convenience holes on either chain anchor or as desired. NOTE: Excess material may be trimmed from bracket.

# **NOTES**

# **NOTES**

# **NOTES**



### Warranty Registration

Ag	$\circ$
RV	$\circ$
Rental	$\circ$
Brakes	$\circ$
Marine	0

4010 320th Street • Box 189 • Boyden, Iowa 51234 Toll Free 800-54DEMCO (800-543-3626) • FAX 800-845-6420 www.demco-products.com

	Very Satisfied	Satisfied	Dissatisfied	Dissatisfied
How satisfied are you with our product?	О	O	O	O
How satisfied are you with the dealership/distributor sales staff?  Dealer/Distributor Name City	О	O Stat	е	О
How satisfied are you with the company sales staff?	0	O	0	O
How satisfied are you with the delivery?	О	O	О	O
Did you have any contact with a Demco Representative? If <b>YES</b> , how satisfied were you?	YES O	NO O	O	О
I would recommend this product to my family and friends.	YES	NO		
Would you purchase again from DEMCO?	YES	NO		
Since taking delivery, have you been contacted by the dealer?	YES	NO		
Did you have any problems with this DEMCO product?  If <b>YES</b> , are you satisfied with the company's resolution of your problem?	YES O	00 O	O	О
Please list the specific source of information prompting this purchase.				
After purchasing this product, do you see any needed product improvemen	nt? If y	es, what imp	provement?	
What other products would you like to see DEMCO offer?				
Comments				
Owner's Name: Mailing Address:				
City: State:	Zip Code: _			
Model#:				
Serial #:				
Purchase Date:				
Owner's Signature:				

Please return to DEMCO By FAX or tri-folding this form to the backside, it is pre-addressed.

Postage

Demco 4010 320th Street, Box 189 Boyden, Iowa 51234

## DEMCO PRODUCTS ORIGINAL PURCHASERS LIMITED WARRANTY

#### 1. Extent and Duration of this Warranty:

Your Demco product has a 1 year limited warranty to be free from defects in materials and workmanship under normal use and service from date of purchase by the original (first) retail owner, or until it is resold or transferred by the original owner. Any part of the Demco product found in the judgement of the manufacturer to be defective in materials or workmanship will be repaired or replaced at the manufacturer's option without charge for parts or labor to the original owner.

#### 2. Manufacturer and Warrantor:

Demco 4010 320th Street P.O. Box 189 Boyden, IA 51234 (712) 725-2311

#### 3. Repair or Replacement Procedure:

If your Demco product develops a defect during the warranty period, promptly notify Demco customer service department. Until such notice is received, Warrantor will not be responsible for any repair or replacement.

Upon receipt of notice from you, Warrantor will have a choice of options in replacing any part it determines to be defective:

- a) Warrantor may require you at your own expense to deliver or ship the part to its factory or authorized dealer. Any defective part will be repaired or replaced and returned to you free of charge. Any part returned to Warrantor and found not to be defective will be returned to you freight collect with an explanation.
- b) Warrantor may elect to ship a new part to its dealer to be exchanged free of charge for the defective part returned by you to the dealer.
- c) Warrantor may elect to ship or deliver a replacement part to your address.

#### 4. Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing the date and location of purchase, accompanies any claim for warranty. This warranty is limited to the original owner and is NON TRANSFERABLE to a second party.

Warrantor has no liability whatsoever and this warranty is null and void if any Demco product has been misassembled or subjected to neglect, negligence, misuse, accident or operated in any way contrary to the operating and maintenance instructions as specified in the Demco Owner's Manual for that model.

This warranty does not cover any product that has been altered or modified so as to affect it's operation, performance or durability, or that has been modified to change the intended use of the product.

In addition, the warranty does not extend to repairs made necessary by normal use of parts, accessories or other equipment which in the judgment of Warrantor, are either incompatible with the Demco product, or affect its operation, performance or durability.

This warranty does not cover:

- 1) normal wear and tear
- 2) road film or gravel damage to paint
- 3) paint
- 4) rust damage

Warrantor has a policy of continuous product improvement. We reserve the right to change or improve the design of any Demco product, including but not limited to state of the art changes, without assuming any obligation to modify any product previously manufactured.

Warrantor assumes no responsibility to the owner for loss of use of the product, loss of time, inconvenience or other damage consequential or otherwise, including, but not limited to expense for gasoline, expense of transporting the product to the dealer and expense of returning the product, mechanic's travel time, telephone or telegram charges, road service/towing charges, rental of another product during the time warranty repairs are being performed, travel, lodging, loss or damage to personal property or loss of revenue or earnings.

#### 5. Limitations of Implied Warranties:

All implied warranties, if any, expire and terminate upon expiration of this warranty. Some states do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

#### 6. Limitation of Consequential Damages:

Warrantor's responsibility under this warranty extends solely to repair or replacement of your Demco product and its component parts.

Warrantor does not assume responsibility for, nor shall it be liable for, any special, incidental or consequential damages. Some states do not allow the exclusion or limitation on incidental or consequential damages, so the above exclusion or limitation may not apply to you.

#### 7. Purchaser's Rights:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

#### 8. Exclusive Warranty:

This is the only express warranty made by Demco on your Demco product and no agent, employee, or other person is allowed to change or add to this warranty.



4010 320th St., P.O. BOX 189, BOYDEN, IA. 51234 PH: (712) 725-2311 FAX: (712) 725-2380 or 1-800-845-6420 TOLL FREE: 1-800-54DEMCO (1-800-543-3626) www.demco-products.com