



## EzStorHitch Mounting Instructions

---


Carriage Bolt (1)



Hex Bolt (4)



Stainless Flat Washer (4)

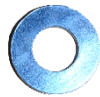

Flange Nut (4)



Bottom Brace (2)



EzStorHitch (1)



- 
1. Required tools: Tape Measure, (2) 9/16" and (2) 1/2" wrenches
  2. Determine the area to mount the base. Normally there is room between the propane tanks and trailer. **Ensure that the base, bolts, bar tray and hitch bars will not contact/rub any wiring, cables or gas lines.** Note: you may need to move the battery box further to one side to make adequate room.
  3. Adjust the bar tray by loosening the appropriate nuts. If the tray needs to be higher, switch short carriage bolt with the longer carriage bolt included in the parts bag. Important! The tray adjustment bolt must be securely tightened during final adjustment to keep the bar tray from moving.
  4. Mount the base to the frame using the four hex bolts. Add stainless flat washers to the top of the base and the flange nuts aligning the bottom brace with the matching holes on the base.
  5. Test fit your hitch bars and head to ensure that they are not contacting/rubbing against the trailer, wiring, cabling, or hoses.
  6. Once final adjustments have been made, tighten all of the bolts and nuts including the bar tray adjustment nuts. **Recheck bolts every 3 months.**

### Round Bars



### Blue Ox® (lock not included)



### Equalizer®



### Trunnion Bars



For additional security:

- Always use hitch pin lock
- Lock bar chains together
- Lock bar chains to the bar tray
- Use Cable Lock to lock EzStorHitch to trailer frame