



# JU SERIES CANOPY REPLACEMENT

These instructions are a supplement for installing JU series replacement canopies.

## RV Kits


Carefree's JU series canopy is a one-piece construction replacement canopy available for patio awnings and similar style awnings manufactured by Carefree and other awning manufacturers.

The press in polyrod provides flexibility for the canopy to fit different diameter roller tubes with slots.

### CANOPY INSTALLATION


1. Install the canopy according to the instructions found in the product service manuals available from the awning manufacturer.

**CAUTION** Observe all cautions when replacing the canopy. Failure to follow the instructions can result in personal injury and property damage.

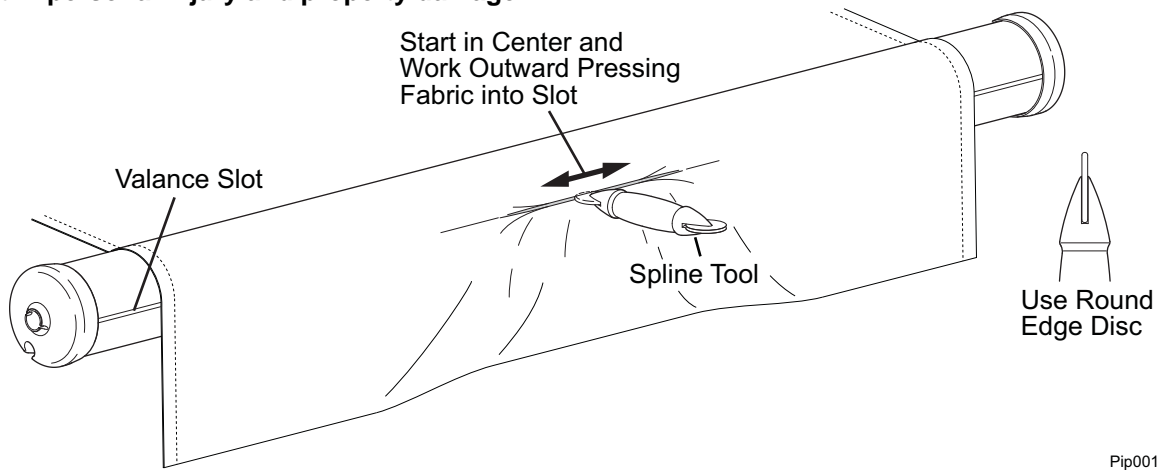


Pip001

2. Hold the fabric flat against the roller tube above the valance slot.
3. Starting in the center of the canopy, press the fabric into the valance slot with the supplied spline tool. Use the rounded disc of the spline tool.

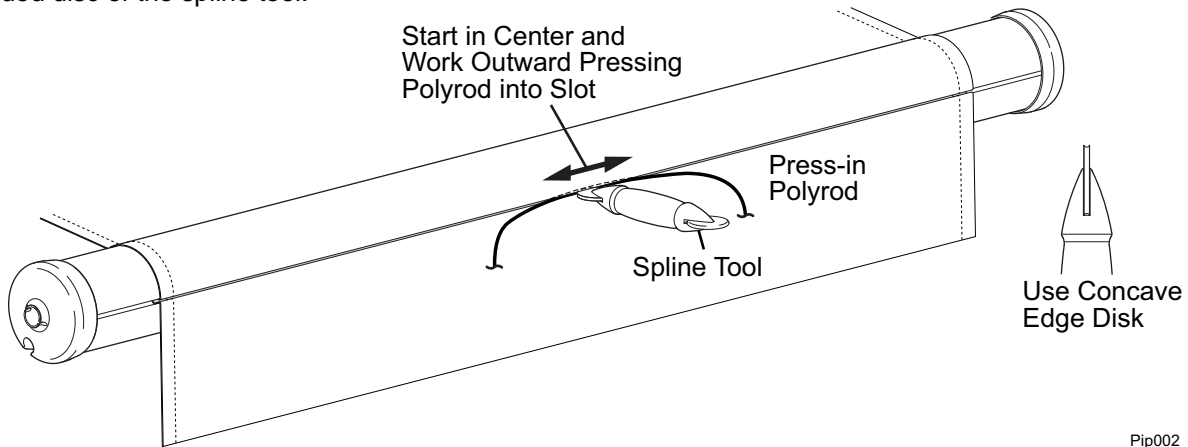

Pip002

4. Starting in the center of the canopy, press the polyrod into the valance slot with the supplied spline tool. Use the concave disc of the spline tool.
5. Trim any excess polyrod off approximately 1" from the fabric.
6. If required, adjust the canopy position on the roller tube and smooth any wrinkling.
7. Stake the canopy using four (4) each of the flat head screws and plastic washers through the canopy and polyrod and into the slot of the roller tube.

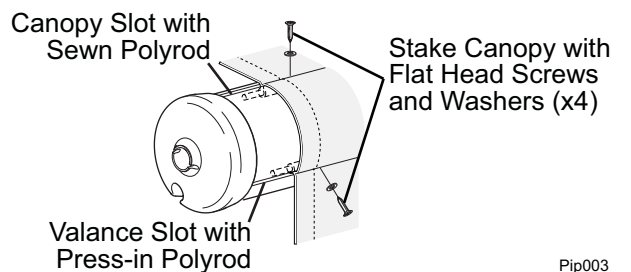

Pip003