


Spa22 Template

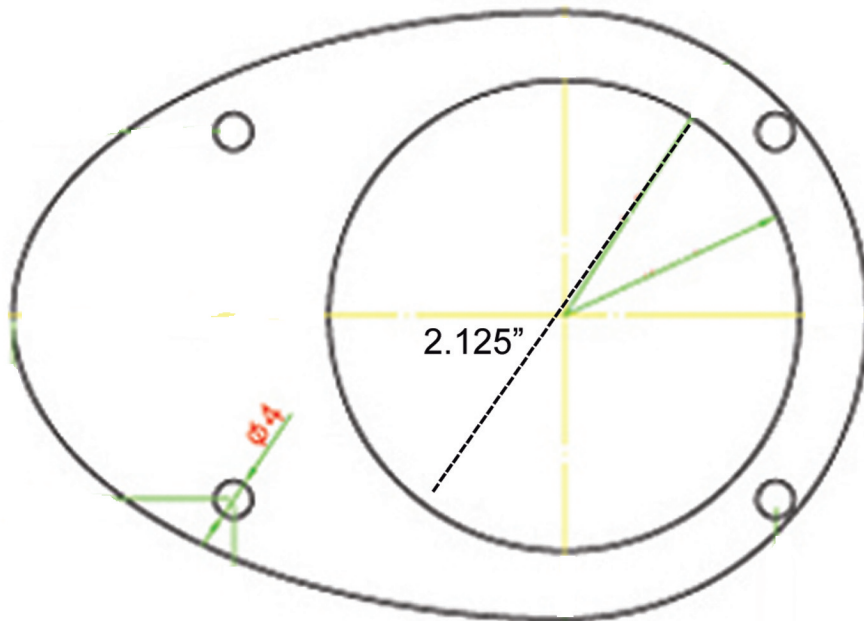

Installation

- 1) Find a location which allows the speaker to lay flat
- 2) Use template dimensions to mark all mounting holes
- 3) Drill starter hole in center of 2.125" mounting hole
- 4) Cut mounting hole. Use 1/8" drill for screw holes.
- 5) Connect pos. speaker wire to large tab (+)
- 6) Connect neg. speaker wire to small tab (-)
- 7) Apply bead of non-caustic silicone to rear of speaker body (optional)
- 8) Secure speaker with provided hardware

Note: Do Not Allow Silicone to Squeeze onto rear of speaker cone



WARRANTY POLICY

PQN Enterprises, Inc. audio products are warranted to be free of manufactured defects in materials and workmanship for a period of 1 (one) year from date of original purchase.