

INTERNATION AL OVER 40 YEARS OF INNOVATION, QUALITY, SAFETY. PPLICATION GUIDES TORKLIFT.COM • 2018



Ford

Step 1: Select Your Front Tie Downs Select Your Auxiliary

Step 2: Optional **Power Product**

Step 3: Select Your Rear Tie Downs

Step 4: Optional **Select Your SuperHitch**

Step 5: Select Your Suspension Stabilizer

	1 01 4				Front Tie Downs		HiddenPower Under Vehicle Battery Mount		Rear Tie Downs		Supe	erHitch	Stable	Load
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
1973-1980	F250, F350	All	8ft				A7703 (1) A7727							
2000-2011	Ranger	All	6ft	No	F2013		ATTZT	Factory	F3004 (15)				Lower Overload	A7311 (2,4)
1981-1997	F350	All	8ft	No	F2000 (3)		A7703 (1)	Aftermarket Factory	R3500 (12) (25)	(25)	Original 20k	F1000 (1B)	Lower Overload	A7311 (2,4)
								SuperHitch	(25) R3503 (23)	R3503A (23)		1 1000 (12)	Upper Overload	A7200 (3)
1981-1997	F350	All	6.5ft	Yes No	F4000 (3,4,5) F2000 (3)		A7727	Aftermarket Factory	R3501 (12) (25)	(25)	Original 20k	F1000 (1B)	Lower Overload	A7311 (2,4)
				Yes	F4000 (3,4,5)			SuperHitch	R3503 (23)	R3503A (23)			Upper Overload	A7200 (3)
1981-1997	F250	All	8ft	No	F2000 (3)		A7703 (1)	Aftermarket Factory	R3501 (12) (25)	(25)	Original 20k	F1000 (1B)	Lower Overload	A7311 (2,4)
	1007 is aguera hadu			Yes	F4000 (3,4,5)		A7727	SuperHitch	R3503 (23)	R3503A (23)			Upper Overload	A7200 (3)
1981-1997	1997 is square body F250	All	6.5ft	No	F4000 (3,4,5,6)			Aftermarket Factory	R3501 (12) (25)	(25)	Original 20k	F1000 (1B)	Lower Overload	A7311 (2,4)
	1997 is square body			Yes	F4000 (3,4,5,6)			SuperHitch Aftermarket	R3503 (23) R3501 (12)	R3503A (23)			Upper Overload	A7200 (3)
1981-1997	F150	All	All	No	F4000 (3,4,5,6)			Factory	(25)	(25)			Lower Overload	A7311 (2,4)
1997-2003	1997 is square body F150	All	8ft	Yes No	F4000 (3,4,5,6) F2001			Aftermarket Factory	R3501 (12) F3001 (15)	F3001A (15)			Upper Overload Lower Overload	A7200 (3) A7311 (2,4)
1997-1999	Round body (F250)			Yes	F4001 (4,5)			Aftermarket	R3500 (12)					
1997-2003	F150, F250 LD Round body	All	6.5ft	No Yes	F2002 (3) F4002 (3,4,5)			Factory Aftermarket	F3001 (15) R3500 (12)	F3001A (15)			Lower Overload Upper Overload	A7311 (2,4) A7200 (3)
1998-2003	F150	Super Crew	5.5ft	No	F2009			Factory	F3001 (15)	F3001A (15)			Lower Overload	A7311 (2,4)
1999-2004	F250, F350	All	8ft	No	F2011	F2011A	A7703 (1)	Aftermarket Factory	R3500 (12) F3001 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Upper Overload Lower Overload	A7200 (3) A7311 (2,4)
1000 2004	1 200, 1 000	7 (11				1 2011/1						1 ' '		
				Yes	F4006 (4,5)		A7727	SuperHitch SuperHitch Magnum	R3503 (23) R3504	R3503A (23) R3504A	Magnum 30k	F1002-30 (1C,5)	Upper Overload	A7200 (3)
	Super Duty W/ factory bed							Aftermarket	R3500 (12)					
1999-2004	F250, F350	All	6.75ft	No Yes	F2007 F4007 (4,5)	F2007A		Factory SuperHitch	F3001 (15) R3503 (23)	F3001A (15) R3503A (23)	Original 20k Magnum 30k	F1002 (1B, 5) F1002-30 (1C,5)	Lower Overload Upper Overload	A7311 (2,4) A7200 (3)
					1 1001 (1,0)			SuperHitch Magnum	R3504	R3504A	magnam cox	1 1002 00 (10,0)	оррог о толюца	711 200 (0)
2004-2005	Super Duty W/ factory bed F150	All	8ft	No	F2003			Aftermarket No Hitch	R3500 (12) F3003				Lower Overload	A7311 (2,4)
								Factory	F3003					
2004-2005	F150	All	6.5ft	No	F2004			Aftermarket No Hitch	R3500 (12) F3003				Lower Overload	A7311 (2,4)
	No Stop Sido had							Factory Aftermarket	F3003					
2004-2005	No Step Side bed F150	Super Crew	5.5ft	No	F2005			No Hitch	R3500 (12) F3003				Lower Overload	A7311 (2,4)
								Factory Aftermarket	F3003 R3500 (12)					
2005-2007	F250, F350	All	8ft	No	F2011	F2011A	A7703 (1)	Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B,5)	Lower Overload	A7311 (2,4)
				Yes	F4006 (4,5)		A7727	SuperHitch SuperHitch Magnum	R3503 (23) R3504	R3503A (23) R3504A	Magnum 30k	F1002-30 (1C,5)	Upper Overload	A7200 (3)
	Super Duty W/ factory bed							Aftermarket	R3500 (12)					
2005-2007	F250, F350	All	6.75ft	No	F2007	F2007A		Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	Lower Overload	A7311 (2,4)
				Yes	F4007 (4,5)			SuperHitch SuperHitch Magnum	R3503 (23) R3504	R3503A (23) R3504A	Magnum 30k	F1002-30 (1C,5)	Upper Overload	A7200 (3)
	Super Duty W/ factory bed							Aftermarket	R3500 (12)	N3304A				
2006-2007	F150	Super Crew	5.5ft	No	F2010			No Hitch Factory	F3005	F3005A F3005A			Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2006-2008	F150	All	6.5ft	No	F2014	F2014A		No Hitch Factory	F3005	F3005A F3005A			Lower Overload	A7311 (2,4)
	No Step Side bed							Aftermarket	R3500 (12)					
2006-2008	F150	All	8ft	No	F2003			No Hitch Factory	F3005	F3005A F3005A			Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2008-2010	F250, F350, F450	All	8ft	No	F2011	F2011A	A7728(2)	Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	08-09 Lower Overload	A7311 (2,4)
								SuperHitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	2010 Lower Overload	A7310 (1,4)
	Super Duty W/ factory bed							SuperHitch Magnum Aftermarket	R3504 R3500 (12)	R3504A			Upper Overload	A7200 (3)
2008-2010	F250, F350	All	6.75ft	No	F2012 (2)	F2012A (2)		Factory	F3004 (15)	F3001A (15)	Original 20k	F1002 (1B, 5)	08-09 Lower Overload	A7311 (2,4)
								SuperHitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30 (1C,5)	2010 Lower Overload	A7310 (1,4)
								SuperHitch Magnum	R3504	R3504A			Upper Overload	A7200 (3)
2008	Super Duty W/ factory bed F150	Super Crew	5 5ft	No	F2017			Aftermarket No Hitch	R3500 (12) F3005	F3005A			Lower Overload	A7311 (2,4)
2000	1 130	Super Crew	5.510	INU	12017			Factory	F3005	F3005A			Lower Overload	A1311 (2,4)
2000-2015	F350, F450, F550	All	N/A	No	F2008 (22)			Aftermarket SuperHitch	R3500 (12) R3503 (23)	R3503A (23)	Original 20k	F1003 (1B, 5)	Upper Overland	A7200 (3)
2000-2015	1 330, F430, F330	All	IN/A	INU	(2005-2015 Only)			SuperHitch Magnum	R3504	R3503A (23)	Magnum 30k	F1003 (1B, 5)	Upper Overload	A1200 (3)
	Cab & Chassis (34" wide Frame))						Aftermarket	R3500 (12)					
		ш.	un dun d	a of vobiola fi	to not listed					Hundrode of vo	hiala fita nat	liotod		

Hundreds of vehicle fits not listed.



Ford

Step 1: Select Your Front Tie Downs

Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under

Step 3: Select Your Rear Tie Downs

Rear Tie Downs

Step 4: Optional Select Your SuperHitch

SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

					Tront he bowns	-	Vehicle Battery Mount		Real Tie Bowiis		Оир	CITITICIT	Otabl	CLOUG
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
2009-2014	F150	All	6.5ft	No	F2014	F2014A	A7726 (2010-2014)	No Hitch	F3005	F3005A	Hero 15k	F1005H (1A,1H,2) Only works with factory	Lower Overload	A7311 (2,4)
							Èxtended and Crew Cab Only	Factory	F3005	F3005A		hitch rated to 10,500 lbs		
								Hero Aftermarket	R3508 R3500 (12)	R3508A	 			
2009-2014	F150	All	8ft	No	F2015			No Hitch	F3005	F3005A	Hero 15k	F1005H (1A,1H,2) Only works with factory	Lower Overload	A7311 (2,4)
								Factory	F3005	F3005A		hitch rated to 10,500 lbs		
								Hero	R3508	R3508A				
2009-2014	F150	Super Crew	5.5ft	No	F2017			Aftermarket No Hitch	R3500 (12) F3005	F3005A	Hero 15k	F1005H (1A,1H,2)	Lower Overload	A7311 (2,4)
								Factory	F3005	F3005A		Önly works with factory hitch rated to 10,500 lbs		
								Hero	R3508	R3508A				
				I		=		Aftermarket	R3500 (12)			=		
2011-2015	F250, F350	All	6.75ft	No	F2012	F2012A		Factory	F3006 (15)	F3001A (15)	Original 20k	F1002(1B,5)	Lower Overload	A7310 (1,4)
								SuperHitch	R3503 (23)	R3503A (23)	Magnum 30k	F1002-30(1C,5)	Upper Overload	A7200 (3)
	2 2 1 11/6 1 1 1							SuperHitch Magnum	R3504	R3504A				
	Super Duty W/ factory bed							Aftermarket	R3500 (12)					
2011-2016	F250, F350, F450	All	8ft	No	F2016 (27)	F2016A (27)	A7728 (2)	Factory	F3006 (15)	F3001A (15)	Original 20k	F1002 (1B,5)	Lower Overload	A7310 (1,4)
								SuperHitch SuperHitch Magnum	R3503 (23) R3504	R3503A (23) R3504A	Magnum 30k	F1002-30 (1C,5)	Upper Overload	A7200 (3)
2015-2017	Super Duty W/ factory bed F150		6.5ft	No	F2018	F2018A		Aftermarket	R3500 (12) F3007	F3007A			Lower Overload	A7310 (1,4)
2015-2017			0.511	INU	F2010	FZUTOA		No Hitch Factory	F3007	F3007A			Lower Overload	A7310 (1,4)
2015-2017	Regular Cab, Super Cab, Super Cr F150	Super Crew	5.5ft	No/Electric	F2019 (32)	F2019A (32)		No Hitch	F3007	F3007A			Lower Overload	A7310 (1,4)
		Super Siew	3.510	Fixed	F2020 (32)	F2020A (32)		NO THIGH	1 3007				Lower Overload	
2015-2016	F150	Regular, Super Cab	8ft	No	F2023			No Hitch Factory	F3007	F3007A F3007A			Lower Overload	A7310 (1,4)
1999-2005 2001-2008	Excursion E150	Van									Original 20k	F1006 (1B)	Lower Overload Lower Overload	A7310 (1,4) A7311 (2,4)
2005-2011	E250, E350	Van		 			A7729						Lower Overload	A7311 (2,4)
2012-2013	E250, E350	Van					A7729						Lower Overload	A7310 (1,4,5)
All	E450 Frame	RV					A7740 (2)							
2016	F250, F350	Super Crew	6.75ft	No	F2012	F2012A		SuperHitch	F3006 (15) R3503 (23) R3504	F3001A (15) R3503A (23) R3504A	Original 20K Magnum 30K	F1002 (1B,5) F1002-30 (1C,5)	Lower Overload Upper Overload	A7310 (1,4) A7200 (3)
	Super Duty W/ factory bed				_			SuperHitch Mgnum Aftermarket	R3504	K3304A	1			+
2016	F250, F350	Super Crew	8ft	No	F2016 (27)	F2016A (27)	A7728 (2)	Factory SuperHitch	F3006 (15) R3503 (23)	F3001A (15) R3503A (23)	Original 20K Magnum 30K	F1002 (1B, 5) F1002-30 (1C, 5)	Lower Overload Upper Overload	A7310 (1,4) A7200 (3)
								SuperHitch Mgnum	R3504	R3504A				
2012	Super Duty W/ factory bed		100		F0040 (07)	E00404 (07)	47700 (0)	Aftermarket	R3500 (12)	E00044 (45)	0 : : 1001/	E4000 (4D, E)		A 70.40 (4.4)
2016	F250	Super Cab	Яπ	No	F2016 (27)	F2016A (27)	A7728 (2)	Factory SuperHitch	F3006 (15) R3503 (23)	F3001A (15) R3503A (23)	Original 20K Magnum 30K	F1002 (1B, 5) F1002-30 (1C, 5)	Lower Overload Upper Overload	A7310 (1,4) A7200 (3)
	Cupar Duty W// factors had							SuperHitch Mgnum	R3504 R3500 (12)	R3504A	Magnum 50K	1 1002-30 (10, 3)	Opper Overload	A7200 (3)
2016	Super Duty W/ factory bed F550	Regular	N/A					Aftermarket SuperHitch	R3503 (23)	R3503A (23)	Original 20K	F1003 (1B, 5)	Upper Overload	A7200 (3)
			1					SuperHitch Mgnum	R3504	R3504A	Magnum 30K	F1003-30 (1C,5)		
	Cab & Chassis (34" wide frame)		1					Aftermarket	R3500 (12)					
2017	F250, F350, F450	Regular, Super Cab,	8ft		F2021 (33,35)			Factory	F3008 (33)	F3008A	Magnum 2017	E4000 20 (40 5)	Lower Overload	A7311 (2,4)
		Super Crew						SuperHitch Magnum Aftermarket	R3504 (33) R3500 (12)	R3504A	Magnum 30K	F1008-30 (1C,5)	Upper Overload	A7200 (3)
2017	F250, F350	Super Crew,	6.75ft	No	F2022 (33,37)	F2022A		Factory	F3008 (33)	F3008A	1		Upper Overload	A7200 (3)
		Super Cab						SuperHitch Magnum	R3504 (33)	R3504A	Magnum 30K	F1008-30 (1C,5)	Lower Overload	A7311 (2,4)
	Super Duty W/ factory bed						<u> </u>	Aftermarket	R3500 (12)		<u> </u>			

Hundreds of vehicle fits not listed.

Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.



Dodge

Step 1: Select Your Front Tie Downs Select Your Auxiliary

Step 2: Optional elect Your Auxiliary Power Product

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

					Front Tie Downs		HiddenPower Under Vehicle Battery Mount		Rear Tie Downs		Supe	rHitch	St	tableLoad
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
All	Sprinter	Van	N/A										Lower Overload	A7311 (2,4)
1987-1996	Dakota	All	All									= (1=	Lower Overload	A7311 (2,4)
1980-1988	D250, D350	All	8ft								Original 20K	F1000 (1B,1,3)		
1989-1993	D250, D350	All	8ft	No Y	F4000 (3,4,5,6)			SuperHitch	R3503 (23) R3501 (12)	R3503A (23)	Original 20K	F1000 (1B,1,3)		
1989-1993	D150	All	8ft	Yes	F4000 (3,4,5,6) F4000 (3,4,5,6)			Aftermarket Aftermarket	R3501 (12)					
1303-1333	B 130	\[\]	Oit	Yes	F4000 (3,4,5,6)			Alternarket	110301 (12)					
1994-2001	1500	All	8ft	No	D2100 (3)		A7742		D3101 (15)				Lower Overload	A7311 (2,4)
				Yes	D4100 (3,4,5)		(No Regular Cab)	Aftermarket	R3500 (12)				l .	
1994-2002	2500, 3500	All	8ft	No	D2100 (3)		A7742	Factory	D3101 (15)		Original 20K	D1100 (1B,3)	Upper Overload	A7200 (3,8)
1334-2002	2300, 3300	/SII	Oit	Yes	D4100 (3,4,5)		(No Regular Cab)	SuperHitch	R3503 (23)	R3503A (23)	Original Zork	D 1100 (1D,5)	Lower Overload	A7311 (2,4,8)
					(3,7,7,7)		311111	· ·	<u> </u>	(),				() // //
1001.000								Aftermarket	R3500 (12)					
1994-2002	2500, 3500	All	6.5ft	No Yes	D2110 D4104			Factory SuperHitch	D3101 (15) R3503 (23)	R3503A (3)	Original 20K	D1100 (1B,1,3)	Lower Overload	A7311 (2,4,8)
				162	D4104			Aftermarket	R3500 (12)	K3503A (3)				
1997-2004	Dakota	All	6.5ft	No	D2104				D3105 (15)				Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2002-2003	1500	All	8ft	No	D2107 (3)			Factory	D3103				Lower Overload	A7311 (2,4)
2002-2003	1500	All	6.5ft	No	D2106			Aftermarket Factory	R3500 (12) D3103				Lower Overload	A7311 (2,4)
2002-2003	Two Wheel Drive Only	IAII	0.511	NO	D2100			Aftermarket	R3500 (12)				Lower Overload	A7311 (2,4)
2002-2003	1500	All	6.5ft	No	D2105			Factory	D3103				Lower Overload	A7311 (2,4)
	Four Wheel Drive Only							Aftermarket	R3500 (12)					
2003-2009	2500, 3500 HD	All	6.5ft	N-	D0400		A7740	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper Overload	A7200 (3,8)
	2x4			No	D2103		(2006-2009 Mega Cab only)	Factory	D3109 (11,14,20)	D3109A (11,14,20)		(For Bolted On Factory Receiver)	Lower Overload	A7311 (2,4,8)
								SuperHitch	R3503 (14,20,23)	R3503A	Original 20K	D1102 (1B 1 3)		
	Four Wheel Drive Only			No	D2102			SuperHitch Magnum	R3503 (14,20,23)	R3503A	Magnum 30K	D1102-30 (1C,1,3)		
				Yes	D4102 (2,3,4,5)			Aftermarket	R3500 (14,12)			(For Welded On Factory Receiver)		
2003-2009	2500, 3500 HD	All	8ft	No		D2101A	A7740	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper Overload	A7200 (3,8)
				Yes	D4101 (4,5)		(Quad Cab ONLY)	Factory	D3109 (11,14,20)	D3109A (11,14,20)		(For Bolted On Factory Receiver)	Lower Overload	A7311 (2,4,8)
								SuperHitch	R3503 (14,20,23)	R3503A	Original 20K	D1102 (1B,1,3)		
								SuperHitch Magnum	R3503 (14,20,23)		Magnum 30K	D1102-30 (1C,1,3)		
								Aftermarket	R3500 (14,12)			(For Welded On Factory Receiver)		
2004-2008	1500	Reg, Quad	6.5ft	No	D2106			No Hitch	D3109 (11,20)	D3109A (11,20)			Lower Overload	A7311 (2,4)
									D3109 (11,20)	D3109A (11,20)				
2004 2000	Two Wheel Drive Only	Dea Oued	0.56	Ne	D2105				R3500 (12)	D2400A (44 20)			Lawar Ovarland	A7244 (2.4)
2004-2008	1500	Reg, Quad	0.511	No	D2105			No Hitch Factory	D3109 (11,20) D3109 (11,20)	D3109A (11,20) D3109A (11,20)			Lower Overload	A7311 (2,4)
	Four Wheel Drive Only							Aftermarket	R3500 (12)	2010071(11,20)				
2005	Dakota	Quad	5.5ft	No	D2114				R3500 (12)				Lower Overload	A7311 (2,4)
2006-2008	1500	Mega	6.5ft	No	D2102			No Hitch	D3109 (11,20)	D3109A (11,20)			Lower Overload	A7311 (2,4)
	Four Wheel Drive Only			1				Factory Aftermarket	D3109 (11,20) R3500 (12)	D3109A (11,20)			-	
	Two Wheel Drive Only			No	D2111									
2009-2012	1500	Quad	6.5ft	No	D2113			No Hitch	D3107 (26)					
	Faura Mills and Dairy Co. 1. (2)							Factory	D3107 (15)					
2010-2012	Four Wheel Drive Only (No Laram 2500, 3500	All	8ft	No	D2115	D2115A	A7740	Aftermarket No Hitch	R3500 (12) D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper Overload	A7200 (3,8)
2010-2012	2500, 5500		Oit	Yes	D4101 (4,5)	D2113A	(Crew Cab ONLY)	Factory	D3109 (11,14,20)	D3109A (11,14,20)	Original 2010	(For Bolted On Factory Receiver)	Lower Overload	A7311 (2,4,8)
				-				SuperHitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
									D0505 (44 00 00)	D05004 (44.00.00)		(For Welded On Factory Receiver)		
								SuperHitch Magnum Aftermarket	R3505 (14,20,23) R3500 (12,14)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,2,3) (For Welded On Factory Receiver)		
2010-2012	2500, 3500	All	6.5ft	No	D2119		A7740	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2)	Upper Overload	A7200 (3,8)
_0.0 2512	, 5555	,	0.0.0	Yes	D4106 (4,16)		(Mega Cab Only)	Factory	D3109 (11,14,20)	D3109A (11,14,20)		(For Bolted On Factory Receiver)	Lower Overload	A7311 (2,4,8)
								SuperHitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
	Four Wheel Drive Only (Single Re	ear Wheel)							R3505 (14,20,23)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,3)		
								Aftermarket	R3500 (12,14)			(For Welded On Factory		

Hundreds of vehicle fits not listed.

Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.



Dodge

Step 1: Select Your Front Tie Downs

Front Tie Downs

Step 2: Optional **Select Your Auxiliary Power Product** HiddenPower Under Vehicle

Step 3: Select Your Rear Tie Downs

Rear Tie Downs


Step 4: Optional Select Your SuperHitch SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

					Tront tie Bowiis		Battery Mount		Real Tie Bowiis		<u> </u>		Otub	ic E cud
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
2010-2012	3500	All	6.5ft	No	D2120		A7740 (Mega Cab Only)	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1101 (1B,2) (For Bolted On Factory	Upper Overload	A7200 (3,8)
				Yes	D4106 (4,16)		, ,	Factory	D3109 (11,14,20)	D3109A (11,14,20)		Receiver)	Lower Overload	A7311 (2,4,8)
								SuperHitch	R3505 (14,20,23)	R3503A (14,20,23)	Original 20K	D1102 (1B,2,3)		
	Dual Rear Wheel							SuperHitch Magnum	R3505 (14,20,23)	R3503A (14,20,23)	Magnum 30K	D1102-30 (1C,3)		
								Aftermarket	R3500 (12,14)			(For Welded On Factory Receiver)		
2013	2500	Reg	8ft	No V	D2115		A7740	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Upper Overload Lower Overload	A7200 (3)
				Yes	D4105 (4,5)		(Crew Cab Only)	Factory SuperHitch	D3109 (11,14,20) R3507 (14,20)	D3109A (11,14,20) R3507A (14,20,21)	Magnum 30K	D1104-30 (1C,2,3) (With Factory Welded Hitch)	Lower Overload	A7311 (2,4)
		Crew		No	D2118		1	SuperHitch Magnum	R3507 (14,20)	R3507A (14,20,21)	1	T IIIOTI)		
				Yes	D4105			Aftermarket	R3500 (12)	(, , , ,				
2013	2500	All	6.5ft	No	D2119			No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Upper Overload	A7200 (3)
				Yes	D4106 (4,16)			Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3) (With Factory Welded	Lower Overload	A7311 (2,4)
								SuperHitch	R3507 (14,20)	R3507A (14,20,21)		Hitch)		
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20,21)				
								Aftermarket	R3500 (12)		0.1.1.1.0016			1 - 1 (2 (2)
2013	3500	Crew	6.5ft	No	D2120			No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower Overload	A7311 (2,4,8)
				Yes	D4106 (4,16)			Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3) (With Factory Welded Hitch)	Upper Overload	A7200 (3,8)
								SuperHitch	R3507 (14,20)	R3507A (14,20)				
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				
2012 2017	Dual Rear Wheel	A.II	0.50	N 1	Dodod			Aftermarket	R3500 (14,12)					
2013-2017	1500	All	6.5ft	No	D2121			No Hitch	D3107 (26) D3107 (15)					
		Crew	5.5ft	No	D2134			Factory Aftermarket	R3500 (12)					
		Olow	0.010	110	52104			Attermance	110000 (12)					
2013-2017	3500	Crew, Mega	6.5ft	No	D2130	D2130A		No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower Overload	A7311 (2,4,8)
				Yes	D2132	D2132A		Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper Overload	A7200 (3,8)
								SuperHitch	R3507 (14,20)	R3507A (14,20)		(With Factory Welded Hitch)		
	0: 1 8							SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				
2013-2017	Single Rear wheel 3500	Mega	6.5ft	No	D2131	D2131A		Aftermarket No Hitch	R3500 (12) D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower Overload	A7311 (2,4,8)
				Yes				Factory SuperHitch	D3109 (11,14,20) R3507 (14,20)	D3109A (11,14,20) R3507A (14,20)	Magnum 30K	D1104-30 (1C,2,3) (With Factory Welded	Upper Overload	A7200 (3,8)
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)		Hitch)		
	5 15 W							40	D0500 (40.44)					
2013-2016	Dual Rear Wheel 3500	Crew	Rft	No	D2124 (30,31)	D2124A (30,31)	A7740	Aftermarket No Hitch	R3500 (12,14) D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower Overload	A7311 (2,4,8)
2013-2010	3300	Clew	OIL	Yes	D2124 (30,31)	D2127A (30,31)	A7740	Factory	D3109 (11,14,20)		Magnum 30K	D1104 (1B,2,3)	Upper Overload	A7200 (3,8)
				103	D2121 (23)	DZ127A (20)		SuperHitch	R3507 (14,20)	R3507A (14,20)	Magnum sort	(With Factory Welded Hitch)	Opper Overload	77200 (0,0)
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				
								Aftermarket	R3500 (12,14)					
2014-2016	1500	Reg	8ft					No Hitch	D3107 (26)					
								Factory	D3107 (15)					
2014-2016	1500	Crew	5.5ft					Aftermarket No Hitch	R3500 (12)		Horo	D1106H (1A 2H)		
2014-2010	1500	CIEW	3.511					Factory	D3107 (26) D3107 (15)		Hero	D1106H (1A,2H) (With Factory Welded		
								Hero	D3107 (15)			Hitch)		
							i	Aftermarket	R3500 (12)		i	,		
		_	•			l .	•		\			1	•	

Hundreds of vehicle fits not listed.

Hundreds of vehicle fits not listed.



Dodge

Step 1: Select Your Front Tie Downs

Step 2: Optional	
Select Your Auxiliary	
Power Product	

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer

	5				Front Tie Downs		HiddenPower Under Vehicle Battery Mount	'	Rear Tie Downs		Sup	erHitch	Stat	bleLoad
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
2014-2017	2500	Crew,	8ft	No	D2126 (28)	D2126A (28)	A7740	No Hitch	D3109 (11,14,20)	D3109A (11,14,20)		D1107 (1B,2,3)		A
		Regular						Factory	D3109 (11,14,20)		Magnum 30K	D1107-30 (1C,2,3)		A
				Factory running boards	D2127 (29)	D2127A (29)		SuperHitch	R3507 (14,20)	R3507A (14,20)		(With Factory Welded Hitch)		
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				
								Aftermarket	R3500 (12)					
2015-2017	3500	Crew, Mega	6.5ft	No	D2130 / D2123	D2130A		No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3,2H)	Lower Overload	A7311 (2,4,8)
				Yes	D2132 / D2128	D2132A		Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3,2H)	Upper Overload	A7200 (3,8)
								SuperHitch	R3507 (14,20)	R3507A (14,20)	Ī	(With Factory Welded		
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)		Hitch)		
	Single Rear Wheel	*						Aftermarket	R3500 (12,14)					
2015	3500	Reg	8ft	No	D2129 (30)			No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K	D1104 (1B,2,3)	Lower Overload	A7311 (2,4,8)
				(Diesel Engine)				Factory	D3109 (11,14,20)	D3109A (11,14,20)	Magnum 30K	D1104-30 (1C,2,3)	Upper Overload	A7200 (3,8)
								SuperHitch	R3507 (14,20)	R3507A (14,20)		(With Factory Welded Hitch)		
				No	D2124 (30,31)	D2124A (30,31)		SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				A
				(Gas Engine)				Aftermarket	R3500 (12,14)					A
2007-2015	3500, 4500, 5500	All	N/A	No	D2112			Factory			Magnum 30K	D1103-30 (1C,2,3)	Upper Overload	A7200 (3)
								Aftermarket	R3500 (12,14)				Lower Overload	A7311 (2,4)
	Cab & Chassis							SuperHitch Magnum	R3504 (12,14)					
2014-2017	2500	Crew	6.5ft	No	D2126 (28)	D2126A		No Hitch	D3109 (11,14,20)	D3109A (11,14,20)	Original 20K Magnum 30K	D1107 (1B,2,3)		A
								Factory	D3109 (11,14,20)		Magnum 30K	D1107-30 (1C,2,3)		A
				Factory running boards	D2127 (29)	D2127A		SuperHitch	R3507 (14,20)	R3507A (14,20)		(With Factory Welded Hitch)		
								SuperHitch Magnum	R3507 (14,20)	R3507A (14,20)				
								Aftermarket	R3500 (12)					A
2017	1500	Crew, Quad	6.5ft	No	D2121			Factory	D3107 (26)					
				Cab length	D2121			Factory	D3107 (26)					
2017	3500	Crew	8ft	No		D2124A (30,31)		Factory	D3109 (11,14,20)	D3109A (11,14,20)			Lower Overload	A7310
				Factory running boards	D2127 (29)	D2127A								A
2014-2015	4500												Upper Overload	A7200 (3)
	With Factory Bed												Lower Overload	A7311 (2,4)
2014-2015	4500, 5500										Magnum 30K	D1103-30 (1C,2,3)	Upper Overload	A7200 (3)
	Cab and Chassis													
Ston	6. Salact Vour													

Step 6: Select Your **Turnbuckles**



Basic SpringLoad Kit MFG# S9000





SpringLoad XL MFG# S9050A



Original FastGun

Stainless Steel Polished MFG# S9526

Powder Coated Grey MFG# S9522

Powder Coated Black MFG# S9529

Bright White MFG# S9530



Hundreds of vehicle fits not listed.



Chevrolet

Step 1: Select Your Front Tie Downs

Step 2: Optional **Select Your Auxiliary** Power Product
HiddenPower Under Vehicle

Step 3: Select Your Rear Tie Downs

Step 4: Optional Select Your SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

	Cilevio				Front Tie Downs		HiddenPower Under Vehicle Battery Mount		Rear Tie Downs		Supe	rHitch	Sta	bleLoad
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
1988-1994	2500	All	8ft	No	C2201 (3)			Factory	C3201 (15)		Original 20k	C1201 (1B,1)	Lower Overload	A7310 (1,4)
				Yes	C4201 (3,4,5)			SuperHitch Aftermarket	R3503 (23) R3500 (12)	R3503A (23)				
1988-1994	2500	All	6.5ft	No	C4201 (3,4,5,6)			Factory	C3201 (15)		Original 20K	C1201 (1B,1)	Lower Overload	A7310 (1,4)
				Yes	C4201 (3,4,5)			SuperHitch	R3503 (23)	R3503A (23)				
1000 1004	1500	All	04	No	02204 (2)			Aftermarket	R3500 (12)				Lawar Overland	A7240 (4.4)
1988-1994	1500	All	8ft	No Yes	C2201 (3) C4201 (3,4,5)			Factory Aftermarket	C3201 (15) R3500 (12)				Lower Overload	A7310 (1,4)
1988-1994	1500	All	6.5ft	No	C4201 (3,4,5,6)			Factory	C3201 (15)				Lower Overload	A7310 (1,4)
				Yes	C4201 (3,4,5)			Aftermarket	R3500 (12)					
1995-2000	2500	All	8ft	No Yes	C2201 (3) C4201 (3,4,5)			Factory SuperHitch	C3202 (15) R3503 (23)	R3503A (23)	Original 20k	C1201 (1B,1)	Lower Overload	A7310 (1,4)
	C/K Body Style			103	04201 (0,4,5)			Aftermarket	R3500 (12)	10000A (20)				
1995-2000	1500	All	8ft	No	C2201 (3)			Factory	C3202 (15)				Lower Overload	A7310 (1,4)
1005 0000	C/K Body Style	lau.	10.50	Yes	C4201 (3,4,5)			Aftermarket	R3500 (12)		0 : : 1001	04004 (40.4)		A 7040 (4.4)
1995-2000	2500	All	6.5ft	No Yes	C4201 (3,4,5,6) C4201 (3,4,5)			Factory SuperHitch	C3202 (15) R3503 (23)	R3503A (23)	Original 20k	C1201 (1B,1)	Lower Overload	A7310 (1,4)
	C/K Body Style			103	04201 (0,4,5)			Aftermarket	R3500 (12)	10000A (20)				
1995-2000	1500	All	6.5ft	No	C4201 (3,4,5,6)			Factory	C3202 (15)				Lower Overload	A7310 (1,4)
1991-1994	C/K Body Style	All	8ft	Yes	C4201 (3,4,5)			Aftermarket	R3500 (12)		Original 2014	C1201 (1B,1)	Lawar Overland	A7240 (4.4.E)
1991-1994	3500	All	δπ	No Yes	C2201 (3) C4201 (3,4,5)			Factory SuperHitch	C3201 (15) R3503 (23)	R3503A (23)	Original 20k	C1201 (1B,1)	Lower Overload	A7310 (1,4,5)
				100	04201 (0,4,0)			Aftermarket	R3500 (12)	11000071(20)				
1995-2000	3500	All	8ft	No	C2201 (3)			Factory	C3202 (15)		Original 20k	C1201 (1B,1)	Lower Overload	A7310 (1,4,5)
	C/K Body Style			Yes	C4201 (3,4,5)			SuperHitch Aftermarket	R3503 (23) R3500 (12)	R3503A (23)				
2000-2013	Suburban 2500, Yukon XL							Alternarket	R3500 (12)				Lower Overload	A7310 (1,4)
ALL	Express, Savana (2500, 3500)												Lower Overload	A7310 (1,4,5)
1999-2007	1500, 2500	Ext, Regular	6.5ft	No	C2202 (3,10)			No Hitch	C3203				Lower Overload	A7310 (1,4)
	Silverado 5.5" Frame			Yes	C4203 (3,4,5)			Factory Aftermarket	C3203 R3500					
	2007 Is Classic Model							Alternarket	13300		1			
1999-2007	1500, 2500	Regular,	8ft	No	C2202 (3,10)			No Hitch	C3204		Original 20k	C1202 (1B)	Lower Overload	A7310 (1,4)
	Cilvarada F. F. France	Extended		Yes	C4203 (3,4,5)			Factory	C3204	D25024 (22)		1999-2000 2500 Only		
	Silverado 5.5" Frame 2007 Is Classic Model							SuperHitch Aftermarket	R3503 (23) R3500 (12)	R3503A (23)				
2004-2007	1500	Crew	5.5ft	No	C2211			No Hitch	C3203				Lower Overload	A7310 (1,4)
				Yes				Factory	C3203					
	Silverado 5.5" Frame 2007 Is Classic Model							Aftermarket	R3500 (12)					
1999-2007	1500HD, 2500HD	All	6.5ft	No	C2205 (10)	C2205A (10)	A7730	No Hitch	C3205	C3205A	Original 20k	C1204 (1B,4)	Lower Overload	A7310 (1,4)
				Yes	C4203 (3,4,5)		2001-2007 2500HD Crew	Factory	C3205	C3205A	Magnum 30k	C1204-30 (1C,4)		
	SilveradoHD 8" Frame						Cab Only	SuperHitch	R3503 (23)	R3503A (23)		2001-2007 2500HD		
	2007 Is Classic Model							SuperHitch Magnum	R3504	R3504A		Only		
								Aftermarket	R3500 (12)	1000471				
2001-2007	2500HD, 3500	All	8ft	No	C2204 (10)	C2204A (10)	A7730	No Hitch	C3206	C3206A	Original 20k	C1205 (1B)	Lower Overload	A7310 (1,4,5)
	Silverado HD 8" Frame			Yes	C4203 (3,4,5)		Extended and Crew Cab Only	Factory SuperHitch	C3206 R3503 (23)	C3206A R3503A (23)	Magnum 30k	C1205-30 (1C)		
	2007 Is Classic Model							SuperHitch Magnum	R3504	R3504A				
								Aftermarket	R3501 (12)					
2007-2010	2500,3500	All	6.5ft	No	C2205	C2205A	A7730	No Hitch	00000 (45)	C3206A	Original 20k	C1206 (1B)	Lower Overload	A7310 (1,4,5)
	New Body			res	C4203 (3,4,5)		Crew Cab Only	Factory SuperHitch	C3209 (15) R3502	C3206A C3206A	Magnum 30k	C1206-30 (1C)		
	Tion Body							SuperHitch Magnum	R3502	C3206A				
		Len	100					Aftermarket	R3500 (12)			2.222.423		
2007-2010	2500,3500	All	8ft	No	C2204	C2204A	A7730 Extended & Crew Cab Only	No Hitch		C3206A	Original 20k	C1205 (1B)	Lower Overload	A7310 (1,4,5)
	New Body			Yes	C4203 (3,4,5)		Extended & Orew Gab Grilly	Factory SuperHitch	C3209 (15) R3503 (23)	C3206A R3503A (23)	Magnum 30k	C1205-30 (1C)		
	New Body							SuperHitch Magnum	R3504	R3504A				+
								Aftermarket	R3501 (12)					
2007-2013	1500	Crew	5.5ft	No	C2211			No Hitch	C3203				Lower Overload	A7310 (1,4)
								Factory	C3203					
								Aftermarket	R3500 (12)					
2011-2014	2500, 3500	Crew, Ext	6.5ft	No	C2213/C2220	C2220A		No Hitch	C3212	C3212A	Original 20k	C1209 (1B,1,6)	Upper Overload	A7202 (3) (3500 ONLY)
								Factory	C3212	C3212A	Magnum 30k	C1209-30 (1C,1,6)		
			8ft	No Voc	C2214/C2219			SuperHitch Magnum	C3212 C3212	C3212A C3212A			Lower Overload	A7310 (1,4,5)
				Yes	C4204 (4,5)			SuperHitch Magnum Aftermarket	R3500 (12)	03212A				
				•	1	1				-	•			

Hundreds of vehicle fits not listed.

Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide. Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.



Chevrolet

Step 1: Select Your Front Tie Downs

Front Tie Downs

Step 2: Optional
Select Your Auxiliary
Power Product
HiddenPower Under Vehicle

Step 3: Select Your Rear Tie Downs

Rear Tie Downs

Step 4: Optional Select Your SuperHitch

SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

					TIOIL HE BOWIS		Battery Mount		Real Tie Downs		Oup	erritori	Otta	DIELOGG
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
2011-2014	2500, 3500	Reg	8ft	No	C2215			No Hitch	C3212	C3212A	Original 20k	C1208 (1B)	Upper Overload	A7202 (3)
								Factory	C3212 C3212	C3212A	Magnum 30k	C2108-30 (1C		(3500 ONLY)
								SuperHitch	C3212	C3212A			Lower Overload	A7310 (1,4,5)
								SuperHitch Magnum	C3212	C3212A				
0011.0010	4500		0.0	N	00010			Aftermarket	R3500 (12)					17010 (1.1)
2014-2016	1500	Reg	8ft	No	C2212			Factory Aftermarket	C3214				Lower Overload	A7310 (1,4) (2015 Trucks) (7)
									R3500 (12)					
2014-2016	1500	All	6.5ft	No	C2217			Factory	C3214				Lower Overload	A7310 (1,4) (2015 Trucks) (7)
2014-2017	1500	Crew	5.5ft	No	C2218			Aftermarket	R3500 (12) C3214				Lower Overload	A7310 (1,4)
2014-2017	1500	Crew	5.511	No	C2216			Factory Aftermarket	R3500 (12)	+			Lower Overload	(2015 Trucks) (7)
0045 0047	0-1	O Ft	04	NI-	00004					_			1	
2015-2017	Colorado, Canyon	Crew, Ext, Double	6ft	No	C2221			Factory	C3218 (36)				Lower Overload	A7310 (1,4)
2015-2016	2500, 3500	Crew, Doubl	le 6.5ft	No	C2220	C2220A		Factory	C3215	C3215A	Original 20k	C1212 (1B)	Upper Overload	A7202 (3)
								Current litely	C3216	C3216A	Magnum 20k	C1212-30 (1C)		(3500 ONLY)
	Single Rear Wheel							SuperHitch SuperHitch Magnum	C3216	C3216A	Magnum 30k	C1212-30 (1C)	Lower Overload	A7310 (1,4,5)
	Single Real Wheel							Aftermarket	R3500 (12)	C3210A			Lower Overload	(2500 ONLY)
2015-2016	2500, 3500	Crew	8ft	No	C2219	C2214A	A7732	Factory	C3215	C3215A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
2010 2010	2000, 0000	0.011		Yes	C4204 (4,5)	022111	(3500 Crew Only)	SuperHitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)	oppor o romodu	(3500 ONLY)
							,	i i			ŭ	` ′		
	Single Rear Wheel							SuperHitch Magnum	C3216	C3216A			Lower Overload	A7310 (1,4,5)
								Aftermarket	R3500 (12)					(2500 ONLY)
2015-2016	2500,3500	Double	8ft	No	C2222			Factory	C3215	C3215A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
	0: 1 5 141 1			Yes	C4204 (4,5)			SuperHitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		(3500 ONLY)
	Single Rear Wheel							SuperHitch Magnum Aftermarket	C3216 R3500 (12)	C3216A			Lower Overload	A7310 (1,4) (2500 ONLY)
2015-2016	2500, 3500	Reg	8ft	No	C2215			Factory	C3215	C3215A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
2015-2016	2500, 5500	Reg	OIL	NO	G2215			SuperHitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)	Opper Overload	(3500 ONLY)
	Single Rear Wheel							SuperHitch Magnum	C3216	C3216A	Wagnum Jok	01211-30 (10)	Lower Overload	A7310 (1,4,5)
	g							Aftermarket	R3500 (12)					(2500 ONLY)
2015-2017	3500	Crew	8ft	No	C2219	C2214A	A7732	Factory	C3217	C3217A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
				Yes	C4204 (4,5)		(3500 Crew Only)	SuperHitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)		
	Dual Rear Wheel							SuperHitch Magnum	C3216	C3216A				
			100					Aftermarket	R3500 (12,14)		0.1.1.1.001	0.1011.115		1.7000 (0)
2015-2016	3500	Double	8ft	No Var	C2222			Factory	C3217	C3217A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
	Dual Rear Wheel			Yes	C4204 (4,5)			SuperHitch SuperHitch Magnum	C3216 C3216	C3216A C3216A	Magnum 30k	C1211-30 (1C)	-	_
	Dual Real Wileel							Aftermarket	R3500 (12,14)	C3210A				+
2015-2016	3500	Reg	8ft	No	C2215			Factory	C3217	C3217A	Original 20k	C1211 (1B)	Upper Overload	A7202 (3)
2010 2010		1.09	10.1	1.0	022.10		i	SuperHitch	C3216	C3216A	Magnum 30k	C1211-30 (1C)	oppor o romada	711202 (0)
	Dual Rear Wheel	'						SuperHitch Magnum	C3216	C3216A	ŭ	,		
								Aftermarket	R3500 (12,14)					
2016-2017	3500	Crew	6.5ft	No	C2220	C2220A		Factory	C3215	C3215A	Original 20k	C1212 (1B)	Upper Overload	A7202 (3)
	0: 1 5 14							SuperHitch	C3216	C3216A	Magnum 30k	C1212-30 (1C)		(3500 ONLY)
	Single Rear Wheel							SuperHitch Magnum Aftermarket	C3216 R3500 (12)	C3216A			-	
2016-2017	2500	Double	6.5ft	No	C2220	C2220A		Factory	C3215	C3215A	Original 20k	C1212 (1B)	Lower Overload	A7310 (1,4)
2010-2017	2500	Double	0.511	INO	02220	CZZZOA	-	SuperHitch	C3216	C3216A	Magnum 30k	C1212-30 (1C)	Lower Overload	(2500 ONLY)
								SuperHitch Magnum	C3216	C3216A	g/idin oon	1.2.2.00(1.0)	i	1,220 0.121)
								Aftermarket	R3500 (12)					
2016	2500, 3500	Double	8ft	No	C2222			Factory	C3215	C3215A				
								SuperHitch	C3216	C3216A				
	Single Rear Wheel							SuperHitch Magnum	C3216	C3216A				
2016	2500, 3500	Double	8ft	No	C2222			Aftermarket Factory	R3500 (12,14) C3217	C3217A			+	
2010	2500, 3500	Double	OIL	INO	02222			SuperHitch	C3217	C3217A			1	+
	Dual Rear Wheel						1	SuperHitch Magnum	C3216	C3216A			1	+
								Aftermarket	R3500 (12,14)				i	
2017	1500	Double,	6.5ft	No	C2217			Factory	C3214				Lower Overload	A7310 (1,4)
		Crew						Aftermarket	R3500 (12,14)					
2017	1500	Crew	5.5ft	No	C2218			Factory	C3124				Lower Overload	A7310 (1,4)
			200				I	Aftermarket	R3500 (12,14)				<u> </u>	1 (2)
2017	3500	Crew	8ft	No	C2219	C2214A	A7732	Factory	C3215	C3215A	Original 20K	C1211 (1B)	Upper Overload	A7202 (3)
	Single Rear Wheel							SuperHitch SuperHitch Magnum	C3216 C3216	C3216A C3216A	Magnum 30K	C1211-30 (1C)		
	Unigle Iteal Wileel							Aftermarket	R3500 (12,14)	032 TUA			1	
							•	Augmanct	[110300 (12,14)					

Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.

Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.



Toyota

Step 1: Select Your Front Tie Downs

Front Tie Downs

Step 2: Optional Select Your Auxiliary **Power Product** HiddenPower Under Vehicle **Battery Mount**

Step 3: Select Your Rear Tie Downs

Rear Tie Downs

Step 4: Optional Select Your SuperHitch

SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

							Battery Would							
Year	Model	Cab	Bed	Do running boards extend past the cab?	Standard Front Tie Down	Talon Aluminum Front Tie Down	MFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#
1998-2004	Tacoma	All	6ft	No	T2306			No Hitch	T3305				Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2000-2006	Tundra	All	6.5ft	No	T2301			No Hitch	T3301 (9)				Lower Overload	A7311 (2,4)
								Factory	T3301 (9)					
	Standard Tow Package							Aftermarket	R3500 (12)					
2000-2006	Tundra	All	8ft	No	T2302			No Hitch	T3301 (9)				Lower Overload	A7311 (2,4)
								Factory	T3301 (9)				_	
	Standard Tow Package	1	10.00					Aftermarket	R3500 (12)					
2003-2006	Tundra	All	6.5ft	No	T2301			Factory	T3302 (9)				Lower Overload	A7311 (2,4)
	HD Tow Package		100					Aftermarket	R3500 (12)					1.=2.11.12.1)
2000-2006	Tundra	All	8ft	No	T2302			Factory	T3302 (9)				Lower Overload	A7311 (2,4)
0005.0044	HD Tow Package	Tau	100	N.	T0000 (10)			Aftermarket	R3500 (12)					17011 (0.1)
2005-2014	Tacoma	All	All	NO	T2303 (18)			Factory Aftermarket	T3303				Lower Overload	A7311 (2,4)
2005-2014	4x4 only	All	All	No	T2308 (18)			Factory	R3500 (12) T3303				Lower Overload	A7311 (2,4)
2005-2014	Tacoma 2x4 only	All	All	INO	12306 (16)			Aftermarket	R3500 (12)				Lower Overload	A7311 (2,4)
2007	Tundra	All	6.5ft	No	T2304			Factory	T3304				Lower Overload	A7311 (2,4)
2007	Tuliula	All	0.511	NO	12304			Aftermarket	R3500 (12)				Lower Overload	A7311 (2,4)
2007	Tundra	All	8ft	No	T2305			Factory	T3304				Lower Overload	A7311 (2,4)
2007	Tuliula	All	Oit	NO	12303			Aftermarket	R3500 (12)				Lower Overload	A7311 (2,4)
2007	Tundra	Crew Max	5.5ft	No	T2307			Factory	T3304				Lower Overload	A7311 (2,4)
2007	4x4 Only	OTOW WILL	0.010	140	12007			Aftermarket	R3500 (12)				Lower Overload	7(1011 (2,4)
2008-2011	Tundra	All	6.5ft	No	T2304			Factory	T3304				Lower Overload	A7311 (2.4)
2000 2011	Turidia	/	0.010		12001			Aftermarket	R3500 (12)				zowor o vonoud	A7311 (2,4) Double cab and crew max only
2008-2012	Tundra	All	8ft	No	T2305			Factory	T3304				Lower Overload	A7311 (2,4) Double cab and crew
								Aftermarket	R3500 (12)					Double cab and crew max only
2008-2013	Tundra	Crew Max	5.5ft	No	T2307			Factory	T3304				Lower Overload	A7311 (2,4)
	4x4 Only	10.01.11.01.	10.0.0		1			Aftermarket	R3500 (12)					(=, 1)
2012-2013	Tundra	Double	6.5ft	No	T2309			Factory	T3304				Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2013	Tundra	Double	8ft	No	T2305			Factory	T3304				Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2014-2015	Tundra	Crew Max	5.5ft	No	T2307			Factory	T3306				Lower Overload	A7311 (2,4)
	4x4 only							Aftermarket	R3500 (12)					
2014-2015	Tundra	Double	6.5ft	No	T2309			Factory	T3306				Lower Overload	A7311 (2,4)
	4x4 only							Aftermarket	R3500 (12)					
2014-2015	Tundra	Double	8ft	No	T2305			Factory	T3306				Lower Overload	A7311 (2,4)
								Aftermarket	R3500 (12)					
2015	Tacoma	Double	6.5ft	No	T2308 (18)			Factory	T3303				Lower Overload	A7311 (2,4)
	4x4 only							Aftermarket	R3500 (12)					
2015	Tacoma	Double	5ft					Factory	T3303				Lower Overload	A7311 (2,4)
	4x4 only							Aftermarket	R3500 (12)					
2016	Tacoma	Double	6.5ft	No	T2303 (18)			Factory	T3307 (20)					
	4x4 only	1	10.00					Aftermarket	R3500 (12)					
2017	Tundra	All	6.5ft	No	T2310			Factory	T3306				Lower Overload	A7311 (2,4)
	4x4 only	10 10	1					1						
2017	Tundra	Crew Max	5.5ft	No	T2311			Factory	T3306					

Step 6: Select Your Turnbuckles



Basic SpringLoad Kit MFG# S9000



ETTER



Original FastGun Stainless Steel Polished MFG# S9526

Powder Coated Grey MFG# S9522

Powder Coated Black MFG# S9529

Bright White MFG# S9530



Hundreds of vehicle fits not listed.

Go to www.torklift.com if your application is not listed. For footnotes and turnbuckles, see last page of app guide.



Hundreds of vehicle fits not listed.

Nissan

Cab

Kina. Crew

Kina

Crew 4×4

Crew 4x4

King

Bed

6.5ft

N/A

Step 1: Select Your Front Tie Downs

Front Tie Downs

Standard Front Tie

Down

N2401

N2409

N2409

N2409

N2402 (16)

Do running boards extend past the cab?

Step 2: Optional Select Your Auxiliary **Power Product** liddenPower Under Vehicle Batter

Step 3: Select Your Rear Tie Downs

Rear Tie Downs

Step 4: Optional Select Your SuperHitch

SuperHitch

Step 5: Select Your Suspension Stabilizer StableLoad

ry Mount		iteal fie bowiis		Superi	inten	StableLoad		
IFG#	Your current receiver / trailer hitch	Standard Rear Tie Down	Talon Aluminum Rear Tie Down	Hitch Type	MFG#	Overload Type	MFG#	
	No Hitch	N3401				Lower Overload	A7311 (2,4,6)	
	Factory	N3401						
	Aftermarket	R3500 (12)						
	No Hitch	N3401				Lower Overload	A7311 (2,4,6)	
	Factory	N3401						
	Aftermarket	R3500 (12)						
	No Hitch	N3403				Lower Overload	A7311 (2,4)	
	Factory	N3403						
	Aftermarket	R3500 (12)						
	No Hitch	N3403				Lower Overload	A7311 (2,4,6)	
	Factory	N3403						
	Aftermarket	R3500 (12)						
	No Hitch	N3403				Lower Overload	A7311 (2,4)	
	Factory	N3403						
	Aftermarket	R3500 (12)						
	No Hitch	N3403				Lower Overload	A7311 (2,4)	
	Factory	N3403						
	Aftermarket	R3500 (12)						
	Aftermarket	R3500 (12)				Lower Overload	A7311 (2,4)	
						Lower Overload	A7311 (2,4)	
						Lower Overload	A7311 (2,4)	
	Factory	N3404						
	Aftermarket	R3500 (3,12)						

Step 6: Select Your **Turnbuckles**

NV2500, NV3500

Frontie

Frontier

Frontier

Frontier

Frontier

2004-2015

2004-2014


2005-2012

2013-2014

2014-2015

2015-2016

2016-2017







Original FastGun Stainless Steel Polished MFG# S9526 **Powder Coated Grey** MFG# S9522 **Powder Coated Black** MFG# S9529 **Bright White** MFG# S9530

Tie Down

Tie Down Footnotes

- Drilling may be required into the Spring Hanger Bracket which is welded to the frame.
- Drilling may be required for installation.
- May require modifications to the running board/bed access step brackets to install Tie Downs.
- Additional labor required for installation of Tie Downs.
- Front Tie Down is available in adjustable Tie Down style only.
- 9 The Toyota HD Tow Package attaches to the side and bottom of the vehicles frame. The Standard Toyota Tow Package attaches to the bottom of the vehicles frame
- To determine the correct fit: 1500 & 2500 model/classic body style vehicle owners must measure the vehicle frame height at the back of the truck next to the spare tire. If the frame is 5.5" tall it requires the LD application, If the frame is 8" tall it requires the HD application.
- Will work with aftermarket hitches that do not have side plates that attach to the bottom of the frame.
- Tie Down requires 4"x4" footprint on the side plate of the aftermarket hitch in order to install. Drilling four holes per side is required for install.
- Dually applications may require the use of (#A7004 Dually Adapter Kit). Measure from front of camper slide in point to the rear anchor point. If total is 90" or less, use Dually Adapter Kit.
- Requires a Factory installed hitch receiver with an open ended cross tube.
- Designed to work with the factory installed running board that extends past the cab and onto the bed. Tie Down is not adjustable in height.
- 18 Toyota Tacoma models with a 5' bed & running boards under the cab will need to remove the running boards to install this tie down.
- Will not work with aftermarket Mopar rear mounted kick out steps that are mounted under the bumper 20
- This Tie Down mounts to the cab mount. You will need to remove the running boards to install this Tie Down If you are using an older one piece SuperHitch, please call 800.246.8132 for rear Tie Down applications.
- There were no factory options for a factory hitch for this vehicle. Hitches that were installed on this truck were dealer installed aftermarket hitch options. Select aftermarket hitch on app guide main page step 3.
- Will not work with HiddenPower due to Tie Down design.
- Works with NO running boards, including the ones that are just under the cab. If you have running boards under your cab, you will need front tie down D2127/
- Works with any factory running boards/bed access steps, including the ones that are only under the cab.
- Due to compressor location this Tie Down can't be installed with factory airbags
- If your truck is equipped with factory airbags and no running boards, use D2126/D2126A. If your truck is equipped with factory airbags and running boards of any length, use D2127/D2127A.
- This Tie Down will not work with factory under bed flip out steps.
- Works with OEM cab length or wheel-to-wheel running boards

StableLoad Footnotes

- A7310 StableLoad is a NO-DRILL APPLICATION and requires factory predrilled 1/2" diameter holes in lower overload spring. The A7310 Quick Disconnect StableLoad is designed for vehicles that have a lower overload leaf suspension with a hole near each end of the lower overload spring. The lower overload will, for the most part be shorter, thicker and will generally have separation from the rest of the spring pack. In most cases, there will be a plastic disc covering the hole in question.
- A7311 (WITH DRILL KIT) will fit any passenger or commercial vehicle, van, SUV, truck, RV etc. with rear leaf springs and lower overload spring. The lower overload leaf can be identified by being on the very bottom of the spring pack, being thicker than the rest of the leaf springs in the spring pack and generally speaking having a gap between the lower overload leaf spring and the upper leaf spring pack. Drilling four 7/16 holes required. Specially treate drill bits and detailed drilling instructions are included. Average drill time is 30-40 minutes for complete installation. Many factory overload springs come predrilled with 1/2" holes. Therefore drilling holes in the overload springs in the same factory locations found on vehicles with predrilled holes will have no affect on your springs integrity or operation. The drilled springs (when drilled in accordance with the Torklift International drilling specifications) and the integrity of the springs once drilled are covered under the Lifetime Torklift International Warranty. Some overload springs may have adhesive padding on top of the overload spring. Use a screwdriver or equivalent to remove the padding. This will ensure proper rotation and ease of use.
- The A7200, A7202 is a NO-DRILL APPLICATION and must have factory installed upper overload. Will not work in conjunction with Supersprings. Due to factory overload engagement design, some applications have progressive engagement, where rear springs will contact first. Drilling of rubber pad on some older Dodge applications may be required. Depending on the vehicle model, suspension package, and condition, actual distance between the StableLoad and vehicle frame overload contact bracket may vary. In some rare instances, when the vehicle is not carrying a load, the StableLoad may come into contact on occasion due to rough road conditions and other anomalies. #A7201 Spacer kit is available for vehicles that need additional spacin for the StableLoad to contact the overload spring.
- On Quick Disconnect StableLoad (part#'s A7310/A7311) due to wear and tear after time, some vehicles leaf springs may have minimal clearance with the lower overload for StableLoad engagement / disengagement when the vehicle is unloaded. In order for the StableLoad to engage and disengage with minimal effort, a minimum gap of 1/8" is required between the lower overload and the spring pack.
- There is no fit for the 3500/E350 Cab and Chassis.
- If your Nissan Titan has an Axle wrap bracket located at the rear of the lower leaf spring, A7310/A7311 StableLoads may only be installed on the forward end of the driver and passenger leaf springs
- Due to clearance issues, the StableLoad will only work on the rear of the spring.
- Will not work with factory installed airbags on 3500 trucks. This is due to the lack of both upper and lower overload springs.

HiddenPower Footnotes

- Battery box is not included.
- Requires drilling into the vehicle frame. This is a universal fit application.

SuperHitch Footnotes

- 1A Rated at 1,500 lbs tongue weight distributing and 15,000 lbs pulling capacity weight distributing.
- Rated at 2,000 lbs tongue weight distributing and 20,000 lbs pulling capacity weight distributing.
- Rated at 3,000 lbs tongue weight distributing and 30,000 lbs pulling capacity weight distributing.
 - Spare tire hanger and tailpipe modification may be necessary.
- May require modification to spare tire hanger
- Will only work with factory welded on receiver hitch
- 2007 fits only classic body style.
- Trucks with 34½" cab and chassis frame use F1003; trucks with a 37½" regular pickup frame use F1002.
- Works with vehicles that have factory rims and tires 18" and smaller
- 1H It is not compatible with factory hitch rated to 11,500 lbs
- Comes with a single receiver that combines with factory hitch





call us at 1-800-246-8132





15 Y	YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
-	09-14	Ford F150	All bed lengths with factory hitch	F1005H (1a,1H,2)	A7311 (2,4)	-
١	YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
	FORD 81-97	F250/F350	All bed lengths	F1000 (1b)	A7311 (2,4)	A7200 (3)
	99-05	Excursion	All bed lengths	F1006 (1b)	A7310 (1,4)	A7200 (3)
	99-16	F250/F350/F450 Factory bed	All bed lengths	F1002 (1b,5)	A7310 (1,4)	A7200 (3)
	00-16	F350/F450/F550 Cab and chassis	NA	F1002 (1b,5)	A7310 (1,4)	A7200 (3)
	DODGE			` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` ` `	_	A1 200 (0)
	80-93	D250/D350	Long bed	F1000 (1b,1,3)	-	-
	94-02	2500/3500	Long bed	D1100 (1b,3)	A7311 (2,4)	A7200 (3)
	94-02	2500/3500	Short bed	D1100 (1b,1,3)	A7311 (2,4)	-
~ _	03-12	2500 HD/3500HD	Long bed and short with dealer hitch	D1101 (1b,2)	A7311 (2,4)	A7200 (3)
20 L	03-12	2500 HD/3500 HD	Long bed and short with factory hitch	D1102 (1b,2,3)	A7311 (2,4)	A7200 (3)
7	2013	2500/3500	Long bed and short with factory hitch	D1104 (1b,2,3)	A7311 (2,4)	A7200 (3)
JĿ	14-17	2500	Long bed and short with factory hitch	D1107 (1b,2,3)	-	-
§ I	13-17	3500	Long bed and short with factory hitch	D1104 (1b,2,3)	A7311 (2,4)	A7200 (3)
	CHEVY 82-87	/ GMC 2500	Long bed	C1200 (1b,1)		
	82-90	3500	•	· · /	-	-
-	88-98	2500	Long bed All bed lengths	C1200 (1b,1)	- A7240 (4.4)	-
	91-00	3500	Ŭ	C1201 (1b,1)	A7310 (1,4)	-
	91-00	2500 LD	All bed lengths	C1201 (1b,1)	A7310 (1,4,5)	-
			Long bed	C1202 (1b)	A7310 (1,4)	-
	99-07	2500 HD/3500 HD classic	Short bed	C1204 (1b,4)	A7310 (1,4)	-
	01-10	2500 HD/3500 HD classic & new body	Long bed	C1205 (1b,7)	A7310 (1,4)	-
	07-10	2500/3500 new body	Short bed	C1206 (1b)	A7310 (1,4)	- A 7000 (0)
	11-14	2500/3500	Long bed	C1208 (1b)	A7310 (1,4,5)	A7202 (3)
	11-14	2500/3500	Short bed	C1209 (1b,1,6)	A7310 (1,4,5)	A7202 (3)
·	15-17	2500/3500	Long bed	C1211 (1b)	A7310 (1,4)	A7202 (3) (3500 only)
	15-17	2500/3500	Short bed	C1212 (1b)	A7310 (1,4)	A7202 (3) (3500 only)
,	YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
				= 1.000 00 11 =1		4.7000 (0)
	FORD 99-16	F250/F350/F450 Factory bed	All bed lengths	F1002-30 (1c,5)	A7310 (1,4)	A7200 (3)
9		F250/F350/F450 Factory bed F350/F450/F550 Cab and chassis	All bed lengths N/A	F1002-30 (1c,5) F1003-30 (1c,5)	A7310 (1,4)	A7200 (3) A7200 (3)
9	99-16	,	ŭ		A7310 (1,4) - A7311	

						` ,,
	YEAR	MODEL (CAB TYPE)	ITEM DESCRIPTION	MFG#	STABLELOAD PART#	STABLELOAD PART#
	FORD					
	99-16	F250/F350/F450 Factory bed	All bed lengths	F1002-30 (1c,5)	A7310 (1,4)	A7200 (3)
	00-16	F350/F450/F550 Cab and chassis	N/A	F1003-30 (1c,5)	-	A7200 (3)
	2017	F250/F350	All bed lengths	F1008-30 (1C,5)	A7311	A7200 (3)
	DODGE					
	03-12	2500 HD/3500 HD	Long and short bed with factory hitch	D1102-30 (1c,1,3)	A7311 (2,4)	A7200 (3)
30K	07-16	STERLING / 3500 /4500 / 5500 HD cab & chassis/ quad cab & reg	N/A	D1103-30 (1c,2,3)	A7311 (2,4)	A7200 (3)
8	2013	2500/3500	Long and short bed with factory hitch	D1104-30 (1c,2,3)	A7311 (2,4)	A7200 (3)
	14-17	2500	Long and short bed with factory hitch	D1107-30 (1c,2,3)	-	-
GNUM	13-17	3500	Long and short bed with factory hitch	D1104-30 (1c,2,3)	A7311 (2,4)	A7200 (3)
=	2017	3500	All bed lengths	D1104-30 (1c,2,3)	-	-
布	CHEVY	GMC				
	01-07	2500 HD	Short bed	C1204-30 (1c,4)	A7310 (1,4)	-
ΔĀ	01-10	2500 HD/3500 HD classic & new body	Long bed	C1205-30 (1c,7)	A7310 (1,4)	-
-	07-10	2500/3500 new body	Short bed	C1206-30 (1c)	A7310 (1,4)	-
	11-14	2500/3500	Long bed	C1208-30 (1c)	A7310 (1,4,5)	A7202 (3) (3500) only
	11-14	2500/3500	Short bed	C1209-30 (1c,1,6) A7310 (1,4,5)		A7202 (3) (3500 only)
	15-17	2500/3500	Long bed	C1211-30 (1c)	A7310 (1,4) (2500 only)	A7202 (3) (3500 only)
	15-17	2500/3500	Short bed	C1212-30 (1c)	A7310 (1,4) (2500 only)	A7202 (3) (3500 only)

1	Z)	Z	Z	1	7		7	F	1	7	}
I	N	T	E	R	N	Α	T	I	0	N	Α	L	

For fast and friendly tech support call us at 1-800-246-8132

	LENGTH	MFG#	SUPER HITCH 20K & 30K TONGUE WEIGHT / TOW WEIGHT	WEIGHT DISTRIBUTING			
	21"	E1521	750 / 7,500	1,400 / 14,000			
S	24"	E1524	750 / 7,500	1,400 / 14,000			
SUPERTRUSS	28"	E1528	750 / 7,500	1,200 / 12,000			
<u>~</u>	32"	E1532	650 / 6,500	1,200 / 12,000			
H H	36"	E1536	650 / 6,500	1,200 / 12,000			
<u>교</u>	42"	E1542	600 / 6,000	1,200 / 12,000			
<u>က</u>	48"	E1548	600 / 6,000	1,200 / 12,000			
	60"	E1560	500 / 5,000	1,000 / 10,000			
		MFG#					
		A7100	SuperTruss I	Extension SkidWheel			
30K	MFG#		ITEM DESCRIPTION				
<u>۾</u> ا	MD4000		200 1 1 1 1 1 1 1 1 1				

¥	¥ MFG#		ITEM DESCRIPTION			
33	WD1000		Industry's highest ratings of 3,000 lbs tongue weight and 30,000 lbs towing			
ES	WP1001		Friction plate replacement kit: Prevents friction between yoke and ballmount.			
ĒR	WP1002		Separate set of hook up clips for hydraulic assist.			
Ш	WP1003		Separate set of cam over leverage arms for engaging hook up clips			
	MFG#		ITEM DESCRIPTION	MAX CAPACITY		
	M9000	30K Shank		30,000 lbs.		

		MFG#	ITEM DESCRIPTION	MAX CAPACITY
<i>‡</i>		M9000	30K Shank	30,000 lbs.
	10	M9001	30K Shank XL	30,000 lbs.
	Ľ	M9005	30K Ballmount Adapter	30,000 lbs.
	5	M9002	30K Pintle Adapter	30,000 lbs.
	9	M9003	20K Shank Adapter (for pintle hooks)	20,000 lbs.
	Ę	M9004	20K Ballmount Adapter	20,000 lbs.
	M	M9006	2.5" To 2" Reducer Sleeve	N/A
	8.8	M9008	30k Trailer Ball	30,000 lbs.
		M9010	Everest 30K Shank	30,000 lbs.
		M9011	Everest 30K Shank XL	30,000 lbs.

SuperHitch Footnotes

- 1A Rated at 1,500 lbs tongue weight distributing and 15,000 lbs pulling capacity weight distributing.
- 1B Rated at 2,000 lbs tongue weight distributing and 20,000 lbs pulling capacity weight distributing.
- 1C Rated at 3,000 lbs tongue weight distributing and 30,000 lbs pulling capacity weight distributing.
- 1 Spare tire hanger and tailpipe modification may be necessary.
- 2 May require modification to spare tire hanger.
- 3 Will only work with factory welded on receiver hitch.
- 4 2007 fits only classic body style
- Trucks with $34\frac{1}{2}$ " cab and chassis frame use F1003; trucks with a $37\frac{1}{2}$ " regular pickup frame use F1002.
- 6 Works with vehicles that have factory rims and tires 18" and smaller.
- 7 8" frame measured by spare
- 1H It is not compatible with factory hitch rated to 11,500lbs.
 2H Comes with a single receiver that combines with factory hitch.

StableLoad Footnotes

- A7310 StableLoad is a NO-DRILL APPLICATION and requires factory predrilled 1/2" diameter holes in lower overload spring. The A7310 Quick Disconnect StableLoad is designed for vehicles that have a lower overload leaf suspension with a hole near each end of the lower overload spring. The lower overload will, for the most part be shorter, thicker and will generally have separation from the rest of the spring pack. In most cases, there will be a plastic disc covering the hole in question.
- A7311 (WITH DRILL KIT) will fit any passenger or commercial vehicle, van, SUV, truck, RV etc. with rear leaf springs and lower overload spring. The lower overload leaf can be identified by being on the very bottom of the spring pack, being thicker than the rest of the leaf springs in the spring pack and generally speaking having a gap between the lower overload leaf spring and the upper leaf spring pack. Drilling four 7/16 holes required. Specially treated drill bits and detailed drilling instructions are included. Average drill time is 30-40 minutes for complete installation. Many factory overload springs come predrilled with 1/2" holes. Therefore drilling holes in the overload springs in the same factory locations found on vehicles with predrilled holes will have no affect on your springs integrity or operation. The drilled springs (when drilled in accordance with the Torklift International drilling specifications) and the integrity of the springs once drilled are covered under the Lifetime Torklift International Warranty. Some overload springs may have adhesive padding on top of the overload spring. Use a screwdriver or equivalent to remove the padding. This will ensure proper rotation and ease of use.
- The A7200, A7202 is a NO-DRILL APPLICATION and must have factory installed upper overload. Will not work in conjunction with Supersprings. Due to factory overload engagement design, some applications have progressive engagement, where rear springs will contact first. Drilling of rubber pad on some older Dodge applications may be required. Depending on the vehicle model, suspension package, and condition, actual distance between the StableLoad and vehicle frame overload contact bracket may vary. In some rare instances, when the vehicle is not carrying a load, the StableLoad may come into contact on occasion due to rough road conditions and other anomalies. #A7201 Spacer kit is available for vehicles that need additional spacing for the StableLoad to contact the overload spring.
- On Quick Disconnect StableLoad (part#'s A7310/A7311) due to wear and tear after time, some vehicles leaf springs may have minimal clearance with the lower overload for StableLoad engagement / disengagement when the vehicle is unloaded. In order for the StableLoad to engage and disengage with minimal effort, a minimum gap of 1/8" is required between the lower overload and the spring pack.
- 5 There is no fit for the 3500/E350 Cab and Chassis.
- If your Nissan Titan has an Axle wrap bracket located at the rear of the lower leaf spring, A7310/A7311 StableLoads may only be installed on the forward end of the driver and passenger leaf springs.
- 7 Due to clearance issues, the StableLoad will only work on the rear of the spring.
- 8 Will not work with factory installed airbags on 3500 trucks. This is due to the lack of both upper and lower overload springs.



STABLELOAD Suspension Stabilizer

 Dramatically improves safety, handling and reduces sway, body roll and porpoising Ability to turn on and off in seconds*

Universal fit for all vehicles with factory installed upper or lower overloads



YEAR	MAKE/MODEL	MFG#	MFG#
UNIVERSAL		LOWER OVERLOAD	UPPER OVERLOAD
Universal	Truck/SUV/Van/RV/Commercial, etc	A7311 (2,4)	A7202 (3)
FORD			
00-11	Ranger	A7311 (2,4)	-
81-09	F150/250/350/450	A7311 (2,4)	A7200 (3)
10-17	F150	A7310 (1,4)	
99-05	Excursion	A7310 (1,4)	-
10-16	F250/350/450	A7310 (1,4)	A7200 (3)
00-16	F350/450/550 Cab and Chassis	-	A7200 (3)
01-08	E150 Van	A7311 (2,4)	-
05-11	E250/E350 Van	A7311 (2,4,5)	-
12-13	E250/E350 Van	A7310 (1,4,5)	-
2017	F250/350	A7311 (2,4,5)	A7200 (3)
DODGE			
94-08	1500	A7311 (2,4)	-
94-13	2500/3500/4500	A7311 (2,4,8)	A7200 (3,8)
14-15	3500/4500	A7311 (2,4,8)	A7200 (3,8)
14-15	4500/5500 Cab and Chassis	-	A7200 (3)
13-17	3500	A7311 (2,4,8)	A7200 (3,8)
87-10	Dakota	A7311 (2,4)	-
CHEVROLET/GMC			
00-13	2500 Suburban/YukonXL	A7310 (1,4)	-
All	Canyon/Colorado/S10/Sonoma	A7311 (2,4)	-
88-14	1500 trucks	A7310 (1,4)	-
15-17	1500 trucks	A7310 (1,4,7)	-
91-10	3500 trucks	-	A7202 (3)
11-14	3500 trucks	-	A7202 (3)
15-16	3500 trucks	-	A7202 (3)
88-17	2500 trucks	A7310 (1,4)	- ' '
All	Express/Savana 2500/3500	A7310 (1,4,5)	-
2017	1500 trucks (5.5ft & 6.5 ft bed ONLY)	A7310 (1,2)	-
TOYOTA			
All	Tacoma	A7311 (2,4)	-
All	Tundra	A7311 (2,4)	-
NISSAN			
All	Frontier	A7311 (2,4)	-
All	Xterras	A7311 (2,4)	-
All	Titan	A7311 (2,4,6)	-
All	NV 2500/3500	A7311 (2,4)	-
HUMMER			
All	H3 SUVs	A7311 (2,4)	-
MERCEDES			
11-13	Sprinter 2500/3500	A7311 (2,4)	-

StableLoad Footnotes

A7310 StableLoad is a NO-DRILL APPLICATION and requires factory predrilled 1/2" diameter holes in lower overload spring. The A7310 Quick Disconnect StableLoad is designed for vehicles that have a lower overload leaf suspension with a hole near each end of the lower overload spring. The lower overload will, for the most part be shorter, thicker and will generally have separation from the rest of the spring pack. In most cases, there will be a plastic disc covering the hole in question.

- A7311 (WITH DRILL KIT) will fit any passenger or commercial vehicle, van, SUV, truck, RV etc. with rear leaf springs and lower overload spring. The lower overload leaf can be identified by being on the very bottom of the spring pack, being thicker than the rest of the leaf springs in the spring pack and generally speaking having a gap between the lower overload leaf spring and the upper leaf spring pack. Drilling four 7/16 holes required. Specially treated drill bits and detailed drilling instructions are included. Average drill time is 30-40 minutes for complete installation. Many factory overload springs come predrilled with 1/2" holes. Therefore drilling holes in the overload springs in the same factory locations found on vehicles with predrilled holes will have no affect on your springs integrity or operation. The drilled springs (when drilled in accordance with the Torklift International drilling specifications) and the integrity of the springs once drilled are covered under the Lifetime Torklift International Warranty. Some overload springs may have adhesive padding on top of the overload spring. Use a screwdriver or equivalent to remove the padding. This will ensure proper rotation and ease of use.
- The A7200, A7202 is a NO-DRILL APPLICATION and must have factory installed upper overload. Will not work in conjunction with Supersprings. Due to factory overload engagement design, some applications have progressive engagement, where rear springs will contact first. Drilling of rubber pad on some older Dodge applications may be required. Depending on the vehicle model, suspension package, and condition, actual distance between the StableLoad and vehicle frame overload contact bracket may vary. In some rare instances, when the vehicle is not carrying a load, the StableLoad may come into contact on occasion due to rough road conditions and other anomalies. #A7201 Spacer kit is available for vehicles that need additional spacing for the StableLoad
- On Quick Disconnect StableLoad (part#'s A7310/A7311) due to wear and tear after time, some vehicles leaf springs may have minimal clearance with the lower overload for StableLoad engagement / disengagement when the vehicle is unloaded. In order for the StableLoad to engage and disengage with minimal effort, a minimum gap of 1/8" is required between the lower overload and the spring pack.
- There is no fit for the 3500/E350 Cab and Chassis.

TORKLIFT

INTERNATIONAL

- If your Nissan Titan has an Axle wrap bracket located at the rear of the lower leaf spring, A7310/A7311 StableLoads may only be installed on the forward end of the driver and passenger leaf
- Due to clearance issues, the StableLoad will only work on the rear of the spring. Will not work with factory installed airbags on 3500 trucks. This is due to the lack of both upper and lower overload springs.

*Applies only to the StableLoad Quick Disconnect (Lower Overload)



Under Vehicle Battery Mount

HiddenPower connects to your vehicle's battery keeping the HiddenPower battery charged while the vehicle is running



HiddenPower battery mount allows you to add additional batteries under your truck bed that are always charged up. Avoid wasting fuel and leaving your truck engine running while using electrical accessories such as lights, stereos, computer, etc. Power accessories without turning your truck engine on by having them directly wired into the extra battery. No-drill frame mounted with quick disconnect feature for battery service. Kept constantly charged and RVing-ready by your RV and truck's charging system. Hidden when in use with no loss of ground clearance. Works with group 24 to 31 batteries and comes with battery box. Wiring sold

FORD	YEAR	MODEL	CAB	BED	MFG PART#	Group 24-31 Box Included
R1-97	FORD					
81-97 F350 All 8ft A7727 X 81-97 F250 F250 All 8ft A7703 (1) 99-04 F250,F350 (Super Duty with Factory Bed) 05-07 (Super Duty with Factory Bed) All 8ft A7703 (1) A7727 X A7728 S A7729 X A7729 X	73-80	F250 F350	ΔII	8ft		
81-97 F350 All 8ft A7727 X 81-97 F250 (1997 is square body) All 8ft A7703 (1) 99-04 F250,F350 (Super Duty with Factory Bed) All 8ft A7703 (1) 05-07 F250,F350 (Super Duty with Factory Bed) All 8ft A7703 (1) 10-14 F150 Extended, Crew 6.5ft A7726 X 10-14 F150 Extended, Crew 6.5ft A7726 X 10-14 F150 Extended, Crew 6.5ft A7726 X 10-13 E250,F350,F450 (Super Duty with Factory Bed) All 8ft A7728 (2) X 10-13 E250,E350 Van A7729 X All E450 RV A7740 (2) X CHEVY/GMC CHEVY/GMC Crew 6.5ft A7730 X 10-107 2500HD Crew 6.5ft A7730 X 10-107 2500,3500 Extended, Crew 8ft A7730 X 11-14 2500,3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X 10-108 2500,3500HD All (no regular cab) 8ft A7740 X 10-118 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Crew 8ft A7740 X	70 00	1200,1000	7.11	OIL .		X
Rate	81-97	F350	All	8ft	` '	
Star	0.0.	1.000	7	0.1		X
A7727 X A7733 (1) A7733 (1) A7733 (1) A7734 (1) A7734 (1) A7734 (1) A7734 (1) A7735 (1) A7737 (1) A7737 (1) A7737 (1) A7737 (1) A7737 (1) A7737 (1) A7737 (1) A7738 (1) A7739 (1)	81-97		ΔII	8ft	A7703 (1)	
99-04 (Super Duty with Factory Bed) All 8ft A7727 X	01-37	(1997 is square body)	All	Oit	A7727	X
Super Duty with Factory Bed A7727 X	00.04	F250,F350		0.0	A7703 (1)	
O5-07 (Super Duty with Factory Bed) All 8ft A7727 X	99-04	(Super Duty with Factory Bed)	All	811	A7727	X
O5-07		F250 F350			A7703 (1)	
08-16	05-07		All	8ft	A7727	Х
OB-16	10-14	F150	Extended, Crew	6.5ft	A7726	X
All E450 RV A7740 (2) X CHEVY/GMC 01-07 2500HD Crew 6.5ft A7730 X 01-07 2500HD, 3500 Extended, Crew 8ft A7730 X 07-10 2500, 3500 Crew 6.5ft A7730 X 07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500 Description Mega 6.5ft A7740 X 10-16 2500,3500 Rega 6.5ft A7740 X Mega 6.5ft A7740 X	08-16		All	8ft	A7728 (2)	Х
CHEVY/GMC 01-07 2500HD Crew 6.5ft A7730 X 01-07 2500HD, 3500 Extended, Crew 8ft A7730 X 07-10 2500, 3500 Crew 6.5ft A7730 X 07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	05-13	E250, E350	Van		A7729	X
01-07 2500HD Crew 6.5ft A7730 X 01-07 2500HD, 3500 Extended, Crew 8ft A7730 X 07-10 2500, 3500 Crew 6.5ft A7730 X 07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	All	E450	RV		A7740 (2)	X
01-07 2500HD, 3500 Extended, Crew 8ft A7730 X 07-10 2500, 3500 Crew 6.5ft A7730 X 07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	CHEVY/GMC					
07-10 2500, 3500 Crew 6.5ft A7730 X 07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	01-07	2500HD	Crew	6.5ft	A7730	X
07-10 2500, 3500 Extended, Crew 8ft A7730 X 11-14 2500, 3500 Extended, Crew 8ft A7732 X 15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	01-07	2500HD, 3500	Extended, Crew	8ft	A7730	X
11-14	07-10	2500, 3500	Crew	6.5ft	A7730	X
15-16 3500 Crew 8ft A7732 X DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	07-10	2500, 3500	Extended, Crew	8ft	A7730	X
DODGE 94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	11-14	2500, 3500	Extended, Crew	8ft	A7732	
94-02 1500,2500,3500 All (no regular cab) 8ft A7742 X 03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	15-16	3500	Crew	8ft	A7732	X
03-09 2500,3500HD Quad 8ft A7740 X 06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	DODGE					
06-09 2500,3500HD Mega 6.5ft A7740 X 10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	94-02	1500,2500,3500	,			
10-16 2500,3500 Crew 8ft A7740 X 10-12 2500,3500 Mega 6.5ft A7740 X	03-09	2500,3500HD	Quad	8ft	A7740	X
10-12 2500,3500 Mega 6.5ft A7740 X					-	
· · · · · · · · · · · · · · · · · · ·		•				
2016 3500 Reg 8ft A7740 X						
	2016	3500	Reg	8ft	A7740	X

HiddenPower Footnotes:

- 1. Battery box not included
- 2. Not compatible with Tie Down part# F2016A

POWER ARMOR



The PowerArmor locking battery box prevents common and expensive storage/battery theft (lock included). Maintains charge increasing the longevity of the batteries up to 400% to avoid premature battery replacement (solar only). Dual use for securing batteries and other gear. Bolts to your RV, camper bumper, truck, van, etc. Heavy gauge diamond plate aluminum for maximum durability. Designed specifically to access RV batteries avoiding interference with your RV. Comes in bright tread diamond plate featuring black high impact powder coat frame. Adjustable dividers for custom size compartment storage (PowerArmor Max only).

POWERARMOR - Locking Battery Box	MFG PART#
26.5" PowerArmor DH (6 volt and 12 volt) bright tread diamond plate and black trim	A7708R
26.5" PowerArmor DH Solar (6 volt and 12 volt) bright tread diamond plate and black trim	A7708RS
58.5" PowerArmor MAX (6 volt and 12 volt) bright tread diamond plate and black trim	A7710R
58.5" PowerArmor MAX Solar (6 volt and 12 volt) bright tread diamond plate and black trim	A7710RS
24" PowerArmor (6 volt and 12 volt) bright tread diamond plate and black trim	A7712R
24" PowerArmor Solar (6 volt and 12 volt) bright tread diamond plate and black	A7712RS
17 3/4" PowerArmor Single (6 volt and 12 volt) bright tread diamond plate and black	A7720R
17 3/4" PowerArmor Single Solar (6 volt and 12 volt) bright tread diamond plate and black	A7720RS

ver Extension Battery Mount

ExtendedPower mounts onto any hitch receiver extension

KTENDEDPOWER - Receiver Extension Battery Mount	MFG PART#	Part#
ktendedPower for SuperTruss Dual Tube Extensions (Includes single Group 24 Battery Box)	A7736	69-9917
tendedPower for 2" Single Tube Aftermarket Extensions (Includes single Group 24 Battery Box)	A7735	55-2580




EXT



GLOWSTEP REVOLUTION THE ULTIMATE STEP SYSTEM

GLOWSTEP REVOLUTION ACCESSORIES AND FITMENT

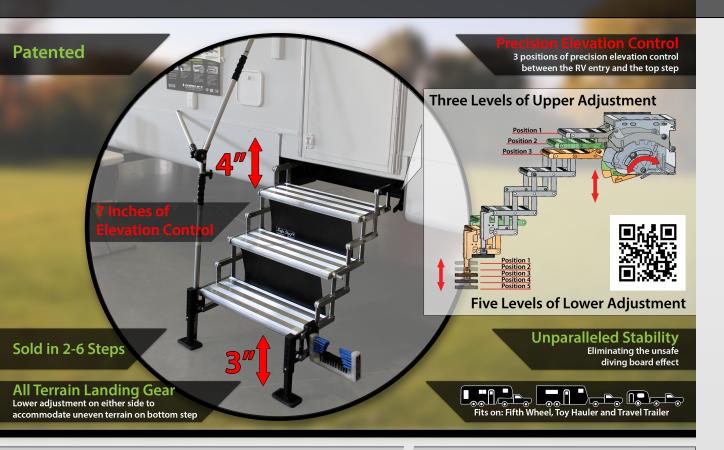



- Only RV step system with patented 7 inches of vertical precision elevation adjustment
- · Direct bolt-on installation easily replaces your factory step system
- Earth to RV: Brings step to ground level eliminating diving board effect (No more unsafe booster step)
- · Landing gear quickly levels on uneven terrain
- The 7.5-inch step riser height accommodates those with limited mobility
- The multi-link hinge design easily extends to accommodate tight space constraints
- · Step system accessories: Handrail, pet safety barriers and shoe cleaning attachment
- Made from 100% lightweight aircraft grade aluminum and stainless steel (rust free)
- Self-illuminating steps glow in the dark for up to ten hours with only five minutes of light exposure - no batteries
- Legendary Lifetime Warranty
- · Legacy step system: With the ability to add or remove steps, take the GlowStep Revolution with you when you trade in for your next RV

CHOOSE YOUR ACCESSORIES (sold separately)

GlowGuide Handrail



Dirt Destroyer Shoe Cleaner



SafeStep Pet Safety Barrier



A7602

A7603

SafeStep Pet Safety Barrier

Dirt Destroyer Shoe Cleaner

GlowGuide Handrail



- · Allows for safe entry and exit of RV
- Ultra lightweight (44 ounces)
- Glows for up to 10 hours
- From in-use to storage in seconds
- Handrail arms telescope from 32" to 53"
- Locks to your RV
- Scissor step not included

Dirt Destroyer Shoe Cleaner




- Easy way to prevent muddy RV interior
- Quick clip on and off tool free design
- Easy to clean

SafeStep Pet Safety Barrier



- Barrier prevents injury from falling through open steps for children and pets
- Stays attached to steps in the stored position
- Velcro attachment
- Can be used with most steps
- UV protected for outdoor use
- Durable construction

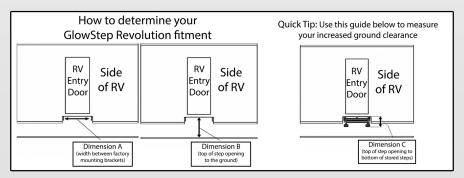

GlowStep Revolution							
MFG#	Description		Dimension A (in)	Dimension B (in)	Dimension C (in)	Max Capacity	Foot- notes
A8001	27.5" Add-A-Step (For A8002-A8005)	N/A	N/A	N/A	N/A	N/A	†, ††
A8002	27.5" Two Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	27.5"	18.5" to 24"	11.5" to 12.5"	375	†††
A8003	27.5" Three Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	27.5"	25.5" to 32"	13.75" to 14.75"	375	†††
A8004	27.5" Four Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	27.5"	32.5" to 40"	16" to 17"	375	†††
A8005	27.5" Five Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	27.5"	39.5" to 48"	18.25" to 19.25"	375	†††
A8006	27.5" Six Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	27.5"	46.5" to 56"	20.5" to 21.5"	375	†††
A8101	25.5" Add-A-Step (For A8102-A8105)	N/A	N/A	N/A	N/A	N/A	†, ††
A8102	25.5" Two Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	25.5"	18.5" to 24"	11.5" to 12.5"	325	†††
A8103	25.5" Three Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	25.5"	25.5" to 32"	13.75" to 14.75"	325	†††
A8104	25.5" Four Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	25.5"	32.5" to 40"	16" to 17"	325	†††
A8105	25.5" Five Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	25.5"	39.5" to 48"	18.25" to 19.25"	325	†††
A8106	25.5" Six Step GlowStep Revolution	8" DEEP GLOWSTEPS WITH 22" STEP WIDTH - includes All Terrain Landing Gear	25.5"	46.5" to 56"	20.5" to 21.5"	325	†††
		GlowStep Revolution Accessories					
MFG#	Description Footnotes ClawCuide Handreil Lload for Science Stone on truck compare and PM Materbage Stone † Do not use Add-A-Step Kit to convert a six-step to a						
A7621	GlowGuide Handrail	Used for Scissor Steps on truck campers and RV Motorhome Steps	T Do not u	ise Add-A-S	step Kit to conv	ert a six-s	step to

Used for Scissor Steps on truck campers and RV Motorhome Steps

Step riser safety panels

Shoe cleaning attachment

seven-step. Contact Torklift for seven step options.

2-4step MAX CAP 350lbs / 5-6 MAX CAP 300lbs.

†† All Terrain Landing Gear not included. ††† With use of Torklift GlowGuide. Otherwise

NOTES NOTES





OVER 40 YEARS OF INNOVATION, QUALITY, SAFETY.

Torklift International - United States/Canada

1901 Fryar Ave Sumner, WA 98390

Phone: 800.246.8132

www.torklift.com

Torklift International - Australia

Phone: 1800 621 963

www.torklift.au

