

CONTOURE™

SPACE SAVER APPLIANCES

INSTALLATION INSTRUCTIONS

Model No.:RV-980B

Accessories

TRIM ASSEMBLY

DUCT BOTTOM

DUCT UPPER

SCREW A

SCREW B

NO.	PART NAME PART CODE	Q'TY
1	TRIM ASSEMBLY	1
2	DUCT BOTTOM	1
3	DUCT UPPER	1
4	SCREW A	8
5	SCREW B (For wood)	8

Size of installation shown as right sketch

W	H	D
Minimum	Minimum	Minimum
20"	13 3/8"	14 1/8"
(51cm)	(33.96cm)	(35.87cm)

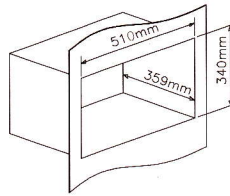


FIG.1

Step 1:
Please refer to the right sketch, draw the center line on the duct bottom of the cabinet.

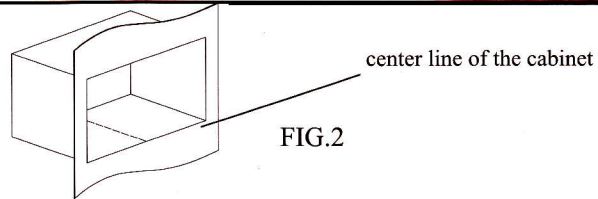


FIG.2

Step 2:
In order to fix the duct bottom in the central of the cabinet, please ensure the mark on the front brim at the front cabinet and it is parallel to the central line of the cabinet. Pls refer the right sketch. And fix with 4 screws B

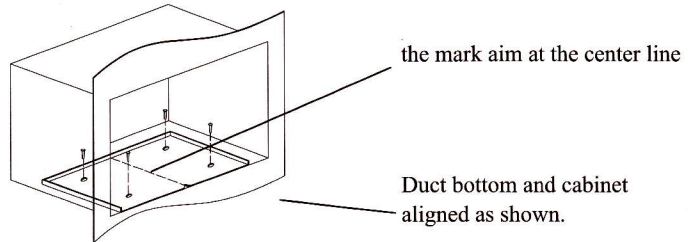


FIG.3

Step 3:
Take TRIM ASSEMBLY and check it.

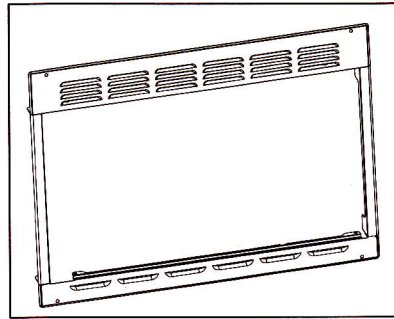


FIG.4

Step 4.
Fix TRIM ASSEMBLY to the Oven as shown in FIG.5.
Use 4 screws A to fasten the TRIM ASSEMBLY at points indicated in FIG.5

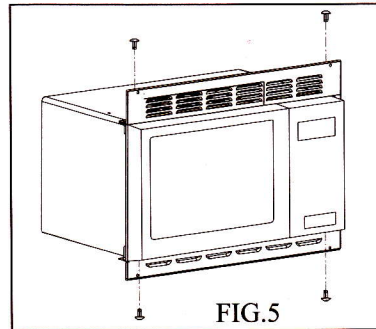


FIG.5

Step 5
Install the DUCT UPPER on the cover,
fixed with 4 screws A.

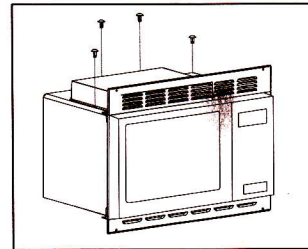


FIG.6

Step 6
Please push the Microwave Oven into the cabinet, then fix the TRIM ASSEMBLY to the Cabinet with 4 screws B.

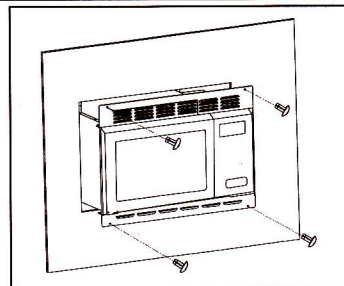


FIG.7