


## INSTALLATION INSTRUCTIONS

Model No.:RV-185B-CON

**Accessories**

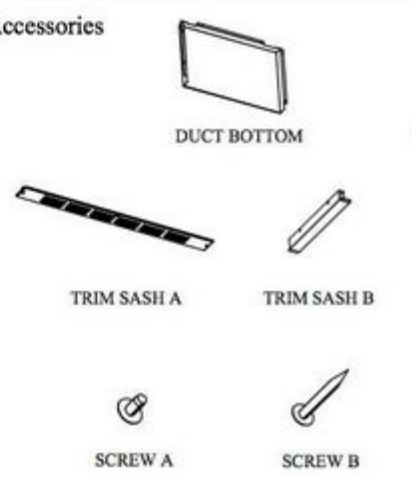

NO.	PART NAME	QTY
1	DUCT BOTTOM	1
2	DUCT UPPER	1
3	DUCT BACK	1
4	TRIM SASH A	2
5	TRIM SASH B	2
6	SCREW A	4
7	SCREW B	6

The dimension of the cabinet should be as belows (FIG.1).

Width : 22.44"(570mm) TOLERANCE  $\pm 1/8"$ .

Height : 15.14"(384.4mm) TOLERANCE  $\pm 1/12"$ .

Depth : at least 19.25" (488mm).

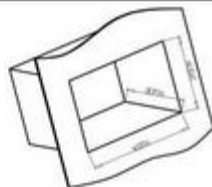


FIG.1

### Step 1.ASSEMBLE TRIM SASH

Take out the trim sash from the packing box, and make sure the trim sash A and B are the same showing as the FIG. 2.



FIG.2

### Step 2.CHECK THE TRIM SASH

Take out the microwave oven from packing box, please check the duct upper, duct bottom, duct back if assembled as the showing of FIG3, and fasten the screws.



FIG.3

### Step 3.TRIM SASH INSTALLATION

Fix assembled TRIM SASH ASSEMBLY to the Oven as shown in FIG.4.

Use SCREW A to fasten the TRIM SASH ASSEMBLY at points indicated in FIG.4.



FIG.4

### Step 4.MICROWAVE OVEN INSTALLATION

Slide Microwave Oven into the cabinet.

Secure the Oven to the cabinet with SCREW B at points indicated in FIG.5.



FIG.5