


# SEAT ADAPTOR KIT #88158 INSTALLATION INSTRUCTIONS



2892-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

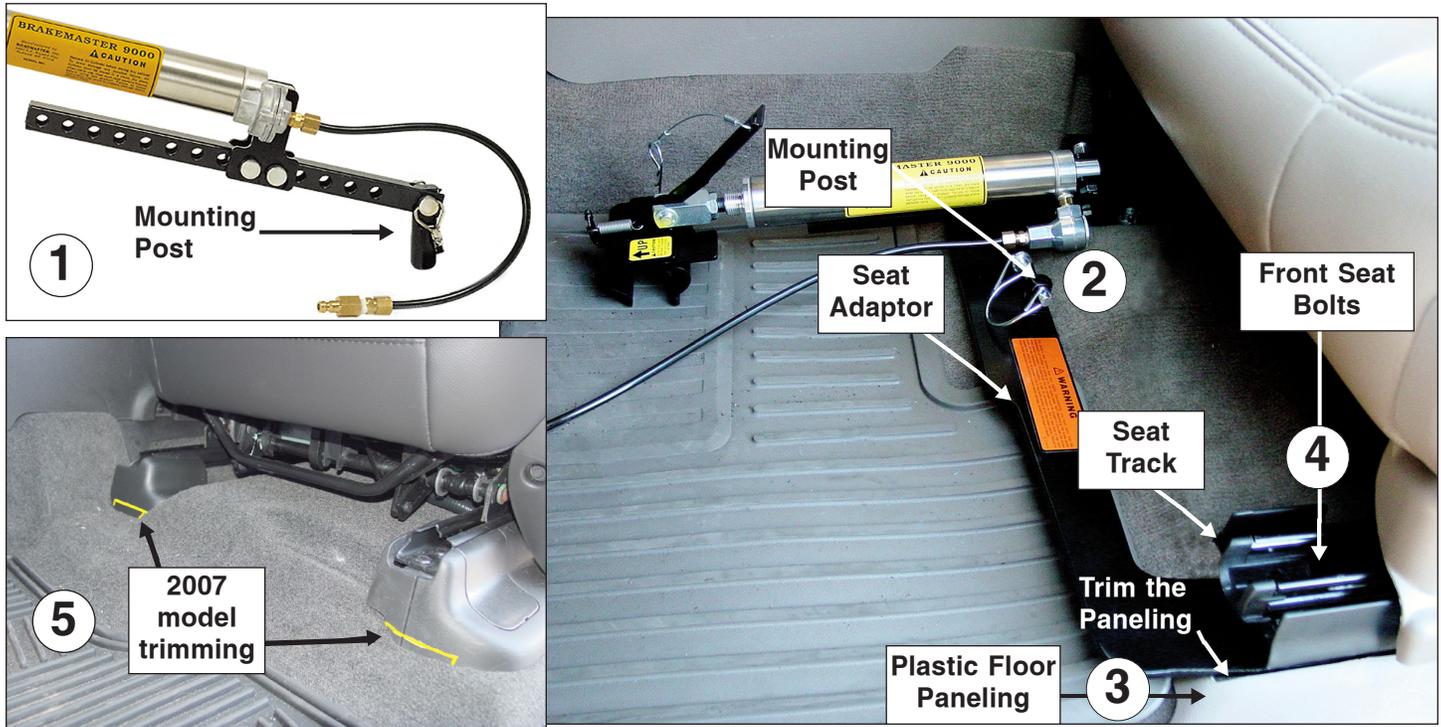

## Instructions

1. Secure the mounting post (Fig.1) to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If your seat adaptor has a countersunk hole, you must use the Allen head bolt and lock washer included with this kit.
2. Then, secure the mounting post to the center of the seat adaptor, using the included 3/4" x 3/8" bolt and 3/8" lock washer. Use an E20 Torx socket, or either a 15mm 6 pt. or 15mm 12 pt. socket. Remove the two front seat bolts (one on each side) that secure the seat to the seat track.
3. Trim the plastic floor paneling as indicated. *Note:* refer to figure 5 for trimming on the 2007 models.
4. Slide the seat adaptor in the seat track, over the front seat bolt holes, and reinstall the front seat bolts. Tighten.



*Note:* some 2008 models with adjustable pedals may not require the adjusting arm on the air cylinder (Fig.1). Instead, it will mount directly to the mounting post, as shown in Figure 6.

## Parts List

- (1) 3/8" Lock Washer
- (1) 3/4" x 3/8" Bolt



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.