


H271, H272, H274 - Similar  
Cabinet Door Supports

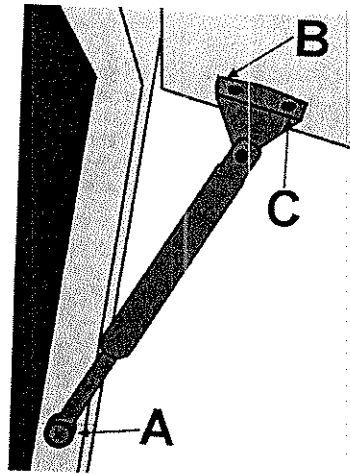

These instructions are performed from a position looking toward the cabinet door.

With the cabinet door removed or propped open, measure down from the inside top frame 5-1/2". Place a mark here and also mark the center of the frame inside. This is where the single hole in the Single eyelet of the strut is mounted. Place a single screw through the barrel hole and then attach to the cabinet frame where marked. This screw will not be tightened completely, since it is a pivot point for the strut. See Figure "A"

Next, turn the attachment flange so that the flush side is facing out. See Figure "B"

Now, lower the cabinet door until it reaches the desired angle. Move the mounting flange against the door keeping it as straight as possible so that it will not rub on the frame when closed. Mark the mounting holes in the center of their opening. See Figure "C"

It is easier to install the screws or drill a pilot hole before final mounting. Verify that the screws are short enough not to penetrate your cabinet door prior to installing. In some cases a smaller screw than was supplied may be needed.

Now mount the flange to the door and tighten. Test the closure to make sure nothing is rubbing and that the door closes completely. Make any adjustments needed at this time. In some cases a door may require 2 struts due to the weight of the door itself.