



MARINE/AUTO TETHER

Item# JSMT524

Owner's Manual & Warranty

Compatible with Weego

Jump Starter Battery+

JS6 STANDARD

JS12 HEAVY DUTY



Weego is dedicated to providing the best possible service. To reach Weego Customer Support, visit
myweego.com/support

Learn About Your Weego Marine/Auto Tether!

The Weego Marine/Auto Tether gives you easy jump-start access to your vehicle's hard-to-reach battery. It's compatible with our **Standard (JS6)** and **Heavy Duty (JS12)** jump starters. It even includes an SAE adapter for trickle charging!

Before Getting Started

Always take caution when connecting anything to your battery. Ensure live wires never come in contact with one another! In addition, always read the instructions to any device you're connecting to your vehicle through the Marine/Auto Tether.



Ready, Get Set, Weego!

ASSEMBLY

1. Connect the **BLACK** tether to your vehicle's negative (-) battery terminal; then, connect the **RED** tether to your vehicle's positive (+) battery terminal.
2. Route the tether to the body of the vehicle so the blue jump start connector is easily accessible. When not in use, keep your SAE

adapter capped and attached to the jump start connector for weatherization purposes.


JUMP STARTING

Simply detach the SAE adapter (1) and attach the exposed jump start connector to your Weego Jump Starter (2). Always follow the jump starting instructions provided by Weego!

1. Detach SAE Adapter to expose BLUE Jump Start Connector



2. Attach BLUE Jump Start Connector to Weego

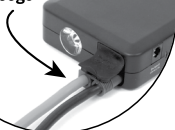

SAE Adapter

Trickle Charger

TRICKLE CHARGING

With the SAE adapter connected to the tether, simply remove the weatherproof cap and connect to your trickle charger.

NOTE: You cannot use your Weego Jump Starter to trickle charge, you need a separate device.



Keep in Mind . . .

There is an in-line, 400AMP fuse on the Marine/Auto Tether; this protects your battery and the Weego jump starter from a power surge. Keep in mind **the SAE adapter is for trickle charging only; you cannot power any 12V devices through the SAE adapter.**



Warnings

- **Make sure all connections are securely fitted, and that the tether is securely attached to your vehicle.**
- **DO NOT** leave the blue jump start connector exposed to elements. Always leave the SAE adapter attached for weatherization purposes.
- **DO NOT** jump start your vehicle or use the SAE adapter if any moisture is present on either port.
- **DO NOT** continue use of the Marine/Auto Tether if there is any sign of damage to the tether.
- **For 12V LEAD ACID batteries ONLY**

EXIT

Visit myweego.com to learn more about other Weego products and accessories, yadda yadda. . .

CRAZY LONG 18-MONTH WARRANTY

For warranty service, contact myweego.com/support.

DO NOT return product to your retailer.

WHAT THIS WARRANTY COVERS: PARIS CORPORATION ("Paris") sells its products with the intent that they are free of defects in material and workmanship under normal use and service for a period of 18 months from the date of original purchase, except as noted below.

This warranty extends only to consumers and specifically does not extend to Retailers, sellers or their agents or employees. Paris does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate Paris in any way beyond the terms set forth herein.

This warranty does not cover damage caused by misuse or abuse; accident; alteration to the product; attachment of any unauthorized accessory; improper use of an electrical/power supply that causes malfunction; loss of power; dropped or crushed product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; tampering with or attempt to modify the product; unauthorized opening of the product; transportation damage; theft; neglect; vandalism; environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of Paris.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adaptations to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of Paris.

Paris shall not in any way be liable to you or any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device, equipment or accessory other than the appropriate device or equipment for which this product is designed. Paris will not be responsible for any damages you or any third party may suffer as a result of misuse of this product outlined above. If you are responsible for this product's use with any unintended device and damages result from such use, you agree to indemnify Paris for any resulting injuries to any third parties.

WHAT WE WILL DO TO CORRECT DEFECTIVE PRODUCT: If Paris determines that a returned product has a defect in manufacture or workmanship under normal use, Paris will, at its sole discretion, repair or replace the defective part or parts, or if necessary, provide a like or comparable product from its product line. Paris will repair or replace the defective product free of charge and return the product to the stated consumer's US address only, free of charge. If replacement parts for defective materials are not available, Paris reserves the right to make comparable product substitutions in lieu of repair or replacement. No refunds will be given. If Paris determines that the product is not defective, it will return the product to the consumer at the consumer's expense.

HOW DO YOU GET SERVICE: To obtain warranty service, contact our Weego Customer Support Specialist:

by email: support@myweego.com

via online: myweego.com/support

Do not return product for warranty service to your Retailer. The Specialist will provide direction on how to return the defective product for service. Paris must be notified of claim within warranty period and in writing. Paris must receive product within 10 days after consumer notified Paris of a possible claim.

REMEDIES: The warranty provided herein shall be the sole and exclusive warranty. There shall be no other warranties express or implied, or any other obligation on the part of the company with respect to products covered by this warranty. Paris shall have no liability for any incidental, consequential or special damages. In no event shall this warranty require more than the repair or replacement of any part or parts which are found to be defective within the effective period of the warranty.

HOW STATE LAW MAY RELATE TO THE WARRANTY: This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.



If you want to actually read this warranty in a normal font size, visit myweego.com/warranty

WEEGO WHERE YOU GO



facebook.com/myweego



youtube.com/myweego



[@myweego](https://twitter.com/myweego)



[@myweego](https://instagram.com/myweego)