Hyundai Santa Fe

Pin height - 15-3/8"


Centers - 21"

BOLT TORQUE SPECIFICATIONS

STANDARD BOLTS:			METRIC BOLTS:		
Size	Grade	Torque	Size	Torque	
5/16"	5	20 ft/lbs.	8mm	22 ft/lbs.	
0/011	_	05 4/11			

3/8" 5 35 ft/lbs. 10mm 42 ft/lbs. 7/16" 5 56 ft/lbs. 12mm 70 ft/lbs. 1/2" 5 85 ft/lbs. 14mm 95 ft/lbs.



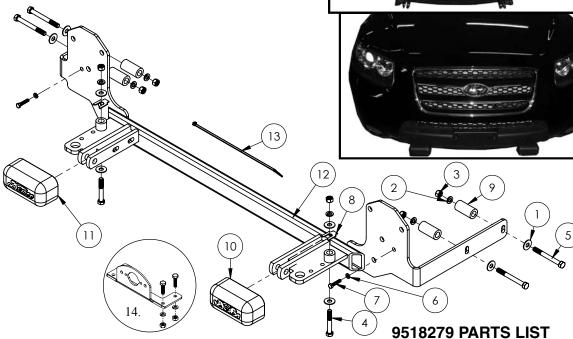

REF.	PART		
NO.	NO.	QTY.	DESCRIPTION
1.	00059	8	3/8" Flat Washer
2.	00060	6	3/8" Lock Washer
3.	00061	6	3/8" NC Hex Nut
4.	00082	2	3/8" NC x 2-1/2" Hex Bolt GR. 5
5.	01903	4	3/8" NC x 3-1/2" Hex Bolt GR. 5
6.	07596	2	6mm Lock Washer
7.	07927	2	6 mm-1.00 X 30mm Hex Bolt GR.8.8
8.	10280	2	1/16" Shim
9.	10689-95	4	Frame Spacer
10.	12979	1	Pull Ear Cover "A"
11.	12980	1	Pull Ear Cover "B"
12.	13771-35	1	Baseplate Cross member
13.	NHT11	1	11" Nylon Hose Tie
14.	5937	1	Plug Mount Kit
15.	12329	1	Loctite (not shown)
16.	02196	2	Self Tap Screw (not shown)

Please order replacement parts by PART NO. and DESCRIPTION.

ASSEMBLY OPERATION REPLACEMENT PARTS

READ complete manual CAREFULLY BEFORE attempting operation.

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN LOSS OF TOWING VEHICLE CONTROL, SEPARATION OF THE TOW BAR FROM THE TOWING VEHICLE, SEPARATION OF THE TOWED VEHICLE FROM THE TOW BAR, CAUSING SEVERE PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE.

A CAUTION

Safety is of utmost importance at all times. There are several items that must be checked each time <u>before</u> using and <u>while</u> using a tow bar. Before allowing anyone to hook up or operate a tow bar, be sure they have read and understand the proper operating procedure.

DO NOT use worn or damaged cables and/or pins.

Be sure the **SAFETY CABLES** are hooked, chassis to chassis, to both the towing and towed vehicles using the crisscross method.

Check clearance between vehicles in a turning situation.

Check base plate mounting bolts for tightness and frame for metal fatigue.

Do not load the towed vehicle with anything as you may exceed the towing capacity of the tow bar.

Keep fingers away from pivot points to prevent personal injury.

Be sure the steering components of the towed vehicle are properly aligned.


NOTE: This unit can be backed up in moderate increments. Any severe backwards cornering could result in damage to the Tow Bar and/or towed vehicle chassis.

For automatic transmissions: Consult your vehicle owners manual for towing suitability with the drive shaft connected. Otherwise, the towed vehicle will have to be equipped with a transmission pump or drive shaft disconnect.

Check to make sure that all lights are in proper working order.

The information on towability of vehicles is reprinted with permission of MotorHome® Magazine, and is believed to be reliable. However, Demco does not warrant the information to be correct. Always consult your towed vehicle owner's manual and follow towing instructions. Each year, MotorHome® Magazine, compiles a list of vehicles that can be towed four-down behind a motorhome with no modifications required. This guide contains only those vehicles that have been approved by their manufacturers for towing. This list is enclosed with this manual.

Caution: MotorHome® Magazine left out any vehicles that have towing speed limits slower than 55 m.p.h., or distance limits of less than 200 miles. At a minimum, these vehicles require significant modification, such as the use of an aftermarket product, to make them towable. The availability of a Demco Tow Bar Base Plate does not imply that these vehicles can be modified or that there is an aftermarket product available. Refer to your vehicle owner's manual or consult your dealer to determine whether your vehicle can be modified to make it towable. Failure to observe this precaution could result in property damage or personal injury.

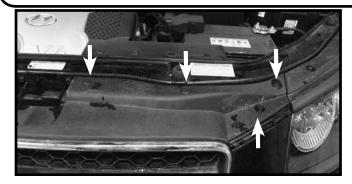

1. Open hood and remove three plastic push fasteners and one bolt on each side of the hood latch.

IMPORTANT INSTALLATION ITEMS

DEMCO products and accessories are intended to be installed by professional installers with experience, proper equipment and the ability to do modification work. Installers with these qualifications can be found in RV and Automotive Service Centers.

If the car to be towed has been in an accident, the chassis may be damaged in an area where the Base Plate attaches. It may no longer be suitable for towing. Extreme caution and careful examination are required in such a situation. It is also likely, even from a minor accident, that the hole alignment will be more difficult due to hole alignment problems.

Many DEMCO Base Plates are designed to use existing holes and hardware to mount the Base Plate to the towed vehicle. Even though the bolt is there, however, do not assume it is adequate for mounting the Base Plate. Manufacturers make many changes in hardware both within and between model years. Be sure the bolt is long enough to protrude past the nut a distance no less than 1/2 the diameter of the bolt, after the Base Plate is mounted. The threads should be in good condition. We require that "LOCTITE" Blue" be used on all bolts. If a new bolt is required, be sure it is SAE Grade 5 or Metric 8.8.

NOTE: The dimensional variations between otherwise identical vehicles can be considerable. Some minor modifications may have to be made to ensure a proper fit.

INSTALLATION INSTRUCTIONS




2. Remove three plastic push fasteners from the bottom of the facia.



3. Remove two plastic push fasteners from each side of the front of the fender well.


IF COOLER LINE LOOKS LIKE PICTURE BE-LOW CONTINUE ON WITH INSTRUCTIONS ON LEFT SIDE OF REMAINING PAGES

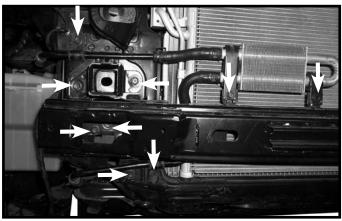

5. Remove the four bolts from the cooler and lines then remove the five bolts on the bumper on each side and remove the bumper. Note: the 6mm bolt removed from the center of the bumper will not be reused.




6. Remove the one bolt that holds the mount and temp sensor and attach it with the zip tie provided to the cooler mount above its location.;

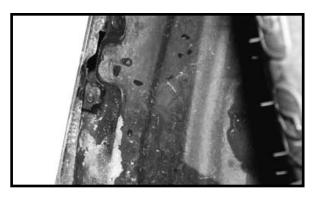


4. Remove the screw that attaches the fender to the facia. Unplug the fog lights if equipped and remove the facia by pulling firmly on each side and pulling forward.


IF COOLER LINE LOOKS LIKE PICTURE BE-LOW CONTINUE ON WITH INSTRUCTIONS ON RIGHT SIDE OF REMAINING PAGES

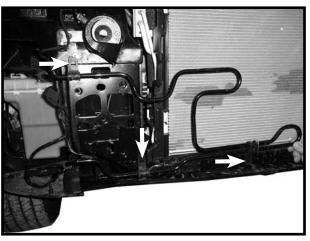


5. Remove the three bolts from the cooler lines then remove the five bolts on the bumper on each side and remove the bumper. Note: the 6mm bolt removed from the center of the bumper will not be reused.

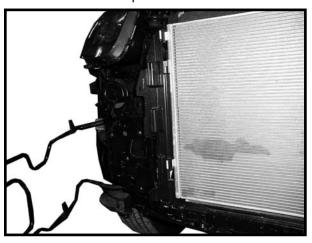


6. Remove air deflectors from both sides of radiator.

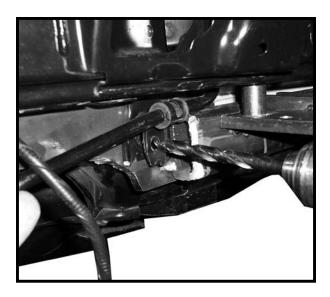

7. Move the clamp over the larger hole for the bottom of the bumper mount and with a 3/8" drill the hole for the bottom cooler line mount.

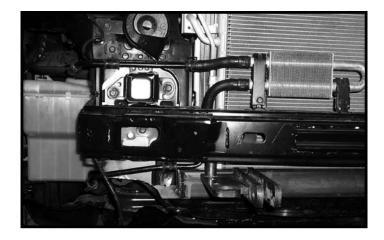


8. Replace the bumper with the baseplate behind the bumper. Use the 6mm x 30mm bolt to align the baseplate and reinstall the factory bolts. Reinstall the cooler with the factory bolts as well. NOTE: Use blue LOCTITE® on all bolts and tighten all bolts according to chart on front page.

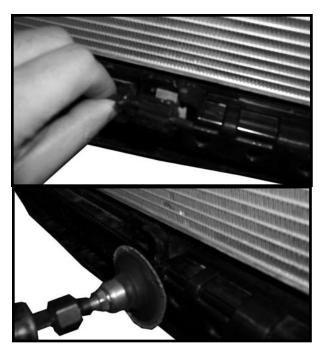


7. Remove temp. sensor and grind bracket flush.



8. Grind off plastic from radiator bracket as marked in picture.

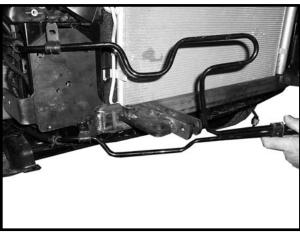


9. Install baseplate using one bolt per side. Stretch cooler lines over pullears as shown in picture. **NOTE:** Use blue **LOCTITE**® on all bolts and tighten all bolts according to chart on front page.

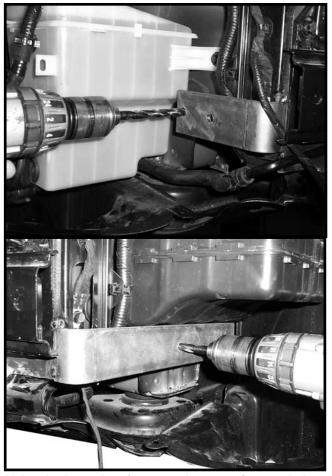


9. Using the baseplate for a template transfer punch the two holes on each side to the frame and allow enough room on the back side of the frame for a nut and drill 13/32. Place the 3/8" x 3-1/2" with 3/8" flat washer, 3/8" lock washer and 3/8" nut on the inside. NOTE: Use blue LOCTITE® on all bolts and tighten all bolts according to chart on front page.



10. Using the baseplate as a template use a 13/32" drill bit to drill holes in the bottom of the bumper. Place the 3/8" x 2-1/2" bolt with two 3/8" flat washers, one 3/8" lock washer and one 3/8" nut on each side. The shim may be needed between bumper and tube. NOTE: Use blue LOCTITE on all bolts and tighten all bolts according to chart on front page.

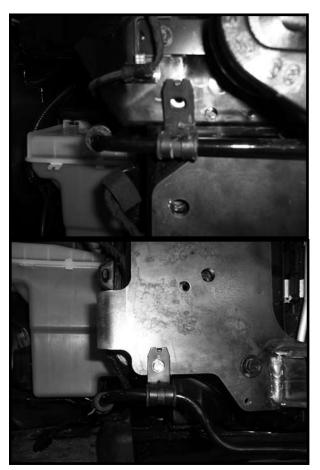

10. Move top tab of cooler line so it can be reinstalled in original hole as shown in top picture. Move bottom left tab as shown in picture and drill 1/4" hole and fasten with supplied self tapping screw.

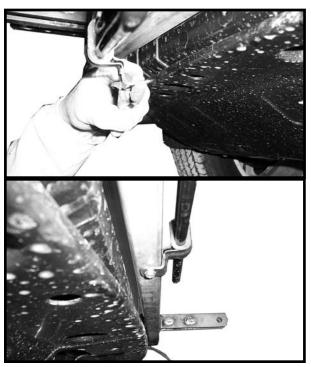

11. Bend remaining cooler tab as shown in top picture. Fasten tab to baseplate as shown in picture by drilling 1/4" hole and fasten with supplied self tapping screw.




11. Test fit the facia. The bottom lip of the hole that the baseplate protrudes through may need to be trimmed slightly. Trim to desired fit and look.


12. Replace the bumper with the baseplate behind the bumper. Use the 6mm x 30mm bolt to align the baseplate and reinstall the factory bolts. NOTE: Use blue LOCTITE on all bolts and tighten all bolts according to chart on front page.



12. Due to vehicle differences the facia may not fit properly over the bumper if this happens remove the foam insert on the back of the facia.

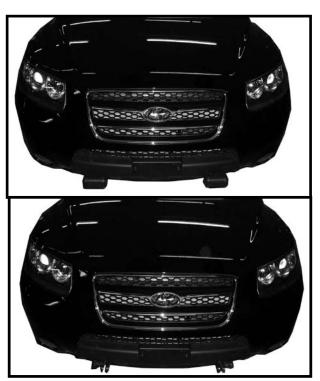


- **13.** Reinstall foam bumper cover, hardware and facia in reverse order as removed. Plug in fog lights if equipped.
- **14.** Plug mount (item #14) may be installed if desired in convenience holes on either chain anchor or as desired. **NOTE:** Excess material may be trimmed from bracket.

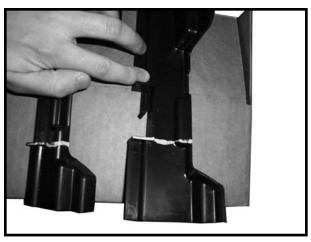

13. Cut lower portion of air deflectors as shown by line in picture. Reinstall air defectors.



14. Use nylon tie to fasten temp. sensor to crossmember as shown in picture.

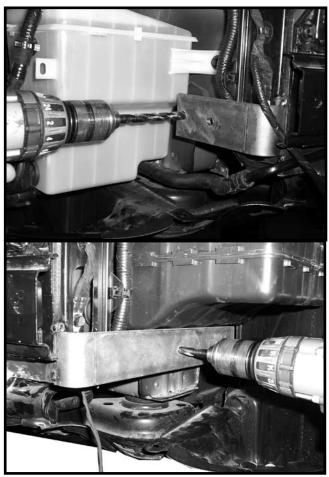

15. Using the baseplate for a template transfer punch the two holes on each side to the frame and allow enough room on the back side of the frame for a nut and drill 13/32. Place the 3/8" x 3-1/2" with 3/8" flat washer, 3/8" lock washer and 3/8" nut on the inside. **NOTE:** Use blue **LOCTITE** on all bolts and tighten all bolts according to chart on front page.




16. Using the baseplate as a template use a 13/32" drill bit to drill holes in the bottom of the bumper. Place the 3/8" x 2-1/2" bolt with two 3/8" flat washers, one 3/8" lock washer and one 3/8" nut on each side. The shim may be needed between bumper and tube. NOTE: Use blue LOCTITE on all bolts and tighten all bolts according to chart on front page.



17. Test fit the facia. The bottom lip of the hole that the baseplate protrudes through may need to be trimmed slightly. Trim to desired fit and look.



18. Due to vehicle differences the facia may not fit properly over the bumper if this happens remove the foam insert on the back of the facia.

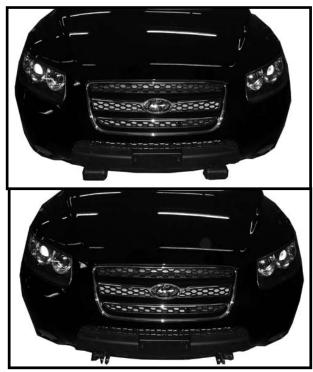

- **19.** Reinstall foam bumper cover, hardware and facia in reverse order as removed. Plug in fog lights if equipped.
- 20. Plug mount (item #14) may be installed if desired in convenience holes on either chain anchor or as desired. NOTE: Excess material may be trimmed from bracket.



Warranty Registration

Ag	\circ
RV	0
Rental	O
Brakes	0
Marine	O

4010 320th Street • Box 189 • Boyden, Iowa 51234 Toll Free 800-54DEMCO (800-543-3626) • FAX 800-845-6420 www.demco-products.com

	Very Satisfi		Dissatisfied	Very Dissatisfied					
How satisfied are you with our product?	0	0	0	О					
How satisfied are you with the dealership/distributor sales staff? Dealer/Distributor Name City	O	Sta	O ate	О					
How satisfied are you with the company sales staff?	О	О	О	0					
How satisfied are you with the delivery?	0	O	0	О					
Did you have any contact with a Demco Representative? If YES , how satisfied were you?	YES O	ON O	0	O					
I would recommend this product to my family and friends.	YES	S NO							
Would you purchase again from DEMCO?	YES	S NO							
Since taking delivery, have you been contacted by the dealer?	YES	S NO							
Did you have any problems with this DEMCO product? If YES , are you satisfied with the company's resolution of your prob	YES	S NO	О	O					
Please list the specific source of information prompting this purchase	se.								
After purchasing this product, do you see any needed product improvement? If yes, what improvement?									
What other products would you like to see DEMCO offer?									
Comments									
Owner's Name: Mailing Addre	?ss:								
City: State:	Zip C	ode:							
Model#:									
Serial #:									
Purchase Date:									
Owner's Signature:									

Please return to DEMCO By FAX or tri-folding this form to the backside, it is pre-addressed.

Postage

Demco 4010 320th Street, Box 189 Boyden, Iowa 51234

DEMCO PRODUCTS ORIGINAL PURCHASERS LIMITED WARRANTY

1. Extent and Duration of this Warranty:

Your Demco product has a Lifetime Limited warranty to be free from defects in materials and workmanship under normal use and service from date of purchase by the original (first) retail owner, or until it is resold or transferred by the original owner. Any part of the Demco product found in the judgement of the manufacturer to be defective in materials or workmanship will be repaired or replaced at the manufacturer's option without charge for parts or labor to the original owner.

2. Manufacturer and Warrantor:

Demco 4010 320th Street P.O. Box 189 Boyden, IA 51234 (712) 725-2311

3. Repair or Replacement Procedure:

If your Demco product develops a defect during the warranty period, promptly notify Demco customer service department. Until such notice is received, Warrantor will not be responsible for any repair or replacement.

Upon receipt of notice from you, Warrantor will have a choice of options in replacing any part it determines to be defective:

- a) Warrantor may require you at your own expense to deliver or ship the part to its factory or authorized dealer. Any defective part will be repaired or replaced and returned to you free of charge. Any part returned to Warrantor and found not to be defective will be returned to you freight collect with an explanation.
- b) Warrantor may elect to ship a new part to its dealer to be exchanged free of charge for the defective part returned by you to the dealer.
- Warrantor may elect to ship or deliver a replacement part to your address.

4. Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing the date and location of purchase, accompanies any claim for warranty. This warranty is limited to the original owner and is NON

TRANSFERABLE to a second party.

Warrantor has no liability whatsoever and this warranty is null and void if any Demco product has been misassembled or subjected to neglect, negligence, misuse, accident or operated in any way contrary to the operating and maintenance instructions as specified in the Demco Owner's Manual for that model.

This warranty does not cover any product that has been altered or modified so as to affect it's operation, performance or durability, or that has been modified to change the intended use of the product.

In addition, the warranty does not extend to repairs made necessary by normal use of parts, accessories or other equipment which in the judgment of Warrantor, are either incompatible with the Demco product, or affect its operation, performance or durability.

This warranty does not cover:

- 1) normal wear and tear
- 2) road film or gravel damage to paint
- 3) paint
- 4) rust damage

Warrantor has a policy of continuous product improvement. We reserve the right to change or improve the design of any Demco product, including but not limited to state of the art changes, without assuming any obligation to modify any product previously manufactured.

Warrantor assumes no responsibility to the owner for loss of use of the product, loss of time, inconvenience or other damage consequential or otherwise, including, but not limited to expense for gasoline, expense of transporting the product to the dealer and expense of returning the product, mechanic's travel time, telephone or telegram charges, road service/towing charges, rental of another product during the time warranty repairs are being performed, travel, lodging, loss or damage to personal property or loss of revenue or earnings.

5. Limitations of Implied Warranties:

All implied warranties, if any, expire and terminate upon expiration of this warranty. Some states do not allow limitation on how long an implied warranty lasts, so this limitation may not apply to you.

6. Limitation of Consequential Damages:

Warrantor's responsibility under this warranty extends solely to repair or replacement of your Demco product and its component parts.

Warrantor does not assume responsibility for, nor shall it be liable for, any special, incidental or consequential damages. Some states do not allow the exclusion or limitation on incidental or consequential damages, so the above exclusion or limitation may not apply to you.

7. Purchaser's Rights:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

8. Exclusive Warranty:

This is the only express warranty made by Demco on your Demco product and no agent, employee, or other person is allowed to change or add to this warranty.



4010 320th St., P.O. BOX 189, BOYDEN, IA. 51234 PH: (712) 725-2311 FAX: (712) 725-2380 or 1-800-845-6420 TOLL FREE: 1-800-54DEMCO (1-800-543-3626) www.demco-products.com