




Installation, Operation & Maintenance Manual

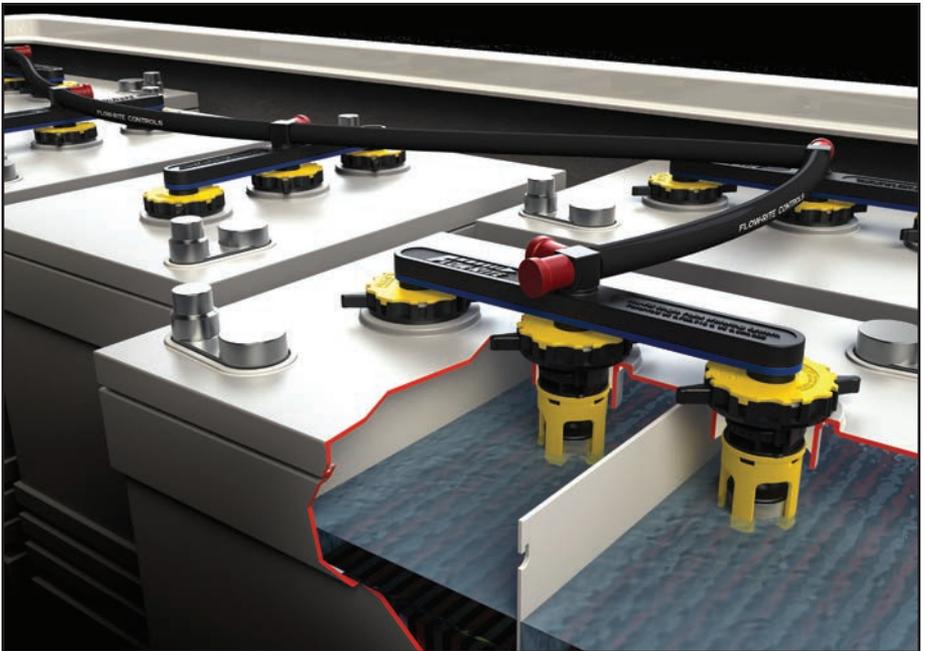

Picture may differ from your specific application

For Pro-Fill kits with part numbers beginning in “BG”

BL-175
9-20-13

General Information & Precautions

This publication provides detailed instructions for installing the single point watering system kit. Thoroughly review this document before any installation procedures are performed.



The following safety statements relate to specific safety issues and must be read, understood, and heeded before a kit is installed. Failure to do so could result in personal injury and/or property damage.

DANGER

- Battery – Explosive gases! Do not smoke. Keep sparks and flames away from the vehicle and service area. Ventilate when charging or operating vehicle in an enclosed space. Wear a full face shield and rubber gloves when working on or near batteries.
- Battery – Poison! Contains acid! Causes severe burns. Avoid contact with skin, eyes, or clothing.
Antidotes:
 - External: Flush with water. Call a physician immediately.
 - Internal: Drink large quantities of milk or water. Follow with milk of magnesia or vegetable oil. Call a physician immediately.
 - Eyes: Flush with water for 15 minutes. Call a physician immediately.

WARNING

- Follow the procedures exactly as stated in this instruction, and heed all DANGER, WARNING, and CAUTION statements in this instruction as well as those on the vehicle and battery charger.
- Only trained technicians should service or repair the single point watering system. Anyone doing even simple repairs or service should have knowledge and experience in plumbing, electrical and mechanical repair. The appropriate instructions must be used when performing maintenance, service, or accessory installation.
- Prior to servicing the vehicle or leaving the vehicle unattended, turn the key switch OFF, remove the key, and chock the wheels when servicing the vehicle.
- Wear safety glasses or approved eye protection when servicing any part of the watering system. Wear a full face shield and rubber gloves when working on or near batteries.
- Do not wear loose clothing or jewelry such as rings, watches, chains, etc., when servicing the vehicle or battery charger.
- Moving parts! Do not attempt to service the vehicle while it is running.
- Use insulated tools when working near batteries or electrical connections. Use extreme caution to avoid shorting of components or wiring.
- If wires are removed or replaced, make sure wiring and wire harness are properly routed and secured. Failure to properly route and secure wiring could result in vehicle malfunction, property damage, personal injury, or death.

Package Contents



8-volt manifold shown

<u>Kit Size</u>	<u>Qty of manifolds</u>
12 volt	2
24 volt	4
36 volt	6
48 volt	8 (6-volt manifolds)
48 volt	6 (8-volt manifolds)



Coupler & dust Cover:
Qty = 1



Red End Caps
Qty = 9



Tubing
Qty = Varies on Kit Size.
Golf kits include precut tubing

Note: pictures may differ slightly from your specific application

Installation

Step 1 - Remove Vent Caps and Insert Pro-Fill Manifold Assembly.



Step 2 - Press Manifold Home
- Ensure the rubber washer is correctly seated around the refill valve.



Step 3 - Secure Valves
- Rotate each valve 1/4 turn in a clockwise motion to secure it to the battery.



Step 4 -Install Tubing

Plumb all of the manifolds together with the included tubing. For precut kits, please see diagrams on the following page for proper tube routing . For universal kits, when cutting tubing ensure there is enough slack to create a slight bend in the tubing. Place the feed tube with coupler attached on a manifold that is near the middle of the plumbing so that water can be distributed to all batteries evenly.



Step 5 - Install Red Caps

- Place a red end cap on each of the remaining barbs.



Watering Procedures

1. Water After Charge

Electrolyte levels drop during discharge and rise during charge. In addition, charging generates heat, fluid expansion, and explosive gases. Watering a battery before charge (or with a low charge level) can lead to boil over, resulting in potential damage to the watering system, battery, and vehicle.

When needed, water must only be added to fully charged battery. If the battery has been neglected and water levels have fallen below the plates, water should be manually added to just cover the plates. After the battery has been charged you can finish topping up with the watering system.

2. Watering Intervals

Watering intervals are dependent on the local climate, charging methods, application, and age of batteries. Flow-Rite recommends checking consumption rates manually or with the optical indicator (when equipped). New batteries should be checked once a month and older batteries weekly until water consumption rates are known.

Typically for a heavy use application, watering a maximum of once per week is recommended, and for light use applications once per month. Do not water a battery that has been sitting for an extended period of time with no activity (non-use or not on charge) such as a battery that has sat idle over the weekend. It is best to water a warm battery that has just been fully charged.

Important: Water quality is important to maintain the life of your battery and watering system. Always use water that meets the quality requirements of your battery's manufacturer.

Operation

For successful operation of your Single Point Watering system always:

1. Only use Flow-Rite approved equipment.

Warning! Use of unapproved equipment or modification of approved equipment can lead to system failure and will void your warranty.

2. Always follow Flow-Rite's required watering procedures.
3. Perform regular scheduled maintenance!


Warning! Only fill batteries after they have been fully charged and require water.

Important: If you are using a hand pump, cart, or gravity feed water supply to fill your Millennium SPW™ system, please refer to their instructions for proper operation!

Step 1 - Qualify Water Supply

- Check flow rate through included purger by mating purger with hose end assembly. Verify that a minimum of 2 GPM (gallons per minute) is achieved. This can be measured with a bucket and a stop watch or a watch with a second hand.

Note: Should a 2 GPM flow rate not be produced refer to the troubleshooting guide in your water supply's instruction booklet.

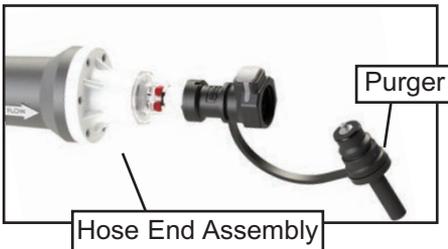

Step 2 - Remove Dust Cover



Operation Continued

Step 3 - Mate Couplers

- Insert the male coupler on the SPW system into the female coupler on the end of the water supply.



Step 4 - Observe Flow Indicator

- The red balls inside the flow indicator will begin to spin indicating that water is flowing into the battery. As the cells fill and the valves shut off, the balls will begin to spin slower until they come to a stop. This indicates that all valves have shut off and filling is complete.



Step 5 - Disconnect

- When the balls stop spinning, and not before, immediately disconnect the couplers by depressing the push button on the female coupler.



Warning! If the water supply is left connected after the filling process is finished, it could lead to an overflow.

Disconnecting before the balls come to a complete stop will lead to underfilled cells.

CAUTION: If at any time during the filling process you have a valve failure, disconnect immediately and refer to the troubleshooting section.

Step 6 - Replace Dust Cover

- Place dust cover back over the male coupler.



Regular Maintenance

Your single point watering system requires regular preventative maintenance on at least a quarterly basis.

1. Check all screens and/or filters on water supplies

Clean or replace all filters & line strainers as necessary. Failure to do so can cause a reduction in the water pressure and flow rates needed to operate the system properly. A filter screen can be found on the inlet of all regulators, and a line strainer on all supply hoses. Pump powered water supplies include a strainer on all suction hoses. For deionizers be sure to replace the filter cartridges as indicated by the water quality light. Consult your water supply's manual for detailed instructions.

2. Inspect the condition of all tubing, connections, and couplers.

Make sure that all parts are in good working condition and are secure, leak free, and properly connected. The coupler must have an O-ring and dust cover properly attached.

3. Electrolyte Levels

Flow-Rite recommends checking the electrolyte level in each cell for accuracy after the system has been installed and operational for three months.

Seasonal Maintenance

Water Supplies

Water supplies must be drained and stored in an empty state if they will be exposed to freezing temperatures. Failure to do so can cause permanent damage.

Watering Systems

If you have vehicles that are taken out of service or put into storage for a period of 6 weeks or longer, your single point watering system will require seasonal maintenance. To winterize the SPW system simply drain any remaining water from the feed tube. Additionally the following steps need to be followed when bringing your vehicle back into service.

1. After the batteries have been fully charged/equalized, connect the system to its water supply for 3-5 seconds then disconnect regardless of whether or not the batteries are completely full.
2. Return the vehicle back to normal operation.
3. Place the vehicle back into its regular watering schedule (waiting at least one week until next watering).

Operating Specifications

Operating Requirement of SPW system

Flow-Rate:	2.0-5.0 gallons per minute* 7.6-19.0 Litres per minute
Pressure Range:	3.0 - 35.0 PSI (no flow, static) 0.21-2.4 bar
Temp. Range:	Freezing - 150° F Freezing - 65.5° C

Water Supply Operating Requirements

Inlet Pressure Range	40-100 PSI (no flow, static)
Temp. Range	33 - 150° F 1 - 65.5° C

All product specifications and requirements should be met for proper operation of your Flow-Rite SPW system. Contact your battery supplier or Flow-Rite Controls if you have any questions regarding product specifications or how to verify a water supply.

*Flow rate should be measured at the end of a purger (female / male coupler combination).

Troubleshooting

If you notice reduced run time on your vehicle, check to see that each cell is filled to the proper level. In the event that a cell is not showing water, connect system to its water supply. Recheck the level of low cells. If they are still low, call for service.

In the event that a valve does not shut off, qualify water supply to ensure that it is producing 2GPM (measured through the purger). If the water supply qualifies, call for service. If it does not qualify, perform Maintenance procedures and requalify. If it does not qualify after performing Maintenance, call for service.

Warranty

5 Year Limited Warranty for Pro-Fill SPW

Flow-Rite Controls Warranty Policy for Millennium SPW Systems as used on flooded lead acid batteries

Flow-Rite Controls warrants to Purchaser that its product, the Pro-Fill Single Point Watering (SPW) kit, will be free of all defects in material and workmanship for five (5) years after the date of purchase. If within five years of the date of purchase, the Pro-Fill SPW kit, fails to perform due to a manufacturing defect, Flow-Rite Controls will repair or replace the Pro-Fill SPW kit free of charge.

A Return Goods Authorization Number (RGA) must be obtained from Flow-Rite Controls (through your Pro-Fill supplier) prior to returning product for warranty consideration. Purchaser must send any product covered under this warranty, along with a copy of supplier's invoice and description of the problem to: Flow-Rite Controls, 960 74th St SW, Byron Center, MI 49315.

Disclaimer of Warranties: It is expressly understood and agreed that Flow-Rite Controls shall not be liable for damages or injuries to persons or property. Failure to promptly report a malfunction in your system may limit your coverage. This limited warranty expressly excludes any incidental or consequential damages. Because Flow-Rite's warranty excludes any incidental or consequential damages, Flow Rite recommends for the first three months checking electrolyte levels once a month. Thereafter, check electrolyte level once per quarter.



Flow-Rite Controls
960 74th Street
Byron Center, MI 49315
PH: 616-583-1700 FAX: 616-878-5151
www.flow-rite.com