



LIPPERT COMPONENTS

**SLEEP EZ™ - HARD-SIDED EXPANDABLE
OPERATION MANUAL**




WARNING!

FAILURE TO ACT IN ACCORDANCE WITH THE FOLLOWING MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

The Sleep EZ™ Hard-sided Expandable is intended for the purpose of providing extra space in a unit for use as sitting or sleeping quarters. Its function should not be used for any other purpose or reason than which it is intended. To use the system for any reason other than what it is designed may result in damage to the coach and/or cause serious injury or even death.

Before operating the system, please keep these things in mind:

- 1. Parking locations should be clear of obstructions that may cause damage when the Sleep EZ™ is operated.**
- 2. Be sure all persons are clear of the coach prior to the Sleep EZ™ operation.**
- 3. Keep hands and other body parts away from hinges during actuation. Severe injury may result.**
- 4. To optimize Sleep EZ™ operation, park coach on solid and level ground and extend stabilizer jacks.**

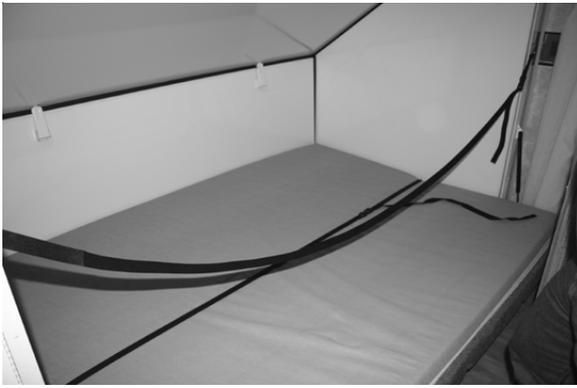

Sleep EZ™ Hardsided Expandable Room (view from the inside of the unit).



1. Unlock the first Cargo Vise (it doesn't matter what side is opened first).



2. Unlatch the Bar Lock and rotate it away from the Cargo Vise.



3. Unlock the second Cargo Vise and Bar Lock.



4. With one hand, lift and hold Sleep EZ™ Roof Panel. Roof Panel must be held high enough for the Sidewalls to clear it when they are opened (approximately one (1) foot above the outside edge). With the other hand, pull first Sidewall out.



5. Sidewall can then be released as the gas shock pushes the Sidewall to the full open position.



6. Next, pull the second Sidewall open while still holding Roof Panel above Sidewalls.



7. Set the Roof Panel down on top of the Sidewall Panels. Next, pull the Floor Panel down.



8. Set Floor Panel on Guide Rails on the inside bottom of the Sidewalls.



9. Flip the Endwall up to close off the room.



10. Secure both latches on the Endwall fastening the Roof Panel to the Endwall Panel.

NOTE: Inside latches must be secured prior to securing the outside latches.



11. Go back to the outside of the unit and secure the latches holding the Sidewalls to the Endwall.



REMINDER: Inside latches must be secured prior to securing the outside latches.



12. The cushion can now be laid flat for use as a bed.



13. Unhook the Safety Strap and the Sleep EZ™ is ready for use.

CLOSING PROCEDURE

Reverse all steps from the Opening Procedure.

NOTE: Sidewalls and Endwall must be wiped dry if the panels are significantly wet with rain, snow, dew or other forms of moisture.



LIPPERT COMPONENTS